

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Severin](#) /

› [SEVERIN 3-in-1 Microwave Oven MW 7752 User Manual](#)

Severin MW 7752

SEVERIN 3-in-1 Microwave Oven

MODEL: MW 7752 - USER MANUAL

1. Important Safety Instructions

Please read these instructions carefully before using the appliance and keep them for future reference. Always observe all safety notes.

- Do not operate the microwave oven if the door or door seals are damaged.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- The appliance must be earthed. Connect only to a properly installed earthed socket.
- Regularly clean the oven and remove any food deposits.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

2. Product Overview

The SEVERIN MW 7752 is a versatile 3-in-1 appliance combining microwave, grill, and hot air (convection) functions. It features an intuitive control panel and a non-stick pizza plate for optimal cooking results.



Front view of the SEVERIN MW 7752 microwave oven, showcasing its sleek black design and control panel.



Einfache und intuitive Anwendung für die ganze Familie.

Close-up of the control panel with LED display, buttons for various functions, and a rotary knob for settings. Features include 'Favorite Dish', 'Be Silent', and 'Easy Select' concept.



View of the microwave interior, highlighting the included non-stick pizza plate with a diameter of approximately 28 cm, ideal for pizzas.

SEVERIN

inkl. Pizza-Teller

LED-Touch Display



Einfache
Reinigung

8 Automatikprogramme
mit 10 Leistungsstufen

Diagram showing key features: included pizza plate, LED-Touch Display, 8 automatic programs with 10 power levels, and easy cleaning.

3. Setup

3.1 Unpacking

- Carefully remove the appliance from its packaging.
- Remove all packaging materials, including any protective film or tape.
- Check the appliance for any transport damage. Do not operate a damaged appliance.

3.2 Placement

- Place the microwave oven on a stable, level, heat-resistant surface.
- Ensure adequate ventilation around the appliance. Leave a minimum of 20 cm clearance above, 10 cm at the rear, and 5 cm on each side.
- Do not place the appliance near heat sources or in direct sunlight.

3.3 Initial Cleaning

- Before first use, wipe the interior and exterior of the appliance with a damp cloth.
- Wash the glass turntable and the pizza plate with warm soapy water.
- Ensure all parts are completely dry before plugging in the appliance.

3.4 Power Connection

- Plug the power cord into a properly installed and earthed wall socket (230 Volts).
- The display will light up, indicating the appliance is ready for use.

4. Operating Instructions

The SEVERIN MW 7752 offers multiple cooking functions for versatile meal preparation.

Vielseitig einsetzbar

**Backen und Zubereiten dank
Heißluftfunktion bis zu 200 °C,
inklusive Vorheizfunktion**



The microwave's hot air function allows for baking and preparing various dishes up to 200 °C, including a preheating function.

**8 Automatikprogramme
mit 10 Leistungsstufen**

Grill- und Heißluftfunktion



The appliance features 8 automatic programs and 10 power levels for precise cooking, along with grill and hot air functions.

SEVERIN



Einfaches Auftauen, Garen, Grillen und Backen von Speisen

The microwave simplifies defrosting, cooking, grilling, and baking a wide variety of foods.

4.1 Basic Microwave Operation

1. Place food in a microwave-safe container on the glass turntable.
2. Close the door securely.
3. Select the desired microwave power level (10 levels available) using the control knob or dedicated button.
4. Set the cooking time using the control knob.
5. Press the Start button to begin cooking.

4.2 Grill Function

Use the grill function for browning and crisping food. The grill power is 1950 Watts.

1. Place food on the grill rack (if provided) or a suitable heat-resistant dish.
2. Select the Grill function.
3. Set the desired grilling time.
4. Press Start.

4.3 Hot Air (Convection) Function

The hot air function (1950 Watts) allows for baking and roasting like a conventional oven, with temperatures up

to 200 0C.

1. Select the Hot Air function.
2. Set the desired temperature (up to 200 0C).
3. Use the preheating function if required for optimal baking results.
4. Once preheated, place food inside and set the cooking time.
5. Press Start.

4.4 Combination Modes

The appliance offers combination modes (e.g., Microwave + Grill, Microwave + Hot Air) for faster and more comprehensive cooking.

- Refer to the specific combination mode settings in the appliance's quick start guide or display menu.

4.5 Automatic Programs

The microwave includes 8 automatic programs for common dishes, simplifying cooking by pre-setting time and power.

- Select the desired automatic program from the menu.
- Follow the on-screen prompts, which may include entering food weight.
- Press Start.

4.6 Favorite Dish Function

Store up to three preferred cooking settings (power level and time) for quick recall.

1. Set the desired power level and cooking time for a dish.
2. Press and hold the 'Favorite Dish' button to save the setting to one of the three memory slots.
3. To recall, simply press the 'Favorite Dish' button and select the saved program.

4.7 Be Silent Function

This function allows you to disable acoustic signals (beeps) for quiet operation.

- Consult the control panel instructions for activating/deactivating the 'Be Silent' function.

4.8 Using the Pizza Plate

The included non-stick pizza plate (28 cm diameter) is perfect for achieving crispy pizzas.

- Place the pizza directly on the non-stick plate.
- Use the hot air or grill function for best results, following recipe guidelines.

5. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your appliance.

5.1 General Cleaning

- Always unplug the appliance before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the interior with a damp cloth and mild detergent. For stubborn stains, place a bowl of water with

lemon juice inside and microwave for a few minutes to loosen residue.

- The glass turntable and pizza plate can be washed by hand or in a dishwasher.
- Ensure all parts are dry before reassembling and using the appliance.

5.2 Odor Removal

- To remove odors, combine a cup of water with a few tablespoons of lemon juice or vinegar in a microwave-safe bowl.
- Microwave on high for 5-7 minutes. Let it stand for a few minutes before opening the door.
- Wipe the interior with a clean cloth.

6. Troubleshooting

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start	Not plugged in; Door not closed properly; Fuse blown.	Check power plug; Ensure door is securely latched; Check household fuse.
Food not heating evenly	Food not stirred or rotated; Incorrect power level/time.	Stir or rotate food during cooking; Adjust power and time settings.
Unusual noise during operation	Turntable not correctly placed; Foreign object inside.	Ensure turntable is seated correctly; Check for and remove any obstructions.
Oven light not working	Bulb needs replacement.	Contact customer service for bulb replacement.

If the problem persists after trying these solutions, please contact SEVERIN customer support.

7. Specifications

Feature	Detail
Brand	Severin
Model Number	MW 7752
Type	3-in-1 Microwave with Grill and Hot Air
Microwave Power	900 Watts
Grill Power	1950 Watts
Hot Air Power	1950 Watts
Capacity	25 Liters

Feature	Detail
Voltage	230 Volts
Product Dimensions (L x W x H)	43.5 x 48.3 x 28.1 cm
Product Weight	15.26 kg
Material	Stainless Steel (Interior)
Special Features	LED Touch Display, Favorite Dish Function, Be Silent Function, 8 Automatic Programs, 10 Power Levels, Non-stick Pizza Plate (Ø 28 cm)

8. Warranty and Support

SEVERIN products are manufactured to high quality standards and are backed by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official SEVERIN website.

For technical support, spare parts, or service inquiries, please contact your local SEVERIN service center or the retailer where you purchased the appliance. Always have your model number (MW 7752) and proof of purchase ready when contacting support.

You can find more information and contact details on the official SEVERIN website: www.severin.com

© 2024 SEVERIN. All rights reserved.

Related Documents - MW 7752

  <p>SEVERIN FRANCE 1971-2024</p> <p>SEVERIN MW 7752 / MW 7774 / MW 9550 / MW 9559</p> <ul style="list-style-type: none"> 01 SEVERIN Mikrowelle 02 SEVERIN Mikrowelle 03 SEVERIN Mikrowelle 04 SEVERIN Mikrowelle 05 SEVERIN Mikrowelle 06 SEVERIN Mikrowelle 07 SEVERIN Mikrowelle 08 SEVERIN Mikrowelle 09 SEVERIN Mikrowelle 10 SEVERIN Mikrowelle 11 SEVERIN Mikrowelle 12 SEVERIN Mikrowelle 13 SEVERIN Mikrowelle 14 SEVERIN Mikrowelle 15 SEVERIN Mikrowelle 16 SEVERIN Mikrowelle 17 SEVERIN Mikrowelle 18 SEVERIN Mikrowelle 19 SEVERIN Mikrowelle 20 SEVERIN Mikrowelle 21 SEVERIN Mikrowelle 22 SEVERIN Mikrowelle 23 SEVERIN Mikrowelle 24 SEVERIN Mikrowelle 25 SEVERIN Mikrowelle 26 SEVERIN Mikrowelle 27 SEVERIN Mikrowelle 28 SEVERIN Mikrowelle 29 SEVERIN Mikrowelle 30 SEVERIN Mikrowelle 31 SEVERIN Mikrowelle 32 SEVERIN Mikrowelle 33 SEVERIN Mikrowelle 34 SEVERIN Mikrowelle 35 SEVERIN Mikrowelle 36 SEVERIN Mikrowelle 37 SEVERIN Mikrowelle 38 SEVERIN Mikrowelle 39 SEVERIN Mikrowelle 40 SEVERIN Mikrowelle 41 SEVERIN Mikrowelle 42 SEVERIN Mikrowelle 43 SEVERIN Mikrowelle 44 SEVERIN Mikrowelle 45 SEVERIN Mikrowelle 46 SEVERIN Mikrowelle 47 SEVERIN Mikrowelle 48 SEVERIN Mikrowelle 49 SEVERIN Mikrowelle 50 SEVERIN Mikrowelle 51 SEVERIN Mikrowelle 52 SEVERIN Mikrowelle 53 SEVERIN Mikrowelle 54 SEVERIN Mikrowelle 55 SEVERIN Mikrowelle 56 SEVERIN Mikrowelle 57 SEVERIN Mikrowelle 58 SEVERIN Mikrowelle 59 SEVERIN Mikrowelle 60 SEVERIN Mikrowelle 61 SEVERIN Mikrowelle 62 SEVERIN Mikrowelle 63 SEVERIN Mikrowelle 64 SEVERIN Mikrowelle 65 SEVERIN Mikrowelle 66 SEVERIN Mikrowelle 67 SEVERIN Mikrowelle 68 SEVERIN Mikrowelle 69 SEVERIN Mikrowelle 70 SEVERIN Mikrowelle 71 SEVERIN Mikrowelle 72 SEVERIN Mikrowelle 73 SEVERIN Mikrowelle 74 SEVERIN Mikrowelle 75 SEVERIN Mikrowelle 76 SEVERIN Mikrowelle 77 SEVERIN Mikrowelle 78 SEVERIN Mikrowelle 79 SEVERIN Mikrowelle 80 SEVERIN Mikrowelle 81 SEVERIN Mikrowelle 82 SEVERIN Mikrowelle 83 SEVERIN Mikrowelle 84 SEVERIN Mikrowelle 85 SEVERIN Mikrowelle 86 SEVERIN Mikrowelle 87 SEVERIN Mikrowelle 88 SEVERIN Mikrowelle 89 SEVERIN Mikrowelle 90 SEVERIN Mikrowelle 91 SEVERIN Mikrowelle 92 SEVERIN Mikrowelle 93 SEVERIN Mikrowelle 94 SEVERIN Mikrowelle 95 SEVERIN Mikrowelle 96 SEVERIN Mikrowelle 97 SEVERIN Mikrowelle 98 SEVERIN Mikrowelle 99 SEVERIN Mikrowelle 100 SEVERIN Mikrowelle 	<p>SEVERIN MW 7752/7774/9550/9559 Mikrowelle Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für die SEVERIN Mikrowellen MW 7752, MW 7774, MW 9550 und MW 9559. Enthält Sicherheitshinweise, Bedienung, Programme und technische Daten.</p>
--	---

SEVERIN



SEVERIN MW 7752, MW 7774, MW 9550, MW 9559

SE Gebrauchsanleitung	Mikrowelle	3
BE Inhaltsverzeichnis	Mikrowellen-Ofen	11
BE Inhalt einlesen	Bitte & lesen Sie zuerst	11
BE Inhaltsverzeichnis	Mikrowellen-Ofen	11
ES Instrucciones de uso	Mikrowaves	11
ES Instrucciones de uso	Mikrowaves	11
FR Manuel d'usage	Four à micro-ondes	11
FR Manuel d'usage	Four à micro-ondes	11
DE Bedienungsanleitung	Mikrowellenofen	11
DE Bedienungsanleitung	Mikrowellenofen	11
PL Instrukcja obsługi	Kuchenka mikrofalowa	11
PL Instrukcja obsługi	Kuchenka mikrofalowa	11
RU Инструкция по эксплуатации	Микроволновая печь	11

[SEVERIN Mikrowellen Gebrauchsanleitung: MW 7752, MW 7774, MW 9550, MW 9559](#)

Umfassende Gebrauchsanleitung für SEVERIN Mikrowellenmodelle MW 7752, MW 7774, MW 9550 und MW 9559. Enthält detaillierte Bedienungsanleitungen, Sicherheitsinformationen und technische Daten in mehreren Sprachen.

SEVERIN



SEVERIN MW 7775, MW 7803

SE Gebrauchsanleitung	Mikrowelle	4
BE Inhaltsverzeichnis	Mikrowellen-Ofen	11
BE Inhalt einlesen	Bitte & lesen Sie zuerst	11
BE Inhaltsverzeichnis	Mikrowellen-Ofen	11
ES Instrucciones de uso	Mikrowaves	11
ES Instrucciones de uso	Mikrowaves	11
FR Manuel d'usage	Four à micro-ondes	11
FR Manuel d'usage	Four à micro-ondes	11
DE Bedienungsanleitung	Mikrowellenofen	11
DE Bedienungsanleitung	Mikrowellenofen	11
PL Instrukcja obsługi	Kuchenka mikrofalowa	11
PL Instrukcja obsługi	Kuchenka mikrofalowa	11
RU Инструкция по эксплуатации	Микроволновая печь	11

[Severin MW 7775 / MW 7803 Microwave Oven User Manual](#)

Comprehensive user manual for the Severin MW 7775 and MW 7803 microwave ovens, covering operation, safety instructions, and features like microwave, grill, and hot air functions.

SEVERIN



SEVERIN MW 7778

SE Gebrauchsanleitung	Mikrowelle	3
BE Inhaltsverzeichnis	Mikrowellen-Ofen	11
BE Inhalt einlesen	Bitte & lesen Sie zuerst	11
BE Inhaltsverzeichnis	Mikrowellen-Ofen	11
ES Instrucciones de uso	Mikrowaves	11
ES Instrucciones de uso	Mikrowaves	11
FR Manuel d'usage	Four à micro-ondes	11
FR Manuel d'usage	Four à micro-ondes	11
DE Bedienungsanleitung	Mikrowellenofen	11
DE Bedienungsanleitung	Mikrowellenofen	11
PL Instrukcja obsługi	Kuchenka mikrofalowa	11
PL Instrukcja obsługi	Kuchenka mikrofalowa	11
RU Инструкция по эксплуатации	Микроволновая печь	11

[SEVERIN MW 7778 Mikrowelle Bedienungsanleitung | Grill & Heißluft](#)

Entdecken Sie die SEVERIN MW 7778 Mikrowelle mit dieser vollständigen Bedienungsanleitung. Erfahren Sie alles über Funktionen, Sicherheit, Bedienung und Pflege für Ihr Küchengerät.

SEVERIN



SEVERIN TOASTER-OFEN

DE Gebrauchsanleitung	Toaster-Ofen	4
DE Inhaltsverzeichnis	Toaster-Ofen	11
DE Inhalt einlesen	Bitte & lesen Sie zuerst	11
DE Inhaltsverzeichnis	Toaster-Ofen	11
ES Instrucciones de uso	Mikrowaves	11
ES Instrucciones de uso	Mikrowaves	11
FR Manuel d'usage	Four à micro-ondes	11
FR Manuel d'usage	Four à micro-ondes	11
DE Bedienungsanleitung	Mikrowellenofen	11
DE Bedienungsanleitung	Mikrowellenofen	11
PL Instrukcja obsługi	Kuchenka mikrofalowa	11
PL Instrukcja obsługi	Kuchenka mikrofalowa	11
RU Инструкция по эксплуатации	Микроволновая печь	11

[SEVERIN Toaster-Ofen: Umfassende Bedienungsanleitung und Sicherheitshinweise](#)

Diese Anleitung bietet umfassende Bedienungs- und Sicherheitshinweise für Ihren SEVERIN Toaster-Ofen. Erfahren Sie mehr über Funktionen, Gebrauch, Reinigung und Wartung, um die optimale Leistung und Langlebigkeit Ihres Geräts zu gewährleisten. Besuchen Sie SEVERIN online für weitere Produktinformationen.

SEVERIN Friends for Life



SEVERIN MW 7760

SE Gebrauchsanleitung	Mikrowelle	3
BE Inhaltsverzeichnis	Mikrowellen-Ofen	11
BE Inhalt einlesen	Bitte & lesen Sie zuerst	11
BE Inhaltsverzeichnis	Mikrowellen-Ofen	11
ES Instrucciones de uso	Mikrowaves	11
ES Instrucciones de uso	Mikrowaves	11
FR Manuel d'usage	Four à micro-ondes	11
FR Manuel d'usage	Four à micro-ondes	11
DE Bedienungsanleitung	Mikrowellenofen	11
DE Bedienungsanleitung	Mikrowellenofen	11
PL Instrukcja obsługi	Kuchenka mikrofalowa	11
PL Instrukcja obsługi	Kuchenka mikrofalowa	11
RU Инструкция по эксплуатации	Микроволновая печь	11

[SEVERIN MW 7760 Mikrowelle mit Grill – Bedienungsanleitung](#)

Umfassende Bedienungsanleitung für die SEVERIN MW 7760 Mikrowelle mit Grill. Enthält Informationen zu Sicherheit, Bedienung, Funktionen und technischen Daten von SEVERIN.