



Manuals.plus /

› Easytry123 /

› Easytry123 XD7247 Replacement Remote Control User Manual for Pioneer AV Receivers

Easytry123 XD7247

Easytry123 XD7247 Replacement Remote Control User Manual

For Pioneer AV Receivers

1. INTRODUCTION

This manual provides instructions for the Easytry123 XD7247 replacement remote control, designed for use with various Pioneer Audio/Video (AV) receivers. This remote offers essential functions for controlling your compatible Pioneer receiver. Please note that as a replacement unit, some advanced or specific functions of your original remote may not be fully supported.

2. COMPATIBILITY

The Easytry123 XD7247 replacement remote control is compatible with the following Pioneer AV receiver models:

- Pioneer VSX-D510S
- Pioneer VSX-D510
- Pioneer VSX-D411
- Pioneer VSX-D511
- Pioneer VSX-D209
- Pioneer VSX-D409
- Pioneer VSX-D709RDS
- Pioneer VSX-D3

To ensure proper functionality, verify that your receiver model is listed above. This remote is specifically designed for these models and may not operate other Pioneer devices or models not listed.

3. SETUP

3.1 Battery Installation

The Easytry123 XD7247 remote control requires two (2) AA batteries for operation. Batteries are not included with the remote control and must be purchased separately.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back view of the Easytry123 XD7247 remote control, highlighting the battery compartment for installation.

Once batteries are installed, the remote is ready for use with your compatible Pioneer AV receiver. No

additional programming is typically required.

4. OPERATING THE REMOTE CONTROL

The Easytry123 XD7247 remote control is designed for straightforward operation. Point the remote directly at your Pioneer AV receiver and press the desired function button.



Image: Front view of the Easytry123 XD7247 remote control, showing the layout of various control buttons.

4.1 Basic Functions

- **Power Button:** Turns the receiver on or off.
- **Volume Up/Down:** Adjusts the audio output level.
- **Input/Source Selection:** Cycles through available audio/video inputs (e.g., CD, DVD, Tuner).
- **Mute Button:** Temporarily silences the audio output.
- **Channel/Track Selection:** For tuner or disc player control, if applicable.
- **Navigation Buttons:** (Up, Down, Left, Right, Enter) for menu navigation on compatible receivers.

Note: As a replacement item, this remote may not support all functions or advanced features present on your original Pioneer remote control. Functionality may vary depending on the specific Pioneer receiver model.

5. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the surface or internal components.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

6. TROUBLESHOOTING

If you encounter issues with your Easytry123 XD7247 remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AA batteries.
 - Ensure there are no obstructions between the remote control and the receiver's infrared sensor.
 - Confirm you are pointing the remote directly at the receiver.
- **Limited Functionality:**
 - As a replacement remote, it may not replicate all functions of the original Pioneer remote. This is expected for certain advanced features.
 - Verify that your Pioneer receiver model is listed in the compatibility section of this manual.
- **Intermittent Operation:**
 - This could indicate low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the infrared signal.

7. SPECIFICATIONS

- **Brand:** Easytry123
- **Model:** XD7247 (Replacement Remote Control)
- **Compatible Devices:** Pioneer AV Receivers (Specific models listed in Section 2)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AA Batteries (not included)
- **Max Number of Supported Devices:** 1 (The connected Pioneer AV Receiver)
- **Special Feature:** Ergonomic design
- **Manufacturer:** Easytry123
- **ASIN:** B07PYPX6FC

8. WARRANTY AND SUPPORT

Specific warranty information for the Easytry123 XD7247 replacement remote control is not provided in the product details. For any support inquiries or further assistance, please refer to the seller or retailer from whom the product was purchased.