

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Divoom](#) /

› [Divoom Macchiato Bluetooth Speaker User Manual](#)

## Divoom MACCHIATO

# Divoom Macchiato Bluetooth Speaker User Manual

Model: MACCHIATO | Brand: Divoom

## 1. INTRODUCTION

---

The Divoom Macchiato is a palm-sized, portable Bluetooth speaker with an integrated FM radio tuner, designed to deliver high-quality audio in a compact form factor.

## 2. PACKAGE CONTENTS

---

Please check the box for the following items:

- Divoom Macchiato Bluetooth Speaker
- USB Charging Cable
- User Manual
- (Additional accessories may vary by region)

## 3. PRODUCT OVERVIEW

---

Familiarize yourself with the speaker's components and controls.



Figure 3.1: Front view of the Divoom Macchiato Bluetooth Speaker in blue.

### 3.1 Controls and Ports

The Divoom Macchiato speaker features intuitive controls for easy operation.

- **Top Buttons:** Typically control power, volume, track navigation, and mode selection (e.g., Bluetooth, FM).
- **Charging Port:** Usually a USB Type-C port for charging the device.
- **TF Card Slot:** Allows playback of music directly from a TF (MicroSD) card.
- **FM Antenna:** An extendable antenna for improved FM radio reception.



Figure 3.2: Back view of the Divoom Macchiato Bluetooth Speaker, showing the charging port and TF card slot.

## 4. SETUP

### 4.1 Power On/Off

- **To Power On:** Press and hold the power button (usually one of the top buttons) for approximately 2-3 seconds until you hear an audible cue or see an indicator light.
- **To Power Off:** Press and hold the power button for approximately 2-3 seconds until you hear an audible cue or the indicator light turns off.

### 4.2 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode. The indicator light will typically blink rapidly.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for "Divoom Macchiato" in the list of available Bluetooth devices.
4. Select "Divoom Macchiato" to connect. Once connected, the speaker will provide an audible confirmation, and the indicator light will turn solid.

*Note: The speaker will automatically attempt to reconnect to the last paired device when powered on.*

### 4.3 FM Radio Setup

1. Extend the FM antenna fully for optimal reception.
2. Switch the speaker to FM radio mode using the mode button (refer to your specific model's button layout).

3. Use the track navigation buttons (usually +/-) to scan for available FM stations.
4. Some models may allow saving favorite stations; refer to your specific model's instructions for details.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Music Playback (Bluetooth/TF Card)

- **Play/Pause:** Press the Play/Pause button (often integrated with the power button or a dedicated button).
- **Volume Control:** Use the volume up (+) and volume down (-) buttons.
- **Next Track:** Press and hold or short press the next track button (often the + button).
- **Previous Track:** Press and hold or short press the previous track button (often the - button).
- **TF Card Playback:** Insert a TF card with MP3 files into the TF card slot. The speaker should automatically switch to TF card mode or require manual selection via the mode button.

### 5.2 App Features (if applicable)

For enhanced functionality, download the Divoom companion app from your device's app store. The app may offer features such as:

- Customizing sound profiles.
- Accessing additional audio sources.
- Managing FM radio stations.
- Firmware updates.

## 6. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.
- **Water Resistance:** This model is NOT waterproof. Avoid exposure to water or high humidity.

## 7. TROUBLESHOOTING

---

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB charging cable.
Cannot pair via Bluetooth.	<ul style="list-style-type: none"><li>◦ Ensure the speaker is in pairing mode (blinking indicator).</li><li>◦ Check that Bluetooth is enabled on your device.</li><li>◦ Move your device closer to the speaker.</li><li>◦ Forget "Divoom Macchiato" from your device's Bluetooth list and try pairing again.</li></ul>

Problem	Solution
No sound or low volume.	<ul style="list-style-type: none"> <li>◦ Increase the volume on both the speaker and your connected device.</li> <li>◦ Ensure the speaker is correctly paired via Bluetooth or the TF card is properly inserted.</li> <li>◦ Check if the audio source is playing.</li> </ul>
Poor FM radio reception.	<ul style="list-style-type: none"> <li>◦ Fully extend the FM antenna.</li> <li>◦ Move the speaker to a location with better signal reception.</li> <li>◦ Try scanning for stations again.</li> </ul>

## 8. SPECIFICATIONS

Feature	Detail
Model Number	MACCHIATO
Brand	Divoom
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Speaker Maximum Output Power	6 Watts
Speaker Type	Soundbar
Mounting Type	Tabletop Mount
Recommended Uses For Product	Music
Control Method	Voice
Waterproof	FALSE (Not Waterproof)

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Divoom website. Keep your purchase receipt as proof of purchase for warranty claims.