

[Manuals.plus](#) /

› [Passion-Electro](#) /

› Passion-Electro Replacement Remote Control for UNITED LED24SK36 User Manual

Passion-Electro LED24SK36

Passion-Electro Replacement Remote Control for UNITED LED24SK36

User Manual

INTRODUCTION

This manual provides instructions for the Passion-Electro replacement remote control, specifically designed for UNITED LED24SK36 televisions. This is a specialized replacement remote, not a generic universal remote, ensuring full compatibility with all original remote functions. No programming is required; simply insert batteries to begin use.



Image: Side view of the remote control, showing its ergonomic design.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) 1.5V AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



Image: Back view of the remote control, highlighting the battery compartment. This is where the AAA batteries are inserted.

Once batteries are installed, the remote control is ready for immediate use with your UNITED LED24SK36 television. No additional pairing or programming is required.

OPERATING INSTRUCTIONS

This remote control provides access to all standard functions of your UNITED LED24SK36 television. The button layout is designed to be intuitive and similar to the original remote.



Image: Top-front view of the remote control, displaying the power button, channel and volume controls, navigation pad, and colored function buttons.

Key Functions:

- **Power Button:** Turns the TV on or off.
- **Channel Up/Down:** Changes TV channels.
- **Volume Up/Down:** Adjusts the sound volume.
- **Mute:** Silences the TV audio.
- **Navigation Pad (Arrow Buttons & OK):** Used to navigate menus and confirm selections.
- **Menu Button:** Accesses the TV's main menu.
- **Exit Button:** Exits current menu or function.

- **Input/Source Button:** Selects input sources (HDMI, AV, etc.).
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons perform specific functions depending on the TV's current mode or application. Refer to your TV's manual for specific uses.



Image: Bottom-front view of the remote control, showing the numeric keypad, shift, exit, menu, and other specialized buttons.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries simultaneously with new 1.5V AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote is pointed directly at the TV's infrared sensor.
 - Check if the batteries are correctly installed with the correct polarity (+/-).
 - Replace old batteries with new 1.5V AAA batteries.
 - Remove any obstructions between the remote and the TV.
- **Some buttons not working:**
 - This remote is designed to replicate all original functions. If a specific button is not working, ensure it is a function supported by your UNITED LED24SK36 TV.
 - Try replacing the batteries.
 - Clean the remote control, especially around the non-functioning buttons, to remove any debris.
- **LED indicator not lighting up:**

- The LED indicator should flash when a button is pressed. If it does not, check or replace the batteries.

SPECIFICATIONS

Brand	Passion-Electro
Model Compatibility	UNITED LED24SK36
Color	Black
Battery Type	2 x 1.5V AAA (LR03) batteries (not included)
Programming Required	No
Origin	China

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's policies or contact Passion-Electro directly. Keep your purchase receipt for any warranty claims.

© 2023 Passion-Electro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question