



Manuals.plus /

- › **Passion-Electro** /
- › Passion-Electro Replacement Remote Control for TSM TSM310 User Manual

## Passion-Electro TSM310

# Passion-Electro Replacement Remote Control for TSM TSM310 User Manual

Model: TSM310

## INTRODUCTION

---

Thank you for choosing the Passion-Electro Replacement Remote Control for TSM TSM310. This remote is designed to provide full functionality similar to your original TSM TSM310 remote control without the need for any complex programming. Simply insert the batteries, and it's ready for use.

## SETUP

---

### Battery Installation

To begin using your remote control, you must first install the batteries. This remote requires two 1.5V AAA (LR03) batteries (not supplied).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA (LR03) batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Rear view of the remote control, highlighting the battery compartment cover. This is where you will insert the AAA batteries.

Your remote control is now ready for use. No additional programming is required.

## OPERATING INSTRUCTIONS

---

The Passion-Electro replacement remote control is designed to replicate all functions of your original TSM TSM310 remote. Simply point the remote control towards your TSM TSM310 device and press the desired button.



Image: Full front view of the remote control, displaying the complete button layout for various functions.

### Key Functions Overview

- **Power Button:** Turns your TSM TSM310 device on or off.
- **Number Buttons (0-9):** For direct channel selection or inputting numbers.
- **Volume Up/Down:** Adjusts the audio volume.
- **Channel Up/Down:** Changes channels sequentially.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Menu/Settings:** Accesses the device's main menu or settings.
- **Input/Source:** Selects the input source (e.g., HDMI, AV).
- **LED Indicator:** A small LED light on the remote will flash with each button press, indicating that a signal is being transmitted.

## MAINTENANCE

---

### Cleaning the Remote Control

To maintain the remote control's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

## Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA (LR03) batteries. Do not mix old and new batteries or different types of batteries.

## TROUBLESHOOTING

---

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote is not responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace the batteries with fresh ones.
  - Ensure there are no obstructions between the remote control and your TSM TSM310 device.
  - Make sure you are within the effective range of the device.
- **Some buttons are not working:**
  - This remote is designed to offer full functionality. If specific buttons are not working, try replacing the batteries.
  - Ensure the remote is clean and there is no debris lodged under the buttons.
- **LED indicator does not light up:**
  - This indicates that the remote is not transmitting a signal. Check or replace the batteries.

If the problem persists after trying these steps, please refer to the Warranty and Support section for further assistance.

## SPECIFICATIONS

---

- **Brand:** Passion-Electro
- **Model:** TSM310 (Replacement)
- **Compatible Devices:** TSM TSM310
- **Battery Type:** 2 x 1.5V AAA (LR03) (not supplied)
- **Special Features:** No programming required, LED indicator

## WARRANTY AND SUPPORT

---

### Manufacturer Warranty

This Passion-Electro replacement remote control comes with a **2-year manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

### Customer Support

For any questions, technical assistance, or warranty claims, please contact your retailer or the Passion-Electro

customer support directly. Please have your purchase information and product model (TSM310) available when contacting support.