



Manuals.plus /

- › **Selieve /**
- › Selieve Kids Walkie Talkies T-388 Instruction Manual

Selieve T-388

Selieve Kids Walkie Talkies T-388 Instruction Manual

Model: T-388

1. INTRODUCTION

Welcome to the instruction manual for your Selieve Kids Walkie Talkies, Model T-388. This two-way radio system is designed for clear communication over distances up to 3 miles in open areas, making it suitable for various outdoor activities. Each unit features 22 channels, a backlit LCD display, and a built-in flashlight for enhanced usability. Please read this manual thoroughly to ensure proper setup and operation.



Image: Two Selieve Kids Walkie Talkies (Model T-388) in blue and green, shown with their product packaging.

2. PACKAGE CONTENTS

- 2 x Selieve Kids Walkie Talkies (Model T-388)
- 1 x User Manual

3. PRODUCT OVERVIEW

The Selieve Kids Walkie Talkies are ergonomically designed for comfortable handling by children. Key features include a backlit LCD display for visibility in various lighting conditions, a built-in flashlight for nighttime use, and a simple push-to-talk button for easy communication. The units also offer 22 channels and a key lock function to prevent accidental channel changes.

22 CHANNELS

Safer exclusive channels



Image: A close-up view of the walkie talkies, illustrating their main features such as 22 channels, LED flashlight, auto power save, 10 call ring tones, HD voice, and keypad lock.

4. SETUP

4.1 Battery Installation

Each walkie talkie requires 4 AAA batteries (not included). Ensure batteries are inserted with correct polarity.

1. Locate the battery compartment cover on the back of the walkie talkie.
2. Use a small screwdriver (not included) to loosen the screw on the battery cover.
3. Remove the battery cover.
4. Insert 4 AAA batteries, matching the + and - symbols inside the compartment.
5. Replace the battery cover and tighten the screw to secure it.

Powered with 4xAAA Batteries (Not Included)



Image: The rear of a walkie talkie with the battery cover removed, indicating the placement for four AAA batteries.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on: Press and hold the **Power** button () until the LCD screen illuminates.



[Shop Now](#)

- To power off: Press and hold the **Power** button until the LCD screen turns off.

5.2 Channel Selection

Your walkie talkies have 22 available channels. Both units must be on the same channel to communicate.

1. Press the **Menu** button () once. The channel number on the LCD will flash.



[Shop Now](#)

2. Use the **Up** () or **Down** () buttons to select your desired



[Shop Now](#)



[Shop Now](#)

channel.

3. Press the **Talk** button () or **Menu** button again to confirm the selection.



[Shop Now](#)

5.3 Key Lock Function

To prevent accidental channel changes, you can lock the keypad.

- To lock: Press and hold the **Menu** button until a key icon appears on the LCD.
- To unlock: Press and hold the **Menu** button again until the key icon disappears.

5.4 Talking

- Ensure both walkie talkies are on the same channel.
- Press and hold the **Talk** button.
- Speak clearly into the microphone (located above the Talk button).
- Release the **Talk** button when finished speaking to allow the other party to respond.

5.5 Call Tone

To send a call alert to the other walkie talkie:

- Press the **Call Tone** button (



-). The other unit will receive an audible alert.

5.6 Flashlight

Each walkie talkie includes a built-in flashlight.

- To turn on/off: Press the **Lamp** button () located on the side of the unit.

5.7 Product Demonstration Video

Video: A brief demonstration of the Selieve Kids Walkie Talkies, showcasing their compact design and ease of use for children.

6. MAINTENANCE

- Clean the walkie talkies with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Avoid exposing the units to water or excessive moisture, as they are not water resistant.
- Remove batteries if the walkie talkies will not be used for an extended period to prevent leakage.
- Store in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

7.1 No Power

- Check if batteries are inserted correctly with proper polarity.
- Replace old or depleted batteries with new AAA batteries.

7.2 Cannot Communicate

- Ensure both walkie talkies are powered on and have sufficient battery life.
- Verify that both units are set to the same channel.
- Check if the key lock function is active; unlock if necessary to change channels.
- Ensure you are within the effective communication range (up to 3 miles in open areas). Obstacles like buildings and dense foliage can reduce range.

7.3 Poor Sound Quality

- Move closer to the other walkie talkie to improve signal strength.
- Adjust the volume level using the Up/Down buttons.
- Ensure there are no obstructions between the two units.

8. SPECIFICATIONS

Feature	Specification
Model Number	T-388
Brand	Selieve
Number of Channels	22
Frequency Range	462.5625- 462.7125 MHz
Talking Range Maximum	3 Kilometers (approx. 1.86 miles)
Power Source	4 x AAA Batteries per unit (1.5 Volts each)
Product Dimensions	5.5 x 2.5 x 1 inches (1"D x 2.5"W x 5.5"H)
Item Weight	7 ounces
Special Feature	Adjustable, Backlit LCD, Flashlight, Key Lock
Water Resistance Level	Not Water Resistant

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Selieve customer service through the retailer where the product was purchased. Keep your purchase receipt for warranty claims.