

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Skip Hop](#) /

› [Skip Hop 3-in-1 Unicorn Baby Activity Push Walker and Ride-On Scooter Instruction Manual](#)

Skip Hop 187601

Skip Hop 3-in-1 Unicorn Baby Activity Push Walker and Ride-On Scooter Instruction Manual

Brand: Skip Hop | Model: 187601

INTRODUCTION

The Skip Hop 3-in-1 Unicorn Baby Activity Push Walker and Ride-On Scooter is designed to support your child's motor skill development, balance, and coordination through three distinct stages of play. This versatile toy adapts as your child grows, offering engaging activities from early walking to independent scooting.



Image: The Skip Hop 3-in-1 Unicorn Baby Activity Push Walker and Ride-On Scooter in its primary configuration.

SAFETY INFORMATION

- **Recommended Age:** 12 months to 5 years.
- **Maximum Weight Capacity:** Up to 44 lbs (20 kg).
- **Battery Requirements:** 3 AAA batteries (not included) for lights and sounds. Ensure batteries are inserted correctly and replaced when needed.
- Always supervise children during use.

- Ensure all parts are securely fastened before each use.
- Do not use on uneven surfaces, near stairs, or in traffic.

SETUP AND ASSEMBLY

The Skip Hop 3-in-1 Unicorn Baby Activity Push Walker and Ride-On Scooter comes with three main components for easy assembly and conversion between modes.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components are present.
2. **Attach Handlebar:** Insert the adjustable handlebar into the main body of the unicorn. Ensure it clicks securely into place.
3. **Install Batteries:** Locate the battery compartment on the handlebar. Insert 3 AAA batteries (not included), observing polarity. Close the compartment securely.
4. **Attach Storage Tub/Seat:** For Stage 1 (Walker Mode), attach the storage tub to the rear of the main body. For Stage 2 (Ride-On Mode), flip the tub to serve as a seat. For Stage 3 (Scooter Mode), remove the tub entirely.



Image: Visual guide illustrating the three convertible modes of the product.

OPERATING MODES

Stage 1: Walker Mode (Wagon)

This mode is designed for early walkers, encouraging them to push and pull the toy. The rear storage tub functions as a wagon, perfect for carrying favorite toys.

- Attach the storage tub to the rear of the main body.
- Ensure the handlebar is at an appropriate height for your child to comfortably push.
- Encourage your child to push the walker, aiding in balance and coordination development.



Image: A child using the product as a push walker with the storage tub attached.

Stage 2: Ride-On Mode

Once your child is more confident, convert the toy into a ride-on. The storage tub transforms into a comfortable seat.

- Remove the storage tub, flip it, and reattach it to the rear of the main body, ensuring it is securely fastened as a seat.
- Your child can now sit on the seat and propel themselves using their feet.



Image: A child enjoying the product in ride-on mode.

Stage 3: Scooter Mode

For advanced walkers, the toy converts into a scooter, promoting further balance and coordination.

- Remove the storage tub/seat completely.

- Adjust the handlebar to the appropriate height for your child to stand and scoot comfortably.
- Ensure your child wears appropriate safety gear, such as a helmet, when using the scooter.



Image: A child demonstrating the scooter mode of the product.

FEATURES

- **Interactive Headlight:** Press the button on the handlebar to activate the headlight.
- **Melodies and Sounds:** The handlebar also features buttons that play various melodies and sound effects for added engagement.
- **Adjustable Handle:** The handlebar height can be adjusted to accommodate your growing child.
- **Durable Construction:** Made from sturdy plastic and stainless steel components for long-lasting use.

MAINTENANCE

- **Cleaning:** Wipe down the toy with a damp cloth and mild soap as needed. Avoid harsh chemicals.
- **Storage:** Store in a cool, dry place away from direct sunlight when not in use.
- **Battery Replacement:** Replace AAA batteries as needed to maintain light and sound functionality.

TROUBLESHOOTING

- **No Lights/Sounds:** Check battery installation and replace batteries if necessary. Ensure the battery compartment is securely closed.
- **Difficulty Converting Modes:** Ensure all release buttons or latches are fully engaged or disengaged as per the instructions for each mode conversion.
- **Unstable Operation:** Verify all assembly points are securely fastened. Ensure the toy is used on a flat, stable surface.

SPECIFICATIONS

Feature	Detail
Product Dimensions	13.5 x 20.5 x 22.75 inches (57.71 x 34w x 52h cm)
Item Weight	5.35 pounds
Model Number	187601
Recommended Age	12 months - 5 years
Batteries Required	3 AAA batteries (not included)
Material	Plastic, Stainless Steel

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Skip Hop website.