

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image Mini 9" Automatic Candy Dispenser Instruction Manual

Sharper Image 1010253

Sharper Image Mini 9" Automatic Candy Dispenser Instruction Manual

Model: 1010253 | UPC: 843479165180

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Sharper Image Mini 9" Automatic Candy Dispenser. Please read this manual thoroughly before use to ensure proper function and longevity of the product.



Image: The Sharper Image Mini 9" Automatic Candy Dispenser, showcasing its design and capacity for small candies like jelly beans.

PRODUCT FEATURES

- **Touch-Activated Dispensing:** Provides a contactless method for dispensing treats.
- **Compact Design:** Suitable for placement on desktops, tables, or shelves.
- **Battery Powered:** Operates cord-free for flexible placement.
- **Optimal for Small Treats:** Designed for candies 10mm or smaller, such as gumballs, jellybeans, peanuts, or cereal.

SHARPER IMAGE®

01 TOUCH ACTIVATED

Dispense gumballs, candy, nuts and more with just a touch

02 CONVENIENT SIZE

Store favorite treats in easy reach thanks to compact design

03 STYLISH DESIGN

Add a touch of sweet décor to your home or workplace

04 BATTERY POWERED

Use it cord-free on any desk, table, shelf or counter



Image: A visual representation of the dispenser's key features, including its touch activation, compact size, stylish design, and battery operation.

PACKAGE CONTENTS

Upon unpacking, please ensure all components are present:

- 1 x Sharper Image Mini 9" Automatic Candy Dispenser Unit
- Instruction Manual (this document)

Note: Required batteries are not included and must be purchased separately.

SETUP

1. Battery Installation

1. Locate the battery compartment, typically on the bottom of the unit.
2. Open the battery compartment cover.
3. Insert the required batteries (e.g., 3 x AAA, specific type not provided in data) according to the polarity indicators (+/-).
4. Close the battery compartment cover securely.

2. Filling the Dispenser

1. Remove the top cover of the dispenser.
2. Pour your desired small treats (e.g., gumballs, jellybeans, peanuts, cereal) into the reservoir. Ensure treats are 10mm or smaller to prevent jamming.
3. Replace the top cover securely.



Image: The dispenser ready for use, with a hand positioned to receive dispensed treats.

OPERATING INSTRUCTIONS

To dispense treats:

1. Ensure the dispenser is powered on (after battery installation).
2. Place your hand or a small container under the dispensing chute.
3. Gently touch the sensor located under the chute. The dispenser will activate and release a portion of the treats.
4. Remove your hand or container once the desired amount has been dispensed.

SHARPER IMAGE®



MINI CANDY DISPENSER



Image: Demonstrating the touch-activated dispensing mechanism.

MAINTENANCE

Cleaning

- The dispenser is **not dishwasher safe**.
- To clean, disassemble the unit by carefully separating its components.
- Hand wash all internal pieces with mild soap and water.
- Ensure all parts are completely dry before reassembling.
- Wipe the exterior with a damp cloth.

Storage

Store the dispenser in a cool, dry place when not in use. If storing for an extended period, remove batteries to prevent leakage.

TROUBLESHOOTING

Refer to the following table for common issues and their solutions:

TROUBLESHOOTING THE CANDY DISPENSER

Problem:
The candy is not dispensing.

Solution:

- Irregular-shaped candy or nuts may have blocked the funnel opening. Tilt or tap the unit gently to alleviate any blockage.
- High temperature or humidity may have caused the candy or nuts to bind together. Remove the blockage and move the unit to a cooler location.

Important:
Only fill the reservoir half way when using irregular-shaped candy or nuts.

Problem:
The sensor is not working.

Solution:

- Make sure the candy dispenser is on.
- Check if the batteries are exhausted. Replace if necessary.
- Debris may be on the sensor. Turn the unit off and gently clean the sensor with a damp cloth.
- Make sure your finger is directly on the sensor.

Problem:
The amount dispensed is inconsistent.

Solution:

- May occur when using irregular-shaped candy and nuts.
- Candy level may need to be adjusted. Gently shake the candy dispenser to redistribute the candy in the dome.

Image: A detailed troubleshooting chart for common operational problems.

Problem	Solution
The candy is not dispensing.	• Irregularly-shaped candy or nuts may have blocked the funnel opening. Tilt or tap the unit gently to alleviate any blockage. • High temperature or humidity may have caused the candy or nuts to bind together. Remove the blockage and move the unit to a cooler location. • Important: Only fill the reservoir halfway when using irregular-shaped candy or nuts.
The sensor is not working.	• Make sure the candy dispenser is on. • Check if the batteries are exhausted. Replace if necessary. • Debris may be on the sensor. Turn the unit off and gently clean the sensor with a damp cloth. • Make sure your finger is directly on the sensor.
The amount dispensed is inconsistent.	• May occur when using irregular-shaped candy and nuts. • Candy level may need to be adjusted. Gently shake the candy dispenser to redistribute the candy in the dome.

SPECIFICATIONS

- **Product Dimensions:** 6"L x 6"W x 9"H

- **Item Weight:** 1.1 Pounds (approx. 0.5 kg)
- **Material:** Plastic
- **Color:** Black
- **Capacity:** 0.5 Liters
- **Closure Type:** Screw Top
- **Care Instructions:** Hand Wash Only (Not Dishwasher Safe)
- **Recommended Uses:** Candy, Nuts (10mm or smaller)
- **Model Number:** 1010253
- **UPC:** 843479165180

WARRANTY AND SUPPORT

This product is backed by a **90-day manufacturer warranty**. For any questions or issues, please contact customer support through the retailer where the product was purchased. Ensure to provide your model number (1010253) and proof of purchase for efficient assistance.

© 2024 Sharper Image. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

