

Bang & Olufsen 1646700

Bang & Olufsen Beoplay E8 Motion True Wireless Earphones User Manual

Model: 1646700

1. INTRODUCTION

This manual provides instructions for the Bang & Olufsen Beoplay E8 Motion True Wireless in-Ear Earphones. Please read this guide thoroughly before using your device to ensure proper operation and to maximize your listening experience.

What's in the Box

- Beoplay E8 Motion Earbuds (Left and Right)
- Wireless Charging Case
- USB-C to Micro USB Charging Cable
- 4 pairs of Silicone Ear Tips (XS, S, M, L)
- 3 pairs of Silicone Ear Fins (S, M, L)
- Comply Sport Pro Foam Tips (1 pair)
- Quick Start Guide (not included in this digital manual)



Figure 1: Beoplay E8 Motion earbuds in their open wireless charging case.

2. SETUP

2.1 Charging Your Earphones

Before first use, fully charge the Beoplay E8 Motion earphones and the charging case. The charging case provides up to three additional charges, totaling 16 hours of playtime.

- **Charging the Earbuds:** Place the earbuds into the charging case. The indicator lights on the earbuds will show charging status.
- **Charging the Case:** Connect the USB-C cable to the charging case and a power source. The case is Qi-certified for wireless charging.



Figure 2: The Beoplay E8 Motion charging case being charged via USB-C cable.

2.2 Fitting the Earphones

Proper fit is crucial for optimal sound quality and comfort. Experiment with the included silicone ear tips and ear fins to find the best seal and secure fit for your ears.

- **Ear Tips:** Select the size that creates a good seal in your ear canal.
- **Ear Fins:** Attach the ear fins to the earbuds to provide additional stability, especially during physical activity.
- **Comply Foam Tips:** For enhanced sound isolation and a secure fit, try the Comply Sport Pro foam tips. Compress the foam before inserting into your ear.



Figure 3: Side view of a Beoplay E8 Motion earbud showing the ear tip and fin.



Figure 4: Example of a Beoplay E8 Motion earbud correctly worn in the ear.

2.3 Bluetooth Pairing

1. Ensure both earbuds are in the charging case.
2. Open the charging case. The indicator lights on the earbuds will flash blue, indicating pairing mode.
3. On your device (smartphone, tablet), go to Bluetooth settings and select "Beoplay E8 Motion" from the list of available devices.
4. Once connected, the indicator lights on the earbuds will turn solid white.

3. OPERATING INSTRUCTIONS

The Beoplay E8 Motion earphones feature intuitive touch controls on each earbud.

3.1 Touch Controls

Action	Left Earbud	Right Earbud
Play/Pause	Single tap	Single tap
Next Track	Double tap	
Previous Track		Double tap
Answer/End Call	Single tap	Single tap
Reject Call	Long press	Long press
Activate Voice Assistant	Triple tap	
Transparency Mode On/Off		Triple tap

Transparency Mode: This feature allows you to hear your surroundings without removing the earbuds. Activate or deactivate it using the touch controls.

3.2 Power On/Off

- **Power On:** The earbuds automatically power on when removed from the charging case.
- **Power Off:** Place the earbuds back into the charging case to automatically power them off and begin charging.

4. MAINTENANCE

To ensure the longevity and optimal performance of your Beoplay E8 Motion earphones, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Ear Tips/Fins:** Remove ear tips and fins periodically and clean them with a damp cloth. Ensure they are completely dry before reattaching.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Water Resistance:** The earphones are water-resistant, but not waterproof. Avoid submerging them in water. Dry them thoroughly if they get wet.

5. TROUBLESHOOTING

If you encounter issues with your Beoplay E8 Motion earphones, refer to the following common solutions:

Problem	Solution
No sound from earbuds	◦ Ensure earbuds are charged. ◦ Check Bluetooth connection on your device. ◦ Increase volume on both your device and the earbuds (if applicable via app).
Earbuds not pairing	◦ Place both earbuds in the case, close, then open to re-enter pairing mode. ◦ Forget "Beoplay E8 Motion" in your device's Bluetooth settings and try pairing again. ◦ Ensure earbuds are sufficiently charged.
Poor sound quality	◦ Ensure ear tips and fins provide a secure and proper seal. ◦ Clean any debris from the earbud nozzles. ◦ Move closer to your connected device to reduce interference.
Charging issues	◦ Verify the charging cable is securely connected to both the case and power source. ◦ Try a different USB-C cable or power adapter. ◦ Ensure earbuds are correctly seated in the charging case.

6. SPECIFICATIONS

Feature	Detail
Model Name	Beoplay E8 2.0 Motion
Connectivity Technology	Bluetooth 4.2
Bluetooth Range	10 Meters

Feature	Detail
Noise Control	Sound Isolation
Battery Life (Earbuds)	Up to 4 hours
Total Playtime (with case)	Up to 16 hours
Charging Time	Approximately 2 hours
Charging Case Material	Leather
Control Type	Touch Control
Water Resistance Level	Water Resistant
Item Weight	2.05 Ounces (total)
Product Dimensions	4 x 2 x 2 inches
Manufacturer	Bang & Olufsen
ASIN	B07Q1ZZ88C
Item Model Number	1646700

7. PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video 1: An official overview of the Bang & Olufsen E8 Motion In-Ear Earphones, demonstrating their design and use.

8. WARRANTY AND SUPPORT

Bang & Olufsen products are covered by a limited warranty. For detailed warranty information, product registration, or technical support, please visit the official Bang & Olufsen website or contact their customer service. Keep your proof of purchase for warranty claims.

For further assistance, you may visit the [Bang & Olufsen Store on Amazon](#).

© 2026 Bang & Olufsen. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question