

[Manuals.plus](#) /

› [iLive Electronics](#) /

› iLive ISB659B Wireless Tailgate Party Speaker User Manual

iLive Electronics ISB659B

iLive ISB659B Wireless Tailgate Party Speaker User Manual

Model: ISB659B

INTRODUCTION

Thank you for purchasing the iLive ISB659B Wireless Tailgate Party Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.



Image: Front view of the iLive ISB659B Wireless Tailgate Party Speaker, showcasing its robust design and speaker grille.

WHAT'S INCLUDED

Ensure all items are present upon unboxing:

- Wireless Speaker
- 3.5mm Audio Cable
- AC/DC Power Adapter
- User's Guide (this document)

PRODUCT FEATURES AND CONTROLS

The iLive ISB659B speaker is designed for versatile audio playback and portability, featuring:

- Bluetooth Wireless connectivity (A2DP profile, 60-foot range)
- Built-in 8" Woofer and 2" Tweeter speakers
- Two microphone inputs
- USB port for mobile phone charging and media playback
- Voice prompts for speaker functions
- Built-in FM wire antenna and LED display
- Retractable pull handle and roller wheels for easy transport
- Built-in rechargeable lithium-ion battery (approx. 3 hours battery life)
- 3.5mm Aux-in for wired connections

Wireless Tailgate Speaker



FM Radio



USB Ports:
Charging & Music




Microphone
Inputs



Roller
Wheels



Retractable
Handle

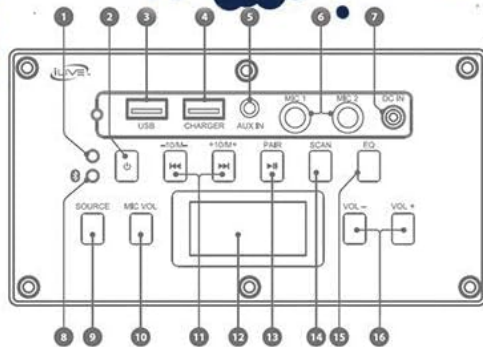

1. Battery Charge LED (red)
2. Power On/Off
3. USB Media Port
4. USB Power Port
5. Aux in
6. Microphone Jacks
7. DC Power Input
8. Bluetooth Indicator LED (blue)

9. Source
10. Menu
11. Skip
12. Display
13. Pair & Play/Pause
14. Scan
15. Equalizer
16. Volume

ISB659B

Image: Detailed diagram illustrating the control panel and rear input/output ports of the iLive ISB659B speaker, with numbered labels for each function.

Control Panel Overview:

1. **Battery Charge LED (red):** Indicates charging status.
2. **Power On/Off:** Main power switch.
3. **USB Media Port:** For USB drive playback.
4. **USB Power Port:** For charging external devices.
5. **Aux In:** 3.5mm auxiliary input.
6. **Microphone Jacks:** Two 1/4" inputs for microphones.
7. **DC Power Input:** For connecting the AC/DC power adapter.
8. **Bluetooth Indicator LED (blue):** Shows Bluetooth connection status.
9. **Source:** Selects input source (Bluetooth, Aux, FM, USB).
10. **Menu:** Accesses menu options (e.g., EQ settings).
11. **Skip:** Skips tracks in Bluetooth/USB mode, or changes FM stations.
12. **Display:** Shows current mode, track info, or FM frequency.
13. **Pair & Play/Pause:** Initiates Bluetooth pairing, plays/pauses audio.
14. **Scan:** Scans for FM radio stations.
15. **Equalizer (EQ):** Adjusts audio equalization.
16. **Volume:** Adjusts master volume level.

SETUP GUIDE

Charging the Speaker

1. Connect the AC/DC power adapter to the DC Power Input (7) on the speaker.
2. Plug the adapter into a standard wall outlet.
3. The Battery Charge LED (1) will illuminate red to indicate charging.
4. Charging typically takes approximately 3 hours. The LED will turn off or change color (depending on model) when fully charged.

Powering On/Off

1. To power on, press and hold the Power On/Off button (2) until the display illuminates.
2. To power off, press and hold the Power On/Off button (2) again until the display turns off.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Power on the speaker.
2. Press the Source button (9) repeatedly until "Bluetooth" mode is selected. The Bluetooth Indicator LED (8) will flash blue.
3. Enable Bluetooth on your mobile device (smartphone, tablet, laptop).
4. Search for "ISB659B" in your device's Bluetooth settings and select it to pair.
5. Once paired, the Bluetooth Indicator LED (8) will glow solid blue, and a voice prompt will confirm the connection.
6. You can now play audio wirelessly from your device. Use the Play/Pause (13) and Skip (11) buttons on the speaker or your device to control playback.

Auxiliary Input

1. Connect one end of the included 3.5mm audio cable to the Aux In port (5) on the speaker.
2. Connect the other end to the headphone jack or audio output of your external audio device.
3. Press the Source button (9) repeatedly until "Aux" mode is selected.
4. Control audio playback and volume directly from your connected device.

FM Radio

1. Power on the speaker.
2. Press the Source button (9) repeatedly until "FM" mode is selected.
3. Press the Scan button (14) to automatically scan and save available FM stations.
4. Use the Skip buttons (11) to navigate between saved stations.

USB Playback & Charging

1. **USB Media Playback:** Insert a USB flash drive containing MP3 audio files into the USB Media Port (3). The speaker will automatically switch to USB mode and begin playback. Use Play/Pause (13) and Skip (11) buttons to control.
2. **USB Device Charging:** Connect your mobile device's USB charging cable to the USB Power Port (4) on the speaker to charge your device.

Microphone Input

1. Connect a 1/4" microphone cable to either Microphone Jack (6).
2. Adjust the microphone volume using the dedicated MIC VOL knob (if present, otherwise use master volume).
3. Ensure the main Volume (16) is set to an appropriate level.

Adjusting Volume and Equalizer

- **Volume:** Rotate the Volume knob (16) clockwise to increase volume and counter-clockwise to decrease it.
- **Equalizer:** Press the EQ button (15) to cycle through preset equalizer modes or adjust bass/treble settings (if available via Menu button).

PORTABILITY

The iLive ISB659B is designed for easy transport. It features a retractable pull handle and roller wheels, allowing you to move it conveniently to your desired location.



Image: The iLive ISB659B Wireless Tailgate Party Speaker shown with its retractable handle fully extended and resting on its roller wheels, ready for transport.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use abrasive cleaners or solvents.

- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Solution
No power	Ensure the speaker is charged or connected to power. Check the power adapter and outlet.
No sound	Increase the speaker's volume and the volume of the connected device. Ensure the correct source is selected. Check audio cables for secure connection.
Bluetooth not pairing	Ensure the speaker is in Bluetooth mode and discoverable. Turn off and on Bluetooth on your device. Move closer to the speaker. Forget the device in your phone's Bluetooth settings and try pairing again.
FM radio static	Reposition the speaker to improve reception. Perform an auto-scan again to find stronger signals.
Microphone not working	Ensure the microphone is properly connected and switched on (if applicable). Adjust microphone volume.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	ISB659B
Speaker Type	Woofer (8"), Tweeter (2")
Connectivity Technology	Bluetooth, Auxiliary, USB
Wireless Range	60 feet
Power Source	Corded Electric, Built-in Rechargeable Lithium Ion Battery
Battery Life	Approx. 3 hours
Charging Time	Approx. 3 hours
Speaker Maximum Output Power	5 Watts
Product Dimensions	14.5 x 8.86 x 18.62 inches
Item Weight	1 pounds (approx. 454 grams)

Feature	Specification
Included Components	Wireless Speaker, 3.5mm Audio Cable, AC/DC Power Adapter, User's Guide

WARRANTY AND SUPPORT

This iLive ISB659B Wireless Tailgate Party Speaker comes with a limited warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty information provided with your purchase or contact iLive Electronics customer support.

For further assistance or technical support, please visit the official iLive Electronics website or consult the contact information provided in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question