

LEGO 70674

LEGO NINJAGO Fire Fang 70674 Building Set Instruction Manual

Model: 70674 | Brand: LEGO

INTRODUCTION

This manual provides detailed instructions for assembling and understanding the features of your LEGO NINJAGO Fire Fang 70674 building set. This set allows you to recreate scenes and create new adventures with Kai FS and the serpentine sorceress Aspheera's Fire Fang snake.

PRODUCT OVERVIEW

The LEGO NINJAGO Fire Fang 70674 set includes 463 pieces, designed for builders aged 8 and up. It features a cobra-like Fire Fang snake toy with a minifigure throne, a swiping, rattling tail with two stud shooters, and chain elements. The set also comes with four minifigures: Kai FS, Aspheera, Pyro Slayer, and Pyro Destroyer, along with assorted weapons and accessory elements, including Kai's LEGO NINJAGO Spinjitzu spinner toy and Aspheera's Scroll of Forbidden Spinjitzu.



Image: The complete LEGO NINJAGO Fire Fang 70674 set, showcasing the Fire Fang snake, minifigures, and accessories.



Image: The four minifigures included in the set, ready for action.

SETUP AND ASSEMBLY

Assembly of the LEGO NINJAGO Fire Fang 70674 set is recommended for ages 8 years and up. The set contains 463 LEGO building elements. Follow the included step-by-step building instructions carefully. For an enhanced building experience, you can utilize Instructions PLUS available in the LEGO Life app on smartphones and tablets, which offers zoom, rotate, and ghost mode features.

- **Unpack:** Carefully open the box and sort the LEGO bricks by color or type to facilitate assembly.
- **Follow Instructions:** Refer to the provided instruction booklet for detailed, visual steps.
- **Minifigure Assembly:** Assemble the Kai FS, Aspheera, Pyro Slayer, and Pyro Destroyer minifigures as shown in the instructions.
- **Snake Body:** Construct the main body of the Fire Fang snake, paying attention to the articulated segments.
- **Head and Tail:** Attach the cobra-like head with its opening mouth and the swiping, rattling tail with integrated stud shooters.
- **Throne and Chains:** Assemble the minifigure throne and attach it to the snake's back. Connect the chain elements as indicated.



Image: A closer look at the assembled Fire Fang snake and its accompanying minifigures.

OPERATING INSTRUCTIONS

Once assembled, the LEGO NINJAGO Fire Fang set offers several interactive features for dynamic play:

- **Stud Shooters:** The Fire Fang snake's tail features two integrated stud shooters. Load the studs into the mechanism and press the trigger to launch them.
- **Movable Tail:** The snake's tail is articulated, allowing for swiping and rattling actions to simulate movement and combat.
- **Opening Mouth:** The cobra-like head has an opening mouth, which can be posed to enhance play scenarios.
- **Minifigure Throne:** Place a minifigure, such as Aspheera, on the throne located on the snake's back for commanding the Fire Fang.
- **Kai FS Spinjitzu Spinner:** Utilize Kai FS with his Spinjitzu spinner toy for engaging in battles against the serpentine characters.



Image: The stud shooters on the Fire Fang's tail are designed for launching projectiles during play.



Video: Official demonstration of the LEGO Ninjago Fire Fang 70674 set, highlighting its features and playability.

MAINTENANCE

To ensure the longevity and cleanliness of your LEGO set, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft brush or a damp cloth with mild soap to gently clean the bricks. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the assembled model or individual bricks in a cool, dry place away from direct sunlight to prevent discoloration and damage.
- **Handling:** Handle the set with care, especially articulated parts, to prevent accidental breakage.
- **Dusting:** Regularly dust the set with a soft cloth or compressed air to keep it looking its best.

TROUBLESHOOTING

If you encounter any issues during assembly or play, consider the following:

- **Missing Pieces:** Double-check all packaging and sorting areas. If a piece is genuinely missing, contact LEGO Customer Service for replacements.
- **Assembly Errors:** Review the instruction manual carefully, paying close attention to the step where the error occurred. Disassemble and reassemble the affected section.
- **Loose Connections:** Ensure all bricks are firmly pressed together. LEGO connections should be snug.
- **Functionality Issues:** For features like stud shooters, ensure they are correctly assembled and not obstructed by other pieces.

SPECIFICATIONS

| | |
|---------------------|----------------------------|
| Model Number: | 70674 |
| Number of Pieces: | 463 |
| Recommended Age: | 8 years and up |
| Product Dimensions: | 11.1 x 10.32 x 2.99 inches |

| | |
|----------------------|----------------|
| Item Weight: | 3.52 ounces |
| Release Date: | August 1, 2019 |

WARRANTY AND SUPPORT

LEGO products are manufactured to high-quality standards. For any questions regarding missing parts, damaged elements, or general product support, please visit the official LEGO customer service website or contact their support line. Information on specific warranty details can typically be found on the LEGO website or by contacting customer service directly.

For further assistance, please refer to the official LEGO website: www.lego.com