

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [soges](#) /

› [soges L-Shaped Computer Desk Instruction Manual \(Model LD-Z01-MO\)](#)

soges LD-Z01-MO

soges L-Shaped Computer Desk Instruction Manual

Model: LD-Z01-MO

INTRODUCTION

Thank you for choosing the soges L-Shaped Computer Desk. This manual provides detailed instructions for the assembly, operation, and maintenance of your new desk. Designed for versatility and space efficiency, this desk is suitable for various uses including computer work, gaming, office tasks, and studying. Its robust construction and L-shaped design offer ample workspace while fitting neatly into corners.

The desk features a durable, eco-friendly composite board surface that is smooth, easy to clean, waterproof, and scratch-resistant. The sturdy powder-coated steel frame, reinforced with an X-form structure, ensures stability and longevity.

SAFETY INFORMATION

- Always assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload the desk. Refer to specifications for weight capacity.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Avoid standing or sitting on the desk.
- Use caution when moving the assembled desk to prevent injury or damage.

PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desk Panels (L-shaped sections)
- Steel Frame Components (legs, support bars)
- Assembly Hardware (screws, bolts, washers, nuts)
- Assembly Tools (Allen wrench, screwdriver)
- Adjustable Foot Pads
- Headphone Hook

- Instruction Manual

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. It is recommended to have a second person assist with certain steps for ease and safety. Follow the numbered steps in the included assembly diagram for best results.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface. Identify each part by comparing it to the parts list and diagrams in the separate assembly guide.
2. **Assemble Frame Sections:** Begin by attaching the horizontal support bars to the vertical leg frames using the provided screws. Ensure the X-form crossbars are correctly positioned for maximum stability.



Image: Close-up of the desk leg with adjustable foot pads and X-form support structure.

3. **Attach Desk Panels:** Once the frame sections are assembled, carefully place the desk panels onto the frame. Align the pre-drilled holes in the panels with the holes in the frame. Secure the panels using the appropriate screws.



Image: Detail of the corner desk section, showing the connection points of the panels.

4. **Connect L-Shaped Sections:** Join the two main desk sections to form the L-shape. Ensure the corner panel aligns correctly and secure it with the designated fasteners.
5. **Install Headphone Hook:** Attach the headphone hook to the desired location on the desk frame or panel using the provided hardware.
6. **Final Tightening and Leveling:** Once all parts are assembled, gently tighten all screws. **Do not overtighten**, as this may damage the material. Adjust the foot pads at the bottom of the legs to ensure the desk is stable and level on uneven floors.

Refer to the dimension diagram for overall measurements during planning:

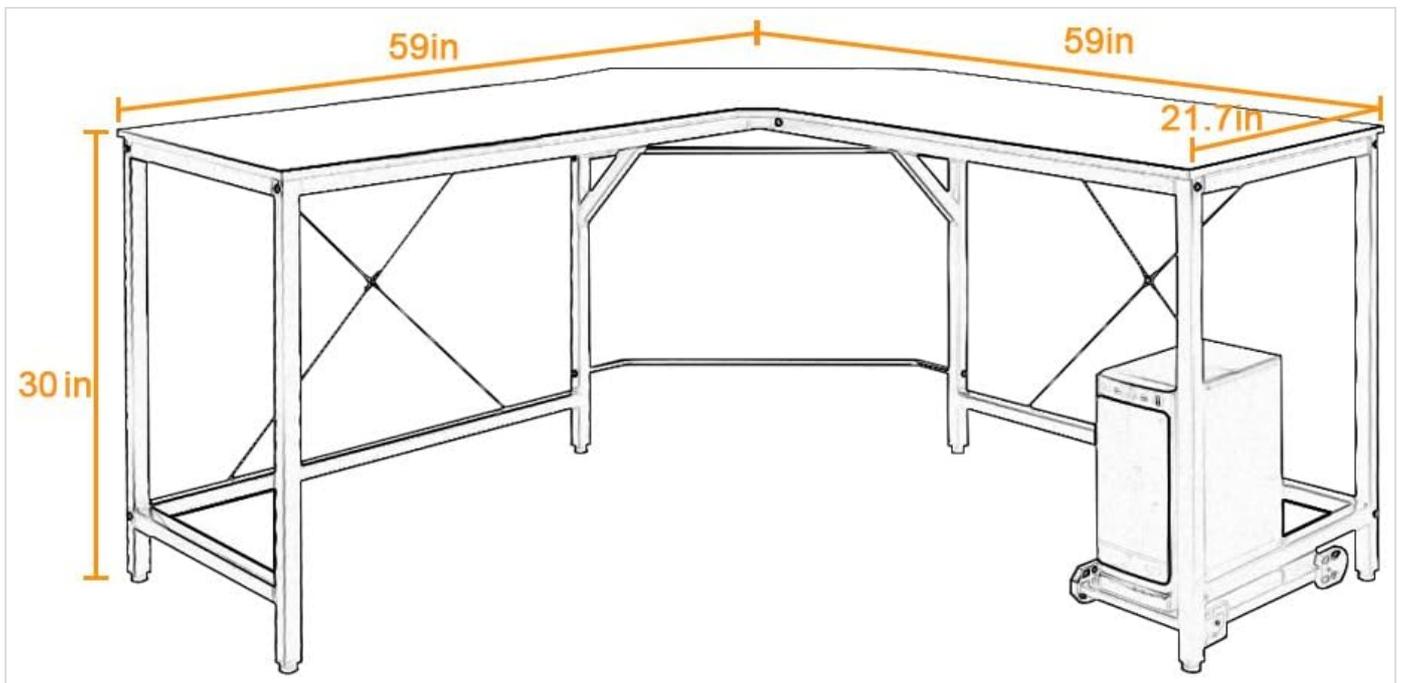


Image: Technical drawing illustrating the dimensions of the L-shaped desk, including lengths of 59 inches per side, a width of 21.7 inches, and a height of 30 inches.

OPERATING INSTRUCTIONS (USAGE)

The soges L-Shaped Computer Desk is designed for optimal functionality and comfort in various settings.

- **Workspace Optimization:** Utilize the L-shaped design to maximize your workspace. Place monitors, laptops, and other equipment on one side, leaving the other side clear for writing, drawing, or other tasks.
- **Versatile Placement:** The desk can be configured for either a left-hand or right-hand corner setup, depending on your room layout and preference.
- **Cable Management:** While not explicitly included, the open frame design allows for easy routing of cables to maintain a tidy workspace.
- **Headphone Storage:** Use the integrated headphone hook to keep your headphones conveniently stored and off the desk surface.



Images: Various setups demonstrating the spacious and versatile use of the L-shaped desk for multiple devices and tasks.

The desk's design also allows for placement of a CPU tower underneath, as shown in this example:



Image: Example of a CPU tower placed on a stand underneath the desk, demonstrating efficient use of space. Note: The CPU stand is not included with the desk.

MAINTENANCE

To ensure the longevity and appearance of your soges L-Shaped Computer Desk, follow these simple maintenance guidelines:

- **Cleaning:** The desk surface is waterproof and easy to clean. Wipe regularly with a soft, damp cloth. For stubborn marks, use a mild soap solution and dry immediately. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Spills:** Although the surface is waterproof, promptly wipe up any spills to prevent potential damage or staining over time.
- **Protection:** Use coasters for drinks and mouse pads to protect the surface from scratches and heat.
- **Fastener Check:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten as needed to maintain desk stability.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause fading or discoloration of the desk surface.



Image: Close-up showing the waterproof surface of the desk, with water beading on it.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Desk is wobbly or unstable.	Loose screws; uneven floor; incorrect assembly.	Ensure all screws are securely tightened (do not overtighten). Adjust the foot pads on the bottom of the legs to level the desk. Verify all frame components are correctly assembled according to the instructions.
Holes do not align during assembly.	Parts are oriented incorrectly; slight manufacturing tolerance.	Double-check the orientation of the parts against the assembly diagrams. Sometimes rotating a piece 180 degrees can resolve alignment issues. Apply gentle, even pressure to align holes if necessary, but avoid forcing components.
Desk surface appears dented or damaged after tightening screws.	Screws were overtightened, especially on lighter metal frames.	Always tighten screws sparingly, just enough to be secure without excessive force. If damage has occurred, contact customer support for advice.
Side panels do not perfectly match the corner panel.	Incorrect panel orientation or minor manufacturing variation.	Try rotating the side panels or the corner panel to see if a better fit can be achieved. Ensure all connecting hardware is properly seated.

SPECIFICATIONS

- **Model:** LD-Z01-MO
- **Brand:** soges
- **Dimensions (Overall):** 150cm (L) x 150cm (L) x 55cm (W) x 76cm (H) / (59in x 59in x 21.7in x 30in)
- **Weight:** Approximately 29 kg (64 lbs)
- **Material (Desktop):** Thickened Eco-friendly Composite Board
- **Material (Frame):** Durable Powder-Coated Steel with X-Form Structure
- **Color:** Millennium Oak
- **Special Features:** Waterproof, Scratch-resistant, Easy to Clean, L-Shaped Design, Headphone Hook
- **Design:** Computer Desk, L-Shape
- **Room Type:** Bedroom, Living Room, Study

WARRANTY AND SUPPORT

soges is committed to providing quality products. While specific warranty details are not provided in this manual, please retain your proof of purchase. For any questions, missing parts, or issues encountered during assembly or use, please contact soges customer support.

Our specialized customer support team is available to assist you. Please refer to the retailer's website or your purchase documentation for contact information.

