

SIMPLE HOUSEWARE BO-019-5

Simple Houseware Industrial Grade Z-Base Garment Rack
(Model BO-019-5) Instruction Manual

Model: BO-019-5 | Brand: SIMPLE HOUSEWARE

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Simple Houseware Industrial Grade Z-Base Garment Rack. Designed for heavy-duty use, this rack offers robust storage and mobility for various garments. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

SAFETY INFORMATION

- Ensure all parts are securely fastened before loading the rack.
- Do not exceed the maximum load capacity of 500 pounds (226.8 kg).
- Distribute weight evenly across the hanging rod to prevent tipping.
- Engage wheel brakes when the rack is in a stationary position to prevent unintended movement.
- Keep hands and fingers clear of moving parts during assembly and when adjusting the rack.
- This product is intended for indoor use only.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact Simple Houseware customer support.

- Top Hanging Rod (1)
- Vertical Support Posts (2)
- Z-Base Frame Sections (2)
- Caster Wheels with Brakes (4)
- Assembly Hardware (Bolts, Washers, Wrench)

SETUP AND ASSEMBLY

Follow these steps to assemble your garment rack. Assembly typically takes less than 15 minutes.

1. **Attach Caster Wheels:** Securely attach the four caster wheels to the designated points on the Z-Base Frame Sections

using the provided hardware and wrench. Ensure the brakes are in the unlocked position during attachment.

2. **Connect Z-Base Frame Sections:** Join the two Z-Base Frame Sections together. The Z-base design allows for easy interlocking.
3. **Insert Vertical Support Posts:** Slide the Vertical Support Posts into the upright sockets on each end of the assembled Z-Base Frame. Ensure they are fully seated and aligned.
4. **Attach Top Hanging Rod:** Place the Top Hanging Rod onto the top of the Vertical Support Posts. The rod should slide into the pre-drilled holes or slots. Ensure it is firmly in place.



Image: Easy installation diagram illustrating how the vertical posts connect to the base and the top rod connects to the posts.



Image: The assembled garment rack, ready for use.

OPERATING INSTRUCTIONS

Your Simple Houseware Garment Rack is designed for efficient and mobile garment storage.

- **Loading Garments:** Hang clothes evenly across the 62-inch top rod. Avoid concentrating heavy items in one area to maintain balance and prevent bowing. The rack supports up to 500 pounds.
- **Mobility:** To move the rack, ensure the caster wheel brakes are disengaged. Push or pull the rack gently to its desired location.
- **Stability:** Once positioned, engage the brakes on all four caster wheels to secure the rack and prevent accidental movement.
- **Space Saving:** The unique Z-base design allows multiple racks to be nested together when not in use, optimizing storage space.



Image: Detail of a caster wheel with an engaged brake for secure positioning.



Image: Multiple Z-Base garment racks stacked together for compact storage.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your garment rack.

- **Cleaning:** Wipe down the metal frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the powder-coated finish.
- **Inspection:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten if necessary.
- **Caster Wheels:** Keep the caster wheels free of debris (e.g., hair, lint) to ensure smooth rolling. Lubricate the wheel axles if they become stiff.

TROUBLESHOOTING

If you encounter any issues with your garment rack, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rack is unstable or wobbly.	Loose connections; uneven weight distribution.	Check and tighten all bolts. Redistribute garments evenly on the rod.
Caster wheels do not roll smoothly.	Debris in wheels; wheels locked; lack of lubrication.	Clear debris from wheels. Ensure brakes are disengaged. Apply a small amount of lubricant to axles if needed.
Rack tips when loaded.	Overloaded; uneven weight distribution.	Reduce load to within 500lb capacity. Distribute weight evenly.

SPECIFICATIONS

- **Model:** BO-019-5
- **Brand:** SIMPLE HOUSEWARE
- **Color:** Black
- **Material:** Metal
- **Product Dimensions (D x W x H):** 24.2" x 63" x 62" (61.47 cm x 160.02 cm x 157.48 cm)
- **Installation Type:** Free Standing
- **Special Feature:** Sturdy, Z-Base Design, Mobility (with wheels)
- **Finish Type:** Powder Coated
- **Load Capacity:** 500 Pounds (226.8 kg)
- **Assembly Required:** Yes
- **Item Weight:** 22.25 Pounds (10.09 kg)



Image: Dimensional overview of the garment rack.

WARRANTY AND SUPPORT

Specific warranty details are not provided in the product information. For any questions, concerns, or support regarding your Simple Houseware Industrial Grade Z-Base Garment Rack, please contact Simple Houseware customer service through their official website or the retailer where the product was purchased.

For further assistance, please visit the [SIMPLE HOUSEWARE Store on Amazon](#).

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07Q3YBKSC>

More documents and user manuals: **<https://manuals.plus/>**