

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Vivibright](#) /

› [Vivibright F30 Projector User Manual](#)

Vivibright F30

Vivibright F30 Projector User Manual

Model: F30

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Vivibright F30 Projector. Please read this manual thoroughly before operating the device and retain it for future reference. The Vivibright F30 is a Full HD 1080p LED projector designed for home theater, education, and business presentations, offering 4200 lumens brightness and multiple connectivity options.

2. SAFETY INFORMATION

- **Power Supply:** Use only the specified power adapter. Ensure the voltage matches the projector's requirements.
- **Ventilation:** Do not block ventilation openings. Ensure adequate space around the projector for proper airflow to prevent overheating.
- **Heat:** The projector lamp generates heat. Avoid touching the lens or vents immediately after use.
- **Eye Protection:** Do not look directly into the projector lens when the lamp is on. The bright light can cause eye strain or damage.
- **Placement:** Place the projector on a stable, level surface. Avoid placing it in direct sunlight, near heat sources, or in environments with high humidity or dust.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Servicing:** Do not attempt to service the projector yourself. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Vivibright F30 Projector
- Power Cable
- Remote Control
- User Manual (this document)
- HDMI Cable (may vary by region/package)

4. PRODUCT OVERVIEW

Familiarize yourself with the projector's components and interfaces.

4200 LUMENS, CLEAR ENOUGH IN DAYTIME

F30 increases the brightness to 4200 lumens, solving the problem of fuzzy image. You can get full details clearly even in daytime.



Figure 4.1: Front view of the Vivibright F30 Projector, showing the lens and ventilation.



Figure 4.2: Side view of the Vivibright F30 Projector, highlighting the various input ports.



Figure 4.3: Top or rear view of the Vivibright F30 Projector, showing control buttons or additional vents.

4.1. Interfaces

- **HDMI Ports:** For connecting devices like laptops, gaming consoles, Blu-ray players, and media players.
- **VGA Port:** For connecting older computers or other VGA-compatible devices.
- **USB Ports:** For connecting USB storage devices to play media directly.
- **Audio Out:** For connecting external speakers or headphones.
- **Power Input:** For connecting the power cable.

5. SETUP

5.1. Placement

Position the projector on a stable surface or mount it appropriately. Ensure the projector is perpendicular to the projection screen for optimal image geometry. The projection distance can range from 1.2 to 6.8 meters, depending on the desired screen size.

5.2. Power Connection

1. Connect the power cable to the projector's power input port.
2. Plug the other end of the power cable into a grounded electrical outlet.

5.3. Connecting Input Devices

Connect your desired source device (e.g., laptop, media player) to the projector using an appropriate cable (HDMI, VGA, USB). Ensure the cable is securely connected to both the projector and the source device.

5.4. Focus and Keystone Adjustment

- **Focus:** Rotate the focus ring on the projector lens until the image appears sharp and clear on the screen.
- **Keystone:** If the projected image is trapezoidal (wider at the top or bottom), use the keystone correction

feature (manual or digital, depending on model) to adjust the image to a rectangular shape.

6. OPERATING INSTRUCTIONS

6.1. Powering On/Off

- **Power On:** Press the power button on the projector or the remote control. The indicator light will change, and the lamp will illuminate.
- **Power Off:** Press the power button again. Confirm shutdown if prompted. Allow the projector to cool down before unplugging it.

6.2. Input Source Selection

Press the "Source" button on the remote control or the projector's control panel to cycle through available input sources (HDMI1, HDMI2, VGA, USB). Select the input corresponding to your connected device.

6.3. Menu Navigation

Use the arrow buttons on the remote control or projector to navigate through the on-screen display (OSD) menu. Press "OK" or "Enter" to select an option and "Exit" or "Menu" to go back or close the menu.

6.4. Picture and Audio Settings

Adjust picture settings such as brightness, contrast, color, and aspect ratio via the OSD menu to optimize image quality. Adjust volume levels for the built-in speaker or connected external audio devices.

7. MAINTENANCE

7.1. Cleaning the Lens

Gently wipe the projector lens with a soft, lint-free cloth specifically designed for optical surfaces. Do not use abrasive materials or harsh chemicals.

7.2. Cleaning the Projector Body

Use a soft, dry cloth to clean the exterior of the projector. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth. Ensure no liquid enters the ventilation openings.

7.3. Lamp Life

The Vivibright F30 Projector utilizes an LED lamp with an estimated lifespan of up to 50,000 hours, requiring no regular replacement under normal usage conditions.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image displayed	<ul style="list-style-type: none">◦ Power cable disconnected◦ Incorrect input source selected◦ Source device not powered on or outputting signal	<ul style="list-style-type: none">◦ Check power connection◦ Select correct input source (HDMI, VGA, USB)◦ Ensure source device is on and configured correctly

Problem	Possible Cause	Solution
Image is blurry	<ul style="list-style-type: none"> Focus not adjusted Projector lens is dirty 	<ul style="list-style-type: none"> Adjust the focus ring on the lens Clean the projector lens
Image is trapezoidal (keystone effect)	<ul style="list-style-type: none"> Projector not perpendicular to screen Keystone correction not adjusted 	<ul style="list-style-type: none"> Reposition the projector Adjust keystone correction via OSD menu
No sound	<ul style="list-style-type: none"> Volume too low or muted Audio cable not connected (if using external speakers) Source device audio output issue 	<ul style="list-style-type: none"> Increase volume or unmute Check audio cable connections Verify audio settings on source device
Projector overheats or shuts down	<ul style="list-style-type: none"> Blocked ventilation Operating in a hot environment 	<ul style="list-style-type: none"> Ensure vents are clear and not obstructed Operate in a well-ventilated area

9. SPECIFICATIONS

Feature	Detail
Brand	Vivibright
Model	F30
Native Resolution	1920 x 1080 (Full HD)
Supported Resolution	Up to 4K
Brightness	4200 Lumens (LED Luminous)
Contrast Ratio	2200:1
Display Technology	LCD
Lamp Type	LED
Lamp Life	Up to 50,000 hours
Projection Distance	1.2 to 6.8 meters
Noise Level	29 Decibels
Connectivity	HDMI, VGA, USB
Special Features	Portable, Built-in Speaker

Feature	Detail
Item Weight	3 kg
Mounting Type	Tabletop Mount

10. WARRANTY AND SUPPORT

10.1. Warranty Information

The Vivibright F30 Projector comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

10.2. Customer Support

For technical assistance, warranty claims, or further inquiries, please contact Vivibright customer support through their official website or the contact information provided with your purchase documentation. When contacting support, please have your product model (F30) and purchase details ready.