



[Manuals.plus](#) /

› [Elekpia](#) /

› Elekpia GB118WJSA Replacement Remote Control Instruction Manual for Sharp AQUOS TVs

Elekpia GB118WJSA

Elekpia GB118WJSA Replacement Remote Control Instruction Manual for Sharp AQUOS TVs

Model: GB118WJSA

INTRODUCTION

This manual provides instructions for the Elekpia GB118WJSA replacement remote control, designed for use with various Sharp AQUOS television models. This remote offers direct functionality without the need for programming.



This image displays the front of the Elekia GB118WJSA remote control, showing all the buttons including power, input selection, number pad, volume, channel, navigation, and dedicated app buttons like Netflix.

PACKAGE CONTENTS

- 1 x Elekia GB118WJSA Remote Control (Batteries not included)

SETUP: BATTERY INSTALLATION

To begin using your remote control, install the batteries as follows:

1. Locate the battery compartment on the back of the remote control.

2. Press down on the latch and slide the battery cover off.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

The remote control is ready for use immediately after battery installation. No programming is required.




This image shows the rear side of the Elek pia GB18WJSA remote control, highlighting the battery compartment cover located at the bottom.

OPERATING INSTRUCTIONS: BUTTON FUNCTIONS

The Elekpia GB118WJSA remote control features a standard layout for intuitive operation of your Sharp AQUOS TV. Familiarize yourself with the buttons below:



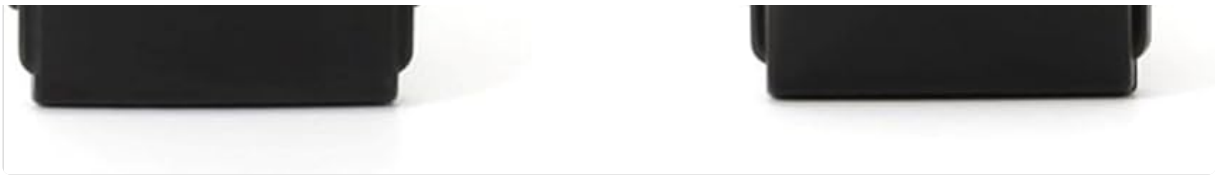

This image presents both the front and back views of the Elekpia GB118WJSA remote control side-by-side, offering a comprehensive look at its design and button layout, as well as the battery compartment.

Power and Input Control

- **POWER (Orange Button):** Turns the television on or off.
- **DISPLAY:** Shows on-screen information.
- **TV / STB / DVD-VCR / AUDIO** Selects the input source.

Navigation and Menu

- **MENU:** Accesses the TV's main menu.
- **Arrow Buttons (Up, Down, Left, Right):** Navigates through menu options.
- **ENTER:** Confirms a selection.
- **EXIT:** Exits the current menu or screen.
- **RETURN:** Returns to the previous screen or channel.

Channel and Volume Control

- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes the television channel.
- **MUTE:** Mutes or unmutes the television audio.

Number Pad and Special Functions

- **0-9 (Number Buttons):** Directly enters channel numbers.
- **ENT:** Confirms channel entry.
- **CC:** Activates or deactivates Closed Captions.
- **AV MODE:** Cycles through audio/video modes.
- **VIEW MODE:** Cycles through display view modes.
- **FLASHBACK:** Returns to the previous channel.
- **OPTION:** Accesses additional options.
- **SLEEP:** Sets the sleep timer.
- **AUDIO:** Selects audio tracks or modes.
- **FREEZE:** Freezes the current image on screen.
- **REC:** Initiates recording (if supported by TV/connected device).

Smart Features and Quick Access

- **3D:** Activates or deactivates 3D mode (if supported by TV).
- **Smart Control:** Accesses smart TV features.
- **NETFLIX:** Direct access to the Netflix application.
- **FAV APP:** Direct access to a favorite application.
- **Colored Buttons (A, B, C, D):** Functionality varies by TV model and application.
- **FAVORITE (1, 2, 3):** Quick access to favorite channels or functions.

COMPATIBILITY

This Elekpia GB118WJSA remote control is designed to be compatible with a wide range of Sharp AQUOS television models. Key compatible models include:

- Sharp LC-60EQ30U
- Sharp LC-60LE660U
- Sharp LC-60SQ15U
- Sharp LC-60UQ17U
- Sharp LC-70EQ30U
- Sharp LC-70LE660U
- Sharp LC-70SQ15U
- Sharp LC-70UQ17U
- Sharp LC-80UQ17U

For a comprehensive list of all compatible models, please refer to the product packaging or the original product listing. This remote is also compatible with many other Sharp AQUOS TV models not explicitly listed here, offering direct functionality without programming.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Keep the remote away from direct sunlight, heat sources, and moisture.

TROUBLESHOOTING

Remote is not responding.

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Make sure you are within the effective operating range (up to 10 meters) and pointing the remote directly at the TV.

Some buttons are not working.

- This remote is a replacement and may not support all advanced functions of your original TV remote, especially for specific smart TV features or less common inputs.
- Ensure the TV is powered on and functioning correctly.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Elekpia
Model Name	GB118WJSA

Feature	Detail
Connectivity Technology	Infrared
Compatible Devices	Television
Max Number of Supported Devices	1
Battery Type	2 x AAA Alkaline batteries (not included)
Maximum Range	10 Meters
Button Quantity	40
Color	Black
Item Weight	0.22 Pounds

WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support regarding your Elepia GB118WJSA remote control, please refer to the retailer where the product was purchased or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.