

[Manuals.plus](#) /

› [Bose](#) /

› Bose Headphones 700 User Manual

Bose 794297-0300

Bose Headphones 700 User Manual

Model: 794297-0300

INTRODUCTION

The Bose Noise Cancelling Headphones 700 are designed to provide an immersive audio experience with advanced noise cancellation and clear call quality. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your headphones.



Figure 1: Bose Headphones 700 in Silver Luxe.

WHAT'S IN THE BOX

Verify that all items are present in the packaging:

- Bose Noise Cancelling Headphones 700
- USB charging cable
- Audio cable
- Carrying case

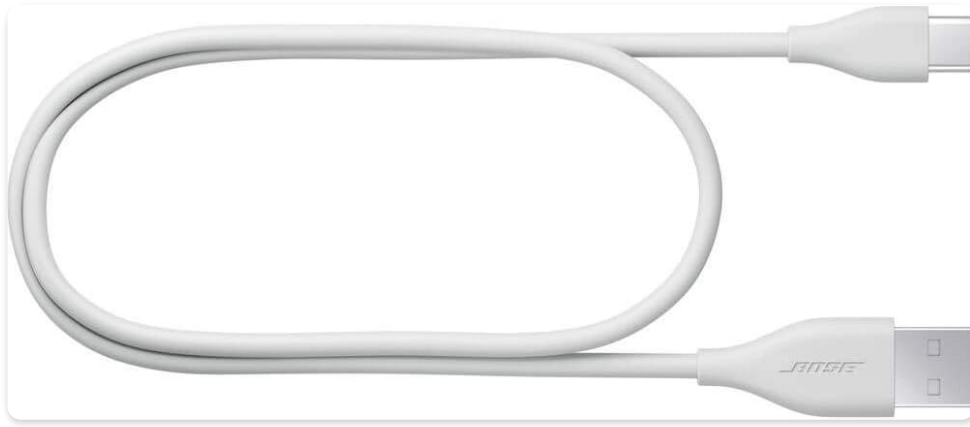


Figure 2: Included USB charging cable.



Figure 3: Protective carrying case.

SETUP

1. Charging the Headphones

Before first use, fully charge your Bose Headphones 700. Connect the USB charging cable to the headphones and a power source. A full charge takes approximately 2.5 hours and provides up to 20 hours of wireless battery life.

2. Bluetooth Pairing

To pair your headphones with a device:

1. Power on the headphones.
2. Press and hold the Bluetooth button on the right earcup until the indicator light blinks blue.
3. On your device, enable Bluetooth and select "Bose NCH 700" from the list of available devices.
4. The indicator light will turn solid blue when successfully connected.

The headphones support Bluetooth 5.0 and have a range of up to 10 meters (33 feet).

3. Bose Music App

For enhanced control and customization, download the Bose Music app from your device's app store. The app allows you to manage noise cancellation levels, access voice assistants, and update firmware.

OPERATING INSTRUCTIONS

Noise Cancellation

The Bose Headphones 700 feature 11 levels of active noise cancellation. Use the dedicated button on the left earcup to cycle through your favorite noise cancellation levels, or adjust precisely via the Bose Music app.



Figure 4: Earcup controls for noise cancellation and other functions.

Call Management

An unrivaled four-microphone system ensures your voice is picked up clearly while minimizing background noise during calls. Use the touch controls on the right earcup to answer, end, or decline calls.

Music and Audio Control

Intuitive touch controls on the right earcup allow you to manage playback:

- **Swipe up/down:** Adjust volume.
- **Double-tap:** Play/pause audio.
- **Swipe forward/backward:** Skip tracks.
- **Tap and hold (right earcup):** Instantly access your last Spotify session (iOS devices only).

Voice Assistants

Access voice assistants like Alexa and Google Assistant for hands-free control. Simply press the dedicated voice assistant button or use a wake word, depending on your setup.

Bose SimpleSync Technology

SimpleSync allows you to pair your Bose Headphones 700 with select Bose smart soundbars for a personalized TV listening experience. You can independently control the volume of your headphones and the soundbar.

MAINTENANCE

Proper care ensures the longevity of your headphones:

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in their provided carrying case to protect them from dust and damage.
- **Water Resistance:** While the headphones are designed with some water resistance, they are not waterproof. Avoid prolonged exposure to moisture or submersion in water. Take care when using them in rainy conditions.
- **Temperature:** Avoid exposing the headphones to extreme temperatures.

TROUBLESHOOTING

Problem	Possible Solution
Headphones do not power on.	Ensure the headphones are charged. Connect to a power source using the USB cable.
Cannot pair with a device.	Make sure Bluetooth is enabled on your device and the headphones are in pairing mode (blinking blue light). Try forgetting the device on your phone and re-pairing. Ensure the device is within 10 meters range.
No audio or poor sound quality.	Check volume levels on both headphones and the connected device. Ensure the headphones are properly connected. Try restarting both devices.
Noise cancellation not effective.	Adjust the noise cancellation level using the dedicated button or the Bose Music app. Ensure earcups form a good seal around your ears.

SPECIFICATIONS

Feature	Detail
Model Name	Headphones 700
Model Number	794297-0300
Connectivity Technology	Bluetooth
Bluetooth Version	5.0

Feature	Detail
Bluetooth Range	10 Meters
Noise Control	Active Noise Cancellation (11 levels)
Battery Life	Up to 20 Hours
Charging Time	2.5 Hours
Microphone System	Four-microphone system for clear calls
Control Type	Touch, Voice
Material	Stainless Steel (headband), Leather (earcups/case)
Item Weight	8.8 ounces (249 grams)
Dimensions	2 x 6.5 x 8 inches
Headphones Jack	2.5 mm Jack
Water Resistance Level	Water Resistant
UPC	017817787024

WARRANTY AND SUPPORT

Bose products are designed for durability and performance. For detailed warranty information, please refer to the warranty card included with your product or visit the official Bose website. For technical support, product registration, or to access additional resources, please visit www.bose.com/support. You can also find additional user guides and support documents on the product's Amazon page under the "Product guides and documents" section.

© 2024 Bose Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question