

[Manuals.plus](#) /

- › [Samsung Electronics](#) /
- › Samsung Galaxy Tab A 10.1 (2019) SM-T510NZKAXAR User Manual

Samsung Electronics SM-T510NZKAXAR

Samsung Galaxy Tab A 10.1 (2019) User Manual

Model: SM-T510NZKAXAR

1. SETUP

This section guides you through the initial setup of your Samsung Galaxy Tab A 10.1 (2019).

1.1 What's in the Box

- Samsung Galaxy Tab A 10.1 (2019) Tablet
- Data Cable (USB-C)
- Ejection Pin
- Quick Start Guide
- Terms Agreement

1.2 Device Layout

Familiarize yourself with the physical components of your tablet.



Image: Front view of the Samsung Galaxy Tab A 10.1 (2019) tablet. This image shows the display, front camera, and minimal bezels.



Image: Side view of the Samsung Galaxy Tab A 10.1 (2019) tablet. This image highlights the power button, volume controls, and the USB-C charging port.

1.3 Initial Charging

Before first use, fully charge your tablet. Connect the data cable to the tablet's USB-C port and the other end to a power adapter (sold separately) or a computer's USB port. The battery indicator will show charging status.

1.4 Powering On and Initial Configuration

1. Press and hold the **Power button** located on the side of the tablet until the Samsung logo appears.
2. Follow the on-screen instructions to select your language, connect to a Wi-Fi network, and set up your Google account.
3. You may be prompted to transfer data from a previous device or set up security features like a PIN, pattern, or

password.

1.5 Inserting a MicroSD Card

To expand storage, insert a microSD card (sold separately):

1. Locate the SIM/microSD card tray on the side of the tablet.
2. Insert the **Ejection Pin** into the small hole on the tray to open it.
3. Place the microSD card into the tray with the gold contacts facing down.
4. Gently push the tray back into the slot until it clicks into place.

2. OPERATING THE DEVICE

This section covers basic operations and features of your tablet.

2.1 Power On/Off/Restart

- **Power On:** Press and hold the Power button until the device vibrates and the Samsung logo appears.
- **Power Off:** Press and hold the Power button, then tap 'Power off' on the screen.
- **Restart:** Press and hold the Power button, then tap 'Restart' on the screen.

2.2 Basic Navigation

The tablet uses touch gestures for navigation:

- **Tap:** Select an item or open an app.
- **Touch and hold:** Access additional options or move items.
- **Swipe:** Scroll through lists or switch between screens.
- **Pinch:** Zoom in or out on photos and web pages.

2.3 Connecting to Wi-Fi

1. Open the **Settings** app.
2. Tap **Connections**, then **Wi-Fi**.
3. Toggle **Wi-Fi On**.
4. Select your desired network from the list and enter the password if prompted.

2.4 Adjusting Volume and Brightness

- **Volume:** Use the **Volume Up** and **Volume Down** buttons on the side of the tablet. You can also adjust volume from the Quick Panel (swipe down from the top of the screen).
- **Brightness:** Swipe down from the top of the screen to open the Quick Panel. Drag the brightness slider to adjust.

2.5 Camera Usage

To take photos or record videos:

1. Open the **Camera** app.
2. Tap the **Shutter button** to take a photo or the **Record button** to start/stop video recording.
3. Switch between front and rear cameras using the camera switch icon.

3. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your tablet.

3.1 Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.
- Do not allow moisture into openings.

3.2 Software Updates

Regularly check for and install software updates to improve performance and security:

1. Open the **Settings** app.
2. Scroll down and tap **Software update**.
3. Tap **Download and install**.

3.3 Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Do not leave the tablet fully discharged for extended periods.
- Use only Samsung-approved chargers and cables.

3.4 Storage Management

To optimize performance, regularly manage your device's storage:

- Delete unnecessary files, apps, and media.
- Move large files to a connected microSD card.
- Clear cache data for apps in **Settings > Apps**.

4. TROUBLESHOOTING

This section addresses common issues you might encounter with your tablet.

4.1 Device Not Turning On

- Ensure the battery is charged. Connect the tablet to a charger and wait a few minutes before attempting to power on.
- Perform a forced restart: Press and hold the **Power button** and **Volume Down button** simultaneously for more than 7 seconds.

4.2 Wi-Fi Connection Issues

- Ensure Wi-Fi is enabled on your tablet and the router is working correctly.
- Restart your tablet and Wi-Fi router.

- Forget the network in Wi-Fi settings and reconnect.

4.3 Slow Performance

- Close unused applications running in the background.
- Clear app cache: Go to **Settings > Apps**, select an app, then tap **Storage > Clear cache**.
- Free up storage space by deleting unnecessary files or moving them to a microSD card.
- Restart the tablet.

4.4 Factory Data Reset (Last Resort)

A factory data reset will erase all data from your tablet and restore it to its original factory settings. **Back up all important data before proceeding.**

1. Open the **Settings** app.
2. Tap **General management > Reset > Factory data reset**
3. Review the information and tap **Reset**, then **Delete all**.

5. SPECIFICATIONS

Detailed technical specifications for the Samsung Galaxy Tab A 10.1 (2019).

Feature	Specification
Model Number	SM-T510NZKAXAR
Display	10.1 Inches, 1920 x 1200 Pixels (WUXGA)
Processor	1.8 GHz AMD_Kabini_A6_5200M_Quad_Core (8-core Samsung processor)
RAM	2 GB
Internal Storage	32 GB (expandable via microSD up to 512GB)
Operating System	Android 9 Pie
Rear Camera	8 MP
Front Camera	5 MP
Battery	6150 mAh Lithium Polymer (up to 10 hours average life)
Wireless Connectivity	2.4 GHz Radio Frequency, 5 GHz Radio Frequency, 802.11a/b/g/n/ac
Ports	USB-C (1 USB 2.0 Port)
Dimensions (LxWxH)	0.3 x 5.88 x 9.65 inches
Weight	3.87 ounces
Color	Black

6. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product at the time of purchase. Warranty terms and conditions may vary by region.

6.1 Customer Support

For technical assistance, service, or additional support, please visit the official Samsung support website or contact their customer service.

- Official Samsung Support: www.samsung.com/us/support/
- A PDF version of this user manual is available for download: [Download User Manual \(PDF\)](#)