

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MCombo](#) /

› [MCombo Electric Power Lift Recliner Chair Sofa User Manual](#)

MCombo 7040

MCombo Electric Power Lift Recliner Chair Sofa User Manual

Model: 7040 | Brand: MCombo

1. PRODUCT OVERVIEW

The MCombo Electric Power Lift Recliner Chair Sofa is designed to provide comfort and assistance, particularly for the elderly. It features a counter-balanced lift mechanism to aid in standing, multiple reclining positions, full-body vibration massage, and lumbar heating. Additional conveniences include USB charging ports, cup holders, and side pockets.



Image: The MCombo Electric Power Lift Recliner Chair in its upright, slightly lifted position, showcasing its dark brown faux leather upholstery, armrests with cup holders, and remote control.

This chair is constructed with high-quality faux leather for durability and easy cleaning, and features a thick seat cushion for enhanced comfort. The wooden frame is FSC certified, ensuring sustainable sourcing.

2. SAFETY INFORMATION

- Consult a healthcare professional before use if you have any health concerns.
- This product has a maximum weight capacity of 350 pounds (158 kg). Do not exceed this limit.
- The chair reclines up to 140 degrees but does not recline completely flat.
- Ensure the chair is placed on a stable, level surface. For hardwood floors, an area rug is recommended to prevent slipping during lift operation.
- Keep children and pets away from the chair's moving parts during operation.
- Do not allow children to play on or around the chair.
- Unplug the chair from the power outlet before cleaning or performing any maintenance.
- Only use the provided power adapter and remote control.

3. ASSEMBLY INSTRUCTIONS

Assembly of the MCombo Power Lift Recliner is designed to be straightforward and requires no tools. It typically takes about 15 minutes for a novice. It is recommended to have two people for easier assembly.

How to choose a **right size** for yourself?

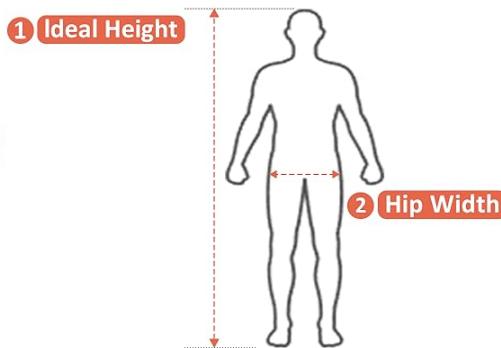


Image: Visual guide for assembling the recliner, showing the contents of Box 1 (Base, Right armrest, Accessories, Manual) and Box 2 (Backrest, Left armrest), and the two main steps of connecting the backrest to the base.

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the two boxes. Box 1 contains the Base, Right armrest, Accessories, and the Instruction Manual. Box 2 contains the Backrest and Left armrest.
2. **Connect Backrest to Base:** Align the metal slots on the backrest with the corresponding posts on the chair base. Slide the backrest down firmly until it clicks securely into place.
3. **Attach Armrests:** Slide the left and right armrests onto their respective sides of the chair, ensuring they are fully seated.
4. **Connect Wiring:** Locate the electrical cables extending from the backrest and base. Connect them according to the color-coded or labeled connectors. Ensure all connections are secure.

5. **Connect Power Adapter:** Plug the power adapter into the chair's power input, then plug the adapter into a wall outlet.

Once assembled, ensure all connections are firm and the chair is stable before use.

4. OPERATING INSTRUCTIONS

Using the Remote Control:

The chair is operated using a wired remote control with lighted buttons for easy visibility.



Image: The remote control for the recliner, showing the 'UP' and 'DOWN' buttons used to adjust the chair's position, along with illustrations of the Reclined, TV, and Lift (UP) positions.

- **Power Lift Assistance (UP):** Press and hold the 'UP' button (up arrow) on the remote. The chair will smoothly lift and tilt forward, assisting the user to stand up without strain on the back or knees. Release the button to stop at any desired position.
- **Reclining (DOWN):** Press and hold the 'DOWN' button (down arrow) on the remote. The chair will recline backward and the footrest will extend. Release the button to stop at any desired position, including the TV position (partially reclined with footrest up) or fully reclined (up to 140 degrees).

Massage and Heating Functions:

The chair features a full-body vibration massage system with 8 vibrating points and a lumbar heating function, controlled by a separate remote.

Massage and Heating

Heating function works separately from vibration.

- 8 Vibration Nodes
- 5 Massage Modes
- 2 Intensity Levels
- Lumbar Heat

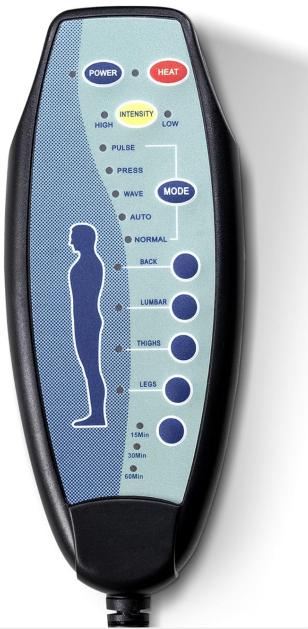
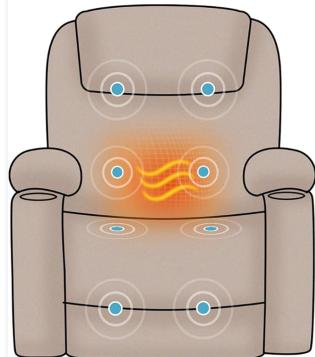


Image: Diagram illustrating the placement of 8 vibration nodes throughout the chair and a single lumbar heating point, alongside the dedicated remote control for massage and heat functions.

- Vibration Massage:** The massage remote allows you to select from 5 massage modes (Pulse, Press, Wave, Auto, Normal) and 2 intensity levels (High, Low). You can also target specific areas: Back, Lumbar, Thighs, and Legs.
- Lumbar Heating:** The heating function operates independently of the vibration massage. Activate it using the 'HEAT' button on the massage remote.
- Timer Function:** Both vibration and heating functions can be set to automatically turn off after 15, 30, or 60 minutes.

5. ADDITIONAL FEATURES

The MCombo recliner is equipped with several convenient features to enhance your experience.



Image: A close-up view of the recliner's armrest, highlighting the dual USB and Type-C charging ports, two cup holders, and the convenient side and front pockets for storage.

- **USB Charging Ports & Cup Holders:** The chair includes dual USB outlets (Type-A and Type-C) to keep your low-power devices (such as iPhones and iPads) charged. Two cup holders are integrated into the armrests for easy access to beverages.
- **Side Pockets:** Dual side pockets provide convenient storage for small items like remote controls, magazines, or books.
- **Durable Upholstery:** The chair is upholstered with high-quality faux leather, which is easy to clean and maintain. It is OEKO-TEX Standard 100 certified, ensuring it is skin-friendly and free from harmful substances.
- **Thick Seat Cushion:** Features a 6.3-inch thick seat cushion with enhanced padding for superior comfort and support.

6. MAINTENANCE

- **Cleaning:** Clean the faux leather upholstery with a dry or damp lint-free cloth. Do not use oils or waxes. For spills, wipe immediately with a clean, damp cloth.
- **General Care:** Regularly check all connections and fasteners to ensure they are secure. Avoid exposing the chair to direct sunlight or extreme temperatures, which can damage the upholstery.
- **Motor Care:** The motor is designed for long-term use. Avoid continuous operation for extended periods to prevent overheating. Allow the motor to cool down if it has been used for a prolonged duration.

7. TROUBLESHOOTING

If you encounter any issues with your MCombo Power Lift Recliner, refer to the following common troubleshooting

steps:

Problem	Possible Cause	Solution
Chair does not operate (no movement, no power)	Power cord unplugged; loose connection; power outlet issue; remote control malfunction.	Ensure power cord is securely plugged into the wall outlet and the chair. Check all internal wiring connections. Test the outlet with another device. If remote is unresponsive, check for damage or try a different outlet.
Chair makes unusual noises (creaking, grinding)	Loose bolts or connections in the frame/mechanism; foreign object obstructing movement.	Inspect the chair's base and reclining mechanism for any loose bolts and tighten them. Check for any objects that might be caught in the mechanism. If noise persists, contact customer support.
Massage/Heat function not working	Massage/heat remote not connected; power issue; internal component failure.	Ensure the massage/heat remote is properly connected to the chair. Verify the main power to the chair is active. If still not working, contact customer support.
USB ports not charging devices	Device requires too much power; loose connection; port malfunction.	Note that USB ports are ONLY for low-power devices. Ensure the device is compatible. Check the USB cable and connection. Try a different device.

If the problem persists after attempting these solutions, please contact MCombo customer support for further assistance.

8. SPECIFICATIONS

Detailed specifications for the MCombo Electric Power Lift Recliner Chair Sofa (Model 7040).

Ideal Height : 5'1"-5'9" Max Capacity : 350 lbs



Image: Comprehensive dimension diagram for the MCombo recliner, including overall height, width, depth, seat dimensions, and recline angles for upright, TV, and fully reclined positions. Also indicates ideal user height (5'1"-5'9") and maximum capacity (350 lbs).

Feature	Detail
Brand	MCombo
Model Name	7040
Color	Dark Brown
Size	Medium
Product Dimensions (Upright)	37"D x 34.6"W x 41"H
Maximum Weight Recommendation	350 Pounds (158 kg)
Recommended Height	5'1" - 5'9"
Reclining Angle (Max)	140°
Reclining Position Count	3 (Upright, TV, Reclined)
Upholstery Material	Faux Leather
Fill Material	Foam

Feature	Detail
Special Features	Adjustable Backrest, Heated, High Back, Power Lift, Power Recliner, USB Ports, Cup Holders, Side Pockets
Item Weight	105 pounds (47.6 kg)
Included Components	Backrest, Left armrest, Base, Right armrest, Instruction manual, Accessories box

9. WARRANTY AND SUPPORT

Your MCombo Electric Power Lift Recliner Chair Sofa is backed by a comprehensive warranty to protect your investment.

- **2-Year Limited Warranty:** This warranty covers free replacements for the following components:
 - Reclining/Lifting Mechanisms
 - Electrical Systems
 - Upholstery & Cushions
 - Wood/Metal Frame Structures

For detailed warranty terms and conditions, please refer to the user manual included in the product packaging or visit the official MCombo website. For customer support, technical assistance, or warranty claims, please contact MCombo directly through their official channels.

© 2025 MCombo. All rights reserved.
For more information, visit [MCombo Store on Amazon](#).