

Briloner 4009-055

Briloner 4009-055 Pendant Light Instruction Manual

Model: 4009-055

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before installation and use. Keep this manual for future reference.

- **Electrical Safety:** Installation must be performed by a qualified electrician in accordance with local wiring regulations. Always disconnect power at the main fuse box before installation, maintenance, or bulb replacement.
- **Bulb Requirements:** This fixture requires five E14 bulbs, with a maximum wattage of 40W per bulb. Do not exceed the specified wattage. Bulbs are not included.
- **Indoor Use Only:** This product has an IP20 rating, meaning it is protected against solid objects larger than 12.5mm but has no protection against water. It is suitable for indoor use only.
- **Handling:** Handle the lamp and shades with care to avoid damage.
- **Cleaning:** Always switch off and unplug the light before cleaning. Use a soft, dry cloth. Do not use abrasive cleaners or solvents.

2. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation.

- 1 x Briloner 4009-055 Pendant Light fixture with five textile shades
- Mounting hardware (screws, wall plugs)
- Instruction Manual

Note: E14 bulbs are not included and must be purchased separately.

3. PRODUCT SPECIFICATIONS

Brand	Briloner
Model Number	4009-055
Dimensions (L x W x H)	96 cm x 15 cm x 120 cm (adjustable height)
Material	Metal, Textile shades
Number of Bulbs	5
Bulb Type	E14 (not included)
Max Wattage per Bulb	40W
Voltage	230 Volts
IP Rating	IP20 (Indoor use)
Weight	1.5 Kilograms



Figure 1: Product Dimensions. The light measures 960mm in length and has an adjustable height up to 1200mm.

4. INSTALLATION GUIDE

This pendant light is designed for ceiling mounting. Professional installation is recommended.

1. **Preparation:** Ensure the power supply to the installation area is switched off at the main circuit breaker. Gather all necessary tools (screwdriver, drill, wire strippers, etc.).
2. **Mounting Bracket Installation:** Attach the mounting bracket securely to the ceiling using the provided screws and wall plugs. Ensure the bracket is firmly fixed and can support the weight of the fixture.
3. **Wiring:** Connect the electrical wires from the ceiling to the terminal block on the light fixture. Follow standard wiring color codes (e.g., Live, Neutral, Earth). Ensure all connections are secure and insulated.
4. **Fixture Attachment:** Carefully lift the light fixture and attach it to the mounting bracket. Secure it with the screws

provided.

5. **Adjusting Height:** The suspension cables are adjustable. Before final tightening, adjust the height of the pendant light to your desired position. Ensure all five shades are level.
6. **Shade and Bulb Installation:** Attach the textile shades to their respective holders. Insert five E14 bulbs (max 40W each) into the sockets.
7. **Final Check:** Once installed, restore power at the main circuit breaker and test the light.



Figure 2: Briloner 4009-055 Pendant Light in an installed setting, showcasing its design above a dining area.

5. OPERATION

This pendant light operates via a standard wall switch (not included). Ensure compatible E14 bulbs are installed.

- **Turning On/Off:** Use the wall switch connected to the light fixture to turn the light on or off.

- **Dimming Functionality:** If you wish to use a dimming function, ensure that both the installed E14 bulbs and your wall switch are compatible with dimming. This fixture itself is dimmable, but requires compatible external components.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pendant light.

- **Cleaning:** Before cleaning, always switch off the power supply. Use a soft, dry, lint-free cloth to gently wipe the metal frame and textile shades. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the finish and fabric.
- **Bulb Replacement:** Ensure the power is off and the bulbs have cooled down before attempting to replace them. Unscrew the old E14 bulb and screw in a new one, ensuring it does not exceed 40W.
- **Inspection:** Periodically check all connections and mounting points for tightness and security.

7. TROUBLESHOOTING

If you encounter issues with your pendant light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply, faulty bulb, loose wiring, faulty switch.	Check circuit breaker. Replace bulb. Verify wiring connections (consult an electrician). Test wall switch.
Light flickers.	Loose bulb, incompatible dimmer, faulty bulb, unstable power.	Tighten bulb. Ensure dimmer and bulbs are compatible. Replace bulb. Consult an electrician for power issues.
Humming noise.	Incompatible dimmer or bulb.	Ensure dimmer and bulbs are compatible. Replace with high-quality, compatible components.

If the problem persists after attempting these solutions, please contact a qualified electrician or Briloner customer support.

8. WARRANTY AND SUPPORT

Briloner Leuchten products are manufactured to high-quality standards. For information regarding warranty coverage and customer support, please refer to the warranty card included with your purchase or visit the official Briloner website.

Manufacturer: Briloner Leuchten

For technical assistance or inquiries, please contact Briloner customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question