

[Manuals.plus](#) /

› [Sylvania](#) /

› Sylvania SDPF1095 10-Inch Wi-Fi Digital Picture Frame User Manual

Sylvania SDPF1095

Sylvania SDPF1095 10-Inch Wi-Fi Digital Picture Frame User Manual

Model: SDPF1095

INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Sylvania SDPF1095 10-Inch Wi-Fi Digital Picture Frame. Please read this manual thoroughly before using the device to ensure proper function and longevity.



Image: The Sylvania SDPF1095 digital picture frame showcasing its ability to receive photos wirelessly from a smartphone, illustrating the ease of sharing memories.

PRODUCT FEATURES

- **Display:** 10-inch LED screen with 1280x800 IPS high-resolution and 5-point capacitive touch.
- **Connectivity:** Integrated Wi-Fi (802.11 b/g/N) for cloud-based photo sharing.
- **Storage:** 8 GB internal memory, capable of storing approximately 10,000 photos.
- **External Storage:** MicroSD card slot (supports SD, SDHC) for additional storage and direct photo import.
- **Ports:** Micro USB port for data transfer.
- **Media Support:** Compatible with various media formats including MP3, WMA, MPEG1, MPEG2, MPEG4, Xvid, AVI, M-JPEG, H2.63.
- **App Integration:** Seamless photo transfer from smartphones using the free Frameo application.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- Sylvania SDPF1095 Digital Picture Frame
- Power Adapter
- User Manual (this document)



Image: The product packaging, detailing the frame's features such as Wi-Fi connectivity, high-resolution touchscreen, and mobile app integration for photo transfer.

SETUP GUIDE

1. **Power Connection:** Connect the provided power adapter to the DC IN port on the back of the frame and plug it into a power outlet. The frame will automatically power on.
2. **Initial Setup:** Follow the on-screen prompts to select your language, time zone, and connect to a Wi-Fi network. A stable Wi-Fi connection is essential for photo transfer and cloud features.
3. **Frameo App Installation:** Download and install the "Frameo" app on your smartphone (available for iOS and Android).
4. **Connect to App:** Open the Frameo app and follow the instructions to connect your smartphone to the digital picture frame. You will typically be provided with a unique code on the frame to enter into the app.
5. **Add Friends:** Share your frame's unique code with family and friends so they can send photos directly to your frame via the Frameo app.



Image: The rear panel of the digital picture frame, illustrating the location of the DC power input, Micro USB port, and MicroSD card slot for connectivity and expansion.

OPERATING INSTRUCTIONS

Navigating the Touchscreen

The Sylvania SDPF1095 features a responsive 5-point capacitive touchscreen. Tap to interact with menus and swipe left/right to navigate through photos during a slideshow.

Sending Photos via Frameo App

1. Open the Frameo app on your smartphone.
2. Select the photos you wish to send.
3. Choose your Sylvania frame as the recipient.
4. Photos will be transferred wirelessly and appear on your frame.

Importing Photos from MicroSD Card

1. Insert a compatible MicroSD card (SD, SDHC) into the MicroSD card slot on the back of the frame.
2. Navigate to the "Manage photos" section in the frame's settings.
3. Select the option to import photos from the MicroSD card.
4. Choose the photos you want to import to the frame's internal memory.

Slideshow Settings

Access the "Slideshow" settings to customize your photo display:

- **Timer:** Adjust the duration each photo is displayed.
- **Fill Frame:** Choose whether photos fill the entire screen or display with borders.
- **Photo Display Order:** Set photos to display by date received or in reverse order.
- **Show Caption:** Enable or disable captions for photos.
- **Show Clock/Weather:** Display time and weather information on the frame.
- **Video Playback:** Adjust video volume and enable autoplay for videos.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and frame. Avoid abrasive cleaners or solvents.
- **Software Updates:** Ensure your frame's software is up to date for optimal performance and new features. Check for updates in the settings menu.
- **Backup:** Regularly back up important photos to an external storage device or cloud service to prevent data loss.
- **Storage Management:** Periodically review and delete unwanted photos to free up internal storage space.

TROUBLESHOOTING

Problem	Solution
Frame does not power on.	Ensure the power adapter is securely connected to the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	Check your Wi-Fi password. Ensure the frame is within range of your router. Restart your router and the frame.
Photos not appearing on the frame.	Verify the frame is connected to Wi-Fi. Ensure photos were successfully sent from the Frameo app. Check internal storage space.
Touchscreen is unresponsive.	Restart the frame by disconnecting and reconnecting the power. Ensure the screen is clean and dry.
Frameo app connection issues.	Ensure the frame's unique code is correctly entered. Check your smartphone's internet connection. Restart the app and the frame.

SPECIFICATIONS

Feature	Detail
Model Number	SDPF1095
Screen Size	10 Inches
Resolution	1280x800 IPS (720p)
Touchscreen	5-Point Capacitive
Internal Memory	8 GB (approx. 10,000 photos)
Wi-Fi Standard	802.11 b/g/N
External Storage	MicroSD Card Slot (SD, SDHC)

Feature	Detail
Ports	Micro USB, DC IN
Product Dimensions	9.38 x 6.34 x 0.91 inches
Item Weight	1.2 pounds
Compatible Devices	PC, Laptop, Smartphone, Tablet

WARRANTY AND SUPPORT

This product is sold as an Amazon Renewed item. Renewed products are eligible for replacement or refund under the Amazon Renewed Guarantee if you are not satisfied with the purchase. Please refer to the Amazon Renewed Guarantee terms and conditions for full details.

For technical support or further assistance, please contact Sylvania customer service or refer to the official Sylvania website.

© 2023 Sylvania. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

