

[Manuals.plus](#) /

› [Puroma](#) /

› Puroma 4-Digit Combination Lock (Model TH002L) Instruction Manual

Puroma TH002L

Puroma 4-Digit Combination Lock (Model TH002L) Instruction Manual

Your guide to setting up, operating, and maintaining your Puroma combination lock.

PRODUCT OVERVIEW

The Puroma 4-Digit Combination Lock provides enhanced security for various applications. Constructed from premium zinc alloy and steel, it is designed for durability and resistance to wear, tear, rust, and corrosion. Its waterproof features make it suitable for outdoor use. The lock features a 4-digit resettable combination, offering 10,000 unique combinations for increased security compared to 3-digit locks. The side window design facilitates easy combination setting and reading.



Image: Puroma 4-Digit Combination Lock, showing its compact design and 4-digit dials.

Key Features:

- **4-Digit Combination:** Offers 10,000 possible combinations for enhanced security.
- **Side Window Design:** Allows for easy viewing and setting of the combination.
- **Durable Construction:** Made of high-quality zinc alloy and steel, resistant to rust and corrosion.
- **Waterproof:** Suitable for both indoor and outdoor use.
- **Versatile Application:** Ideal for gym lockers, school lockers, gates, sheds, fences, and toolboxes.
- **Portable:** Compact and lightweight design for convenient carrying.

SETUP: SETTING YOUR COMBINATION

Your lock is preset to open at 0-0-0-0. Follow these steps to set your personal combination:

1. Set the default code (0-0-0-0) and pull up the shackle.

2. Turn the shackle 90° to the code setting gap.
3. Push the shackle down until the tiny pin is entirely inside the gap.
4. Keep it in place and rotate it another 90° (total 180° from initial position) to the code line.
5. Scroll the number wheels to set your desired 4-digit code. Ensure the numbers are aligned with the indicator line.
6. Turn the shackle back until it pops up, then push it down to lock. Your new combination is now set.



School /Gym locker

Not for typical school or gym lockers.



Hasp Locker Lock

The ideal lock for a hasp staple.

Image: Visual guide for setting the 4-digit combination on the lock.

OPERATING THE LOCK

To Unlock:

1. Align your set 4-digit combination with the indicator line on the side of the lock.
2. Pull up the shackle to open the lock.

To Lock:

1. Ensure the shackle is fully inserted into the lock body.

2. Scramble the number wheels to a random combination to secure the lock.

 
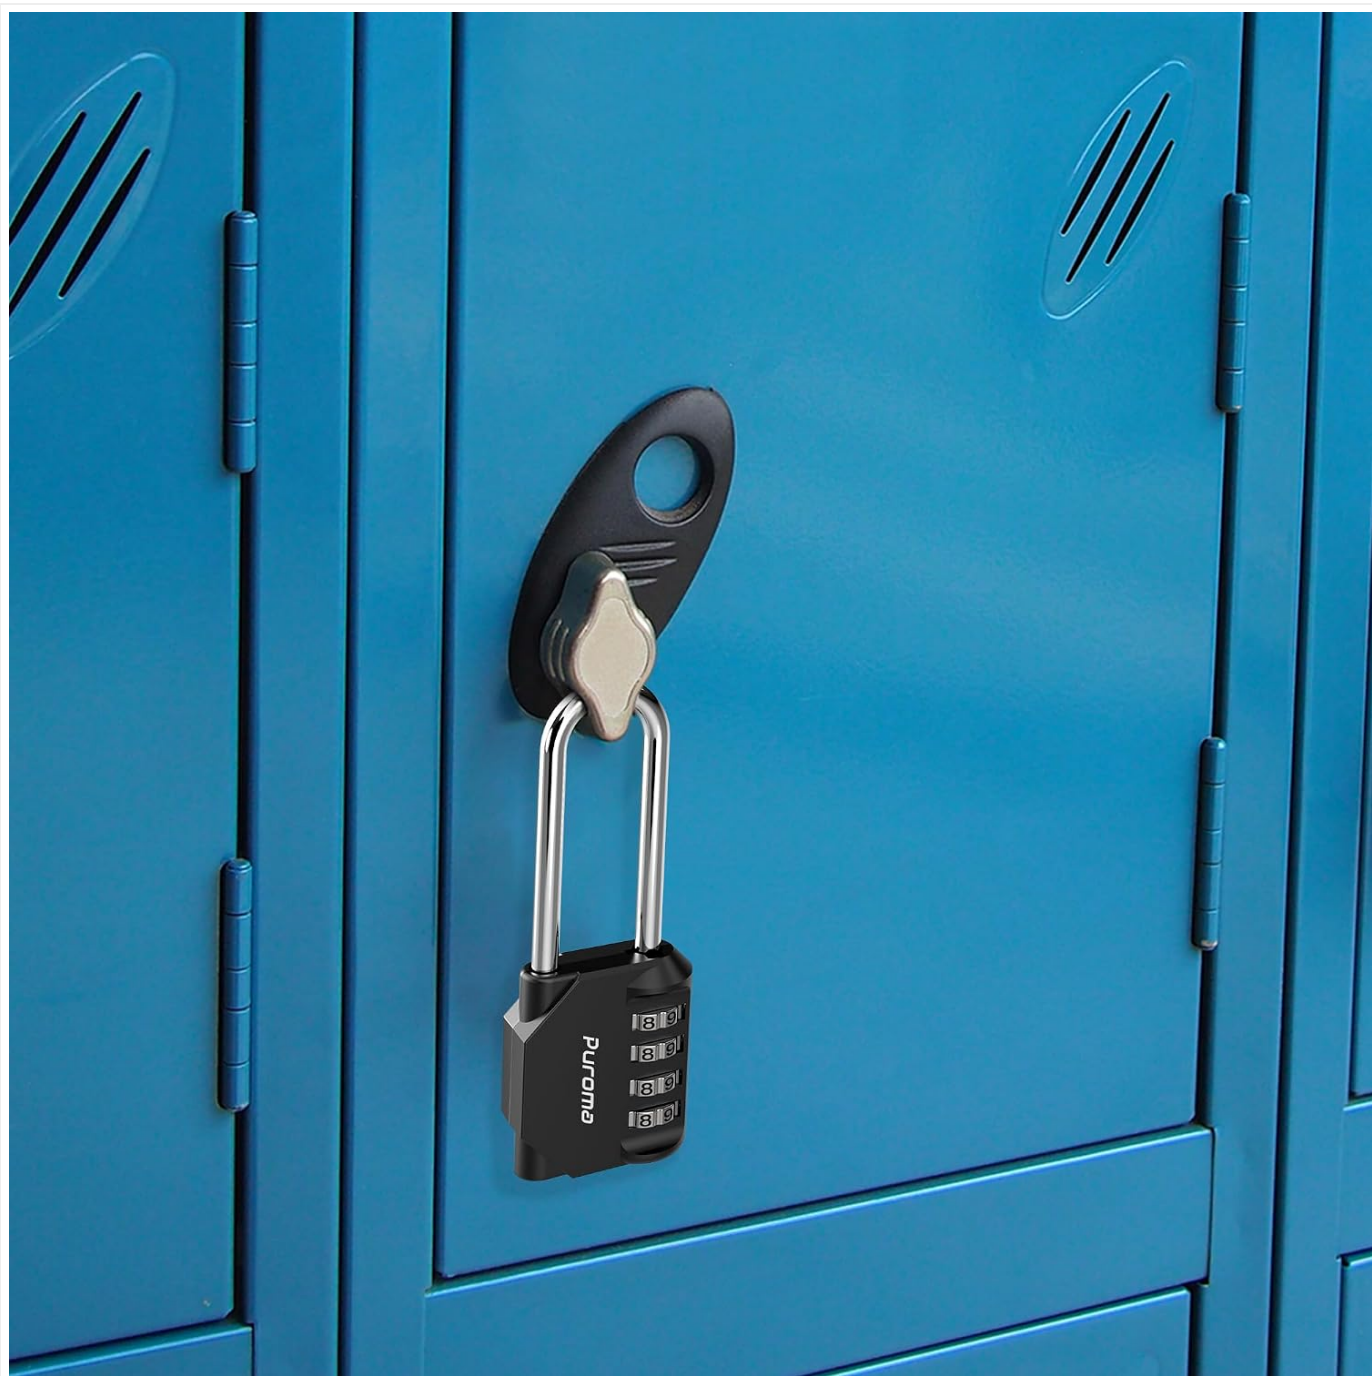 


Image: The Puroma lock securing a hasp locker, demonstrating a common application.

How to Operate

- 1 Set the default code (0-0-0-0) and pull up the shackle.
- 2 Turn the shackle 90° to the code setting gap.

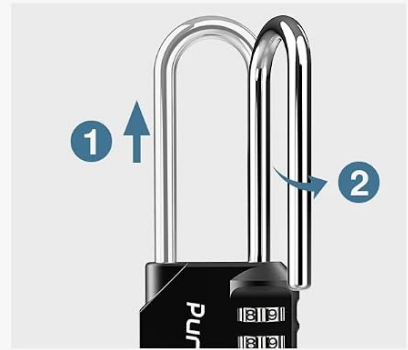

- 3 Push the shackle down until the tiny pin is entirely inside the gap.
- 4 Keep it in place and rotate it 90° to the code line.

- 5 Scroll the number to set your code.
- 6 Turn back the shackle until it pops up.



Image: The Puroma lock securing blue lockers, illustrating another use case.

MAINTENANCE

The Puroma combination lock is designed for durability and minimal maintenance. To ensure its longevity and smooth operation:

- **Cleaning:** Wipe the lock periodically with a soft, damp cloth to remove dirt and grime. Avoid harsh chemicals that may damage the finish.
- **Lubrication:** For optimal performance, especially in outdoor or dusty environments, apply a small amount of graphite lubricant or silicone spray to the shackle mechanism and number wheels once a year.
- **Storage:** When not in use for extended periods, store the lock in a clean, dry place.



Lengthened Shackle

Carbon steel reinforced shackles



Sturdy Lock Body

Made of premium zinc alloy

Image: A close-up view highlighting the lengthened shackle and sturdy zinc alloy body of the Puroma lock.

TROUBLESHOOTING

- **Lock will not open with the correct combination:**

- Ensure all four digits are perfectly aligned with the indicator line.
- Verify that you are using the correct combination. If you have recently reset it, try the new combination.
- If the lock feels stiff, apply a small amount of lubricant to the dials and shackle.

- **Cannot reset the combination:**

- Make sure the current combination is correctly set and the shackle is pulled up before attempting to rotate it.
- Ensure the shackle is pushed down completely into the code setting gap before rotating it to the new position.
- Refer to the "Setup: Setting Your Combination" section for detailed steps.

- **Forgotten Combination:**

Unfortunately, if the combination is forgotten and not written down, there is no master key or backdoor to open the lock. The lock is designed for security, and without the correct combination, it cannot be opened non-destructively.

SPECIFICATIONS

Feature	Detail
Brand	Puroma
Model Number	TH002L
Lock Type	Mechanical Code Lock
Material	Carbon Steel (Shackle), Zinc Alloy (Body)
Dimensions (L x W x H)	1.73 x 0.87 x 4.57 inches
Number of Combinations	10,000
Special Features	Cut Resistant, Light and Compact, Waterproof, Resettable 4-Digit Combination
Recommended Uses	School Gym Locker Lock, Gate Lock, Toolbox Lock, Storage Unit Lock

**Portable
combination
code lock,
easy to carry**

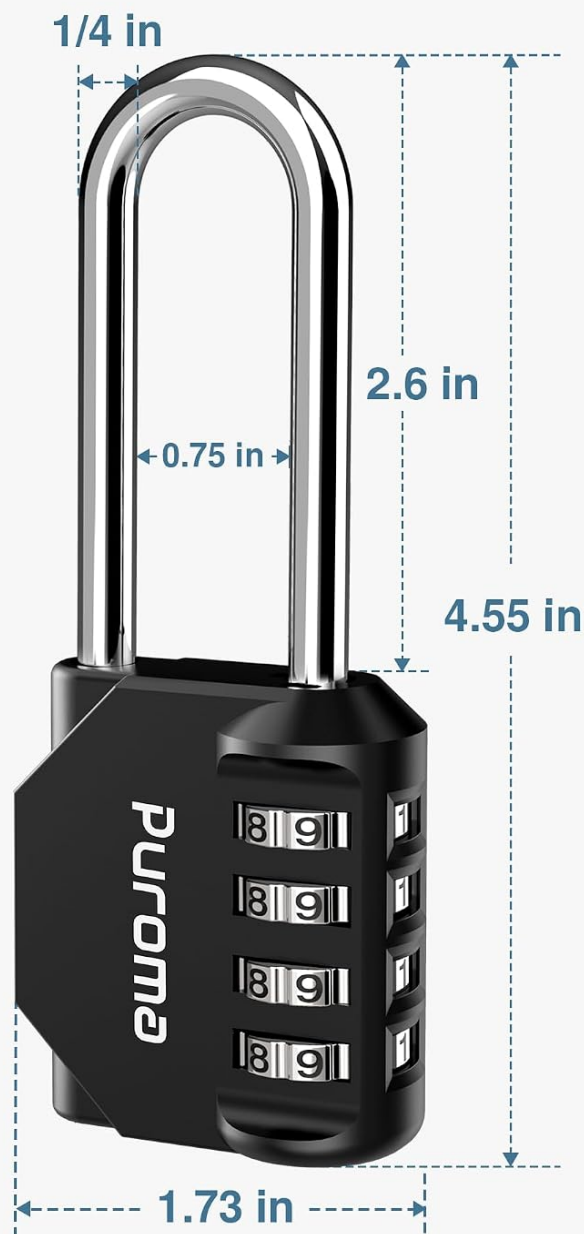 


Image: Detailed dimensions of the Puroma 4-Digit Combination Lock.

WARRANTY AND SUPPORT

Warranty Information:

The Puroma 4-Digit Combination Lock comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product meets its specified quality standards. Please retain your proof of purchase for warranty claims.

Customer Support:

For any questions, concerns, or assistance with your Puroma product, please visit the official Puroma store on Amazon or contact their customer service. You can find more information and contact details on the [Puroma Store Page](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question