

[Manuals.plus](#) /

› [XINJIA](#) /

› XINJIA Digital Sport Watch Model 2400014-002 User Manual

XINJIA 2400014-002

XINJIA Digital Sport Watch User Manual

Model: 2400014-002

INTRODUCTION

Thank you for choosing the XINJIA Digital Sport Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your watch. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

PRODUCT OVERVIEW

The XINJIA Digital Sport Watch features a durable plastic case, a comfortable silicone strap, and a clear digital display. It includes functions such as time, date, alarm, stopwatch, and backlight. The watch is designed for daily wear and sports activities.





Image 1: Front view of the XINJIA Digital Sport Watch, showing the digital display and control buttons.



Image 2: Angled view of the watch, highlighting the robust case and strap design.



Image 3: Rear view of the watch, showing the stainless steel case back and the pin buckle clasp.

SETUP

Battery Installation

Your XINJIA Digital Sport Watch comes with one LR44 battery already installed. If the display is dim or not functioning,

the battery may need replacement. It is recommended to have battery replacement performed by a qualified technician.

Initial Time Setting

1. Press the **MODE** button repeatedly until the time setting mode is activated (usually indicated by flashing digits).
2. Use the **LIGHT** or **SPORT** button (depending on model) to adjust the flashing digits (hours, minutes, seconds).
3. Press the **MODE** button again to cycle through the settings (e.g., hours, minutes, 12/24-hour format).
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

OPERATING INSTRUCTIONS

Time Display

The watch displays time in a 24-hour format. To switch between 12-hour and 24-hour format, refer to the time setting instructions.

Date Display

The watch displays the month, day, and day of the week. To view the date, press the **MODE** button until the date display appears. The date automatically adjusts for different month lengths.

Alarm Function

1. Press the **MODE** button until the alarm setting mode is displayed.
2. Use the **LIGHT** or **SPORT** button to adjust the alarm time.
3. Press the **MODE** button to confirm and move to the next setting.
4. To activate/deactivate the alarm, press the **SPORT** button while in the alarm display mode. An alarm icon will appear/disappear.

Stopwatch Function

1. Press the **MODE** button until the stopwatch display appears (usually showing 00:00:00).
2. Press the **SPORT** button to start the stopwatch.
3. Press the **SPORT** button again to pause the stopwatch.
4. Press the **LIGHT** button to reset the stopwatch to zero.

Backlight Function

To illuminate the display in low-light conditions, press the **LIGHT** button. The backlight will remain active for a few seconds.

MAINTENANCE

Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the plastic case and silicone strap.

Water Resistance

This watch is water-resistant up to 5 ATM (50 meters). This means it is suitable for everyday use, showering, and

swimming in shallow water. It is **not** suitable for diving, snorkeling, or high-pressure water activities. Do not operate buttons underwater.

Battery Replacement

When the battery needs replacement, the display may become dim or stop functioning. It is recommended to take your watch to a professional watch repair service for battery replacement to ensure proper sealing and water resistance.

TROUBLESHOOTING

- **Watch not working or display is dim:** The battery may be depleted. Replace the LR44 battery.
- **Incorrect time displayed:** Reset the time according to the 'Initial Time Setting' instructions.
- **Water inside the watch:** If water appears inside the watch, stop using it immediately and take it to a professional for inspection. Water damage is typically not covered under warranty if water resistance guidelines were not followed.
- **Buttons not responding:** Ensure the watch is not in a locked mode (if applicable) or that the battery is not low.

SPECIFICATIONS

Brand	XINJIA
Model Number	2400014-002
Display Type	Digital
Movement	Quartz
Case Material	Plastic
Case Diameter	44 mm
Case Thickness	15 mm
Band Material	Silicone
Band Width	2.2 cm
Band Length	23.5 cm
Clasp Type	Pin Buckle
Water Resistance	5 ATM (50 meters)
Battery Type	1 x LR44 (included)
Features	Date, Month, Day of Week, 24-hour display, Stopwatch, Alarm, Backlight

WARRANTY AND SUPPORT

This XINJIA Digital Sport Watch is covered by the manufacturer's standard warranty. Please retain your proof of purchase for any warranty claims. For technical support or service inquiries, please refer to the contact information provided with your purchase or visit the official XINJIA website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question