

[Manuals.plus](#) /

> [Fun World](#) /

> Fun World Adult Cafeteria Lady Costume Instruction Manual - Model 135094

Fun World 135094

Fun World Adult Cafeteria Lady Costume Instruction Manual

Model: 135094

INTRODUCTION

This manual provides instructions for the proper use and care of your Fun World Adult Cafeteria Lady Costume, Model 135094. Please read these instructions carefully before wearing and storing the costume to ensure its longevity and maintain its appearance.

PACKAGE CONTENTS

Verify that all components are present in your package:

- Dress with attached Apron
- Padded Bottom and Bust inserts
- Gloves
- Wig with Hair Net





Image: The complete Fun World Adult Cafeteria Lady Costume, including the blue dress with white apron, red wig with hair net, and yellow gloves.

SETUP AND ASSEMBLY

1. **Dress:** Carefully unfold the dress. The apron is pre-attached.
2. **Padded Inserts:** Insert the padded bottom and bust components into the designated pockets or areas within the

dress for desired shaping.

3. Wig and Hair Net:

- Place the hair net over your natural hair to secure it.
- Position the wig over the hair net, ensuring a comfortable and secure fit. Adjust as needed.

4. **Gloves:** Put on the gloves.

OPERATING INSTRUCTIONS (WEARING THE COSTUME)

Once assembled, the costume is ready for wear. Ensure all components are comfortably fitted and secured. The costume is designed for adult use.

MAINTENANCE AND CARE

Proper care will extend the life of your costume:

- **Cleaning:** Spot clean the dress and apron with a damp cloth and mild detergent as needed. Do not machine wash or tumble dry to prevent damage to the fabric and attached components.
- **Wig Care:** Gently hand wash the wig in cool water with a mild shampoo if necessary. Rinse thoroughly and air dry away from direct heat. Do not brush when wet.
- **Storage:** Store the costume in a cool, dry place away from direct sunlight. It is recommended to store it in a garment bag to protect it from dust and wrinkles.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Costume appears wrinkled	Improper storage or packaging	Hang the costume in a steamy bathroom or use a garment steamer on a low setting. Avoid direct iron contact.
Wig is tangled	Friction during wear or storage	Gently detangle with a wide-tooth comb, starting from the ends and working upwards. Use a wig conditioner if available.
Padded inserts do not stay in place	Movement during activity	Adjust the inserts within their pockets. If necessary, use safety pins to secure them discreetly to the inside of the dress.

SPECIFICATIONS

- **Model Number:** 135094
- **Brand:** Fun World
- **ASIN:** B07Q8286BZ
- **Fabric Type:** Net (components may vary)
- **Product Dimensions:** Approximately 15 x 19 x 1 inches (packaged)
- **Item Weight:** Approximately 1.6 Pounds
- **Department:** Unisex-Adult
- **First Available:** April 1, 2019

WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please contact the retailer where the costume was purchased or refer to the manufacturer's official website. Keep your purchase receipt as proof of purchase.



© 2023 Fun World. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.