

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bontempi](#) /

› [Bontempi 12 2407 Electronic Mini Keyboard User Manual](#)

## Bontempi 12 2407

# Bontempi 12 2407 Electronic Mini Keyboard User Manual

Model: 12 2407

## INTRODUCTION

Thank you for choosing the Bontempi 12 2407 Electronic Mini Keyboard. This manual provides essential information for the safe and proper use, setup, and maintenance of your new instrument. Please read it thoroughly before use and keep it for future reference.



Image showing the Bontempi 12 2407 Electronic Mini Keyboard, red in color, with 24 keys, displayed in its retail packaging. The packaging highlights features like '23 Demo' songs and 'Any Key Play'.

## SAFETY INFORMATION

**Warning: Not suitable for children under 36 months (3 years) due to small parts that could be swallowed.**

- Always supervise children during play.
- Do not expose the keyboard to water or excessive moisture.
- Do not drop or subject the keyboard to strong impacts.
- Only use the specified battery type and ensure correct polarity.

## PACKAGE CONTENTS

The package should contain the following item:

- 1 x Bontempi 12 2407 Electronic Mini Keyboard

## SETUP

### Battery Installation

1. Locate the battery compartment on the underside of the keyboard.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 2 x 1.5V batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

**Note:** Always remove exhausted batteries promptly and dispose of them responsibly. Do not mix old and new batteries or different types of batteries.

## OPERATION

### Power On/Off

Locate the power switch, usually on the front or side of the keyboard. Slide it to the 'ON' position to power on the instrument. Slide it to the 'OFF' position to turn it off.

### Playing Notes

Press any of the 24 keys to play individual musical notes. Experiment with different keys to create melodies.

### Demonstration Songs

The keyboard features 23 pre-recorded demonstration songs. To activate them, use the 'demosong' selector. Pressing the selector button will cycle through the available demonstration songs.

### Any Key Play Function

Engage the 'any key play' function using its dedicated selector. In this mode, pressing any key will advance the melody of a selected demonstration song, allowing interactive play.

## FEATURES

- 24 electronic keys
- 23 demonstration songs
- Selector for notes, demo songs, and 'any key play' function
- On/Off function

## MAINTENANCE

### Cleaning

To clean the keyboard, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the unit in water.

### Storage

When not in use, store the keyboard in a dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

- **No Sound:**

Check if the power switch is in the 'ON' position. Ensure batteries are correctly installed and not depleted. Replace batteries if necessary.

- **Keys Not Responding:**

Ensure the keyboard is powered on. If the issue persists after checking batteries, contact customer support.

## SPECIFICATIONS

Feature	Specification
Model Number	12 2407
Dimensions (L x W x H)	34.5 x 10 x 3 cm (13.58 x 3.94 x 1.18 inches)
Weight	280 grams (0.62 lbs)
Number of Keys	24
Power Supply	2 x 1.5V batteries (not included)
Material	Plastic
Recommended Age	3 years and up
UPC	047663335452

## WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not available in this manual. Please refer to the product packaging or the manufacturer's official website for details on warranty coverage and how to contact customer service for assistance.

© 2026 Bontempi. All rights reserved.