

Sony FBA-hw-ps3-67576

Sony PlayStation 3 160GB (Fat) Video Game Console User Manual

Model: FBA-hw-ps3-67576 | Brand: Sony

1. INTRODUCTION

Welcome to your Sony PlayStation 3 160GB console. This manual provides essential information for setting up, operating, and maintaining your console. Please read it thoroughly to ensure proper use and enjoyment of your device. This product is a renewed item, professionally inspected and tested to function like new.

2. PRODUCT OVERVIEW

The Sony PlayStation 3 (Fat) is a home video game console featuring a 160GB storage capacity. It is powered by the Cell Broadband Engine processor and includes 256 MB of RAM. Key connectivity options include Composite RCA, USB, and HDMI. The console is Blu-Ray compatible and offers Wi-Fi capability for internet access. The sound system delivers high-quality audio output.



This image displays the top and front view of the Sony PlayStation 3 (Fat) console, highlighting its sleek black design and disc slot.

3. SETUP

1. **Connect to Television:** Connect the console to your television using an HDMI cable for optimal video and audio quality. Alternatively, use Composite RCA cables if your television does not support HDMI.
2. **Power Connection:** Connect the power cord to the console and then to an electrical outlet.
3. **Turn On:** Turn on your television and select the correct input source. Press the power button on the console.
4. **Initial Setup:** Follow the on-screen instructions for initial setup, including language selection, date/time settings, and network configuration.
5. **Controller Pairing:** Connect your PlayStation 3 controller to the console using a USB cable. Press the PlayStation button on the controller to pair it. Once paired, the USB cable can be disconnected for wireless use.

4. OPERATING INSTRUCTIONS

- **Power On/Off:** To power on the console, press the power button located on the front. To power off, hold the power button until the system shuts down, or use the XMB (XrossMediaBar) menu by navigating to 'Users' > 'Turn Off System'.
- **Inserting/Ejecting Discs:** Insert Blu-ray or DVD discs into the disc slot on the front of the console. To eject a disc, press the eject button located near the disc slot.
- **Navigating the XMB:** Navigate the system menu, known as the XrossMediaBar (XMB), using your connected controller. The XMB allows access to games, movies, music, photos, and system settings.
- **Playing Games and Movies:** Select the desired game or movie icon from the XMB and press the X button to start.
- **PlayStation Network:** Connect to the PlayStation Network for online gaming, digital content downloads, and other services. An internet connection is required.

5. MAINTENANCE

- **Ventilation:** Always place the console in a well-ventilated area to prevent overheating. Ensure there is adequate space around the console for airflow.
- **Cleaning:** Regularly clean the exterior of the console with a soft, dry cloth. Do not use liquid cleaners or abrasive materials. Ensure vents are free from dust and obstructions.
- **Software Updates:** Periodically check for and install system software updates to maintain optimal performance and access new features. Updates can typically be found under the 'Settings' menu on the XMB.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches to prevent read errors.

6. TROUBLESHOOTING

- **Console Does Not Power On:** Verify the power cord is securely connected to both the console and the electrical outlet. Try a different outlet if necessary.
- **No Video Output:** Ensure the video cable (HDMI or Composite RCA) is correctly connected to both the console and the television. Confirm that the correct input source is selected on your TV.
- **Disc Read Errors:** Ensure the disc is clean and free of scratches, and inserted correctly into the disc slot. Try a different disc to determine if the issue is with the console or the disc.
- **Controller Not Responding:** Ensure the controller is charged. Reconnect it via USB cable and press the PlayStation button to re-pair it.
- **System Freezes/Crashes:** If the system freezes, hold the power button until it shuts down. If issues persist, consider restoring the file system or rebuilding the database from the Safe Mode menu (refer to online Sony support for instructions).

7. SPECIFICATIONS

Feature	Detail
Storage Capacity	160 GB
Processor	Cell Broadband Engine
RAM	256 MB
Connectivity	HDMI, USB, Composite RCA, Wi-Fi
Disc Drive	Blu-Ray/DVD
Dimensions	10 x 6 x 12 inches
Weight	10.84 pounds

8. WARRANTY AND SUPPORT

This renewed product is covered by the Amazon Renewed Guarantee. For specific warranty details and support related to your purchase, please refer to the documentation provided with your product or visit the [Amazon Renewed support page](#). For technical assistance with the PlayStation 3 console itself, please visit the official Sony PlayStation support website.

