

[manuals.plus](#) /

› [LUTEC](#) /

› [Lutec Trumpet 5626101125 LED Outdoor Wall Light User Manual](#)

## **LUTEC 5626101125**

# **Lutec Trumpet 5626101125 LED Outdoor Wall Light User Manual**

Model: 5626101125

## **1. INTRODUCTION**

---

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your Lutec Trumpet 5626101125 LED Outdoor Wall Light. Please read these instructions thoroughly before installation and retain them for future reference.



Figure 1.1: Lutec Trumpet 5626101125 LED Outdoor Wall Light, front view.

## 2. SAFETY INFORMATION

---

- **Electrical Safety:** Installation must be performed by a qualified electrician in accordance with local wiring regulations. Ensure the main power supply is switched off before commencing any work.
- **Outdoor Use:** This product is designed for outdoor installations and has an IP54 rating, indicating protection against dust ingress and splashing water.
- **Handling:** Handle the luminaire with care to avoid damage to the LED components or housing.
- **Power Source:** The light operates on a wired electrical connection (230 Volts).

### 3. PACKAGE CONTENTS

---

Verify that all components are present before beginning installation:

- 1x Lutec Trumpet 5626101125 LED Outdoor Wall Light (Luminaire)

*Note: Mounting hardware (screws, wall plugs) may not be included and should be sourced separately if required.*

### 4. SETUP AND INSTALLATION

---

The Lutec Trumpet 5626101125 is designed for wall mounting (flush mount installation).

1. **Preparation:** Ensure the power supply to the installation area is completely disconnected at the main circuit breaker.
2. **Mounting Location:** Choose a suitable outdoor wall location. Consider the desired light distribution and ensure the surface is stable and can support the luminaire's weight (400g).
3. **Marking:** Use the luminaire's mounting plate as a template to mark the drilling points on the wall.
4. **Drilling:** Drill holes at the marked points. Insert appropriate wall plugs if necessary.
5. **Wiring:** Connect the electrical wires from the wall to the luminaire's terminal block. Ensure correct polarity (Live, Neutral, Earth) according to local electrical codes. Secure all connections.
6. **Mounting the Luminaire:** Attach the luminaire securely to the wall using appropriate screws. Ensure a tight seal to maintain the IP54 rating.
7. **Final Check:** Once installed, restore power to the circuit.



Figure 4.1: Example of the Lutec Trumpet wall light installed on an exterior wall.

### 5. OPERATING INSTRUCTIONS

---

The Lutec Trumpet 5626101125 LED Outdoor Wall Light operates via a standard external wall switch connected to its electrical supply. There is no integrated tactile switch for direct control on the unit itself for typical outdoor

installations.

- **Turning On/Off:** Use the connected wall switch to turn the light on or off.
- **Light Output:** The integrated LED provides 600 lumens of warm white light at 4000 Kelvin.

## 6. MAINTENANCE

---

The Lutec Trumpet wall light is designed for durability and requires minimal maintenance.

- **Cleaning:** To clean the luminaire, ensure the power is off. Wipe the surface with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the anthracite powder coating and LED diffuser.
- **Inspection:** Periodically inspect the luminaire for any signs of damage, loose connections, or wear. If any issues are found, disconnect power and consult a qualified electrician.
- **LED Module:** The LED module is integrated and not user-replaceable.

## 7. TROUBLESHOOTING

---

If you encounter issues with your Lutec Trumpet wall light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply, faulty wiring, or damaged LED.	Check circuit breaker. Verify wiring connections (consult electrician). If LED is damaged, the unit may need replacement.
Light flickers.	Unstable power supply or loose connection.	Ensure stable power. Check wiring connections (consult electrician).
Water ingress inside the luminaire.	Improper installation or damaged seal.	Immediately disconnect power. Re-check installation for proper sealing. If seal is damaged, the unit may need replacement.

If the problem persists after attempting these solutions, contact a qualified electrician or Lutec customer support.

## 8. SPECIFICATIONS

---

Technical details for the Lutec Trumpet 5626101125 LED Outdoor Wall Light:

Feature	Specification
Brand	LUTEC
Model Number	5626101125
Dimensions (L x W x H)	15 x 13 x 18 cm
Weight	400 grams
Material	Die-cast aluminum
Finish	Powder coating (Anthracite)

Feature	Specification
Ingress Protection (IP) Rating	IP54
Power Consumption	8 Watts (Max), 6 Watts (Nominal)
Voltage	230 Volts
Luminous Flux	600 lm
Color Temperature	4000 Kelvin (Warm White)
Light Source Type	Integrated LED
Energy Efficiency Class	D
EPREL Registration Number	819436 ( <a href="#">View EPREL Data</a> )

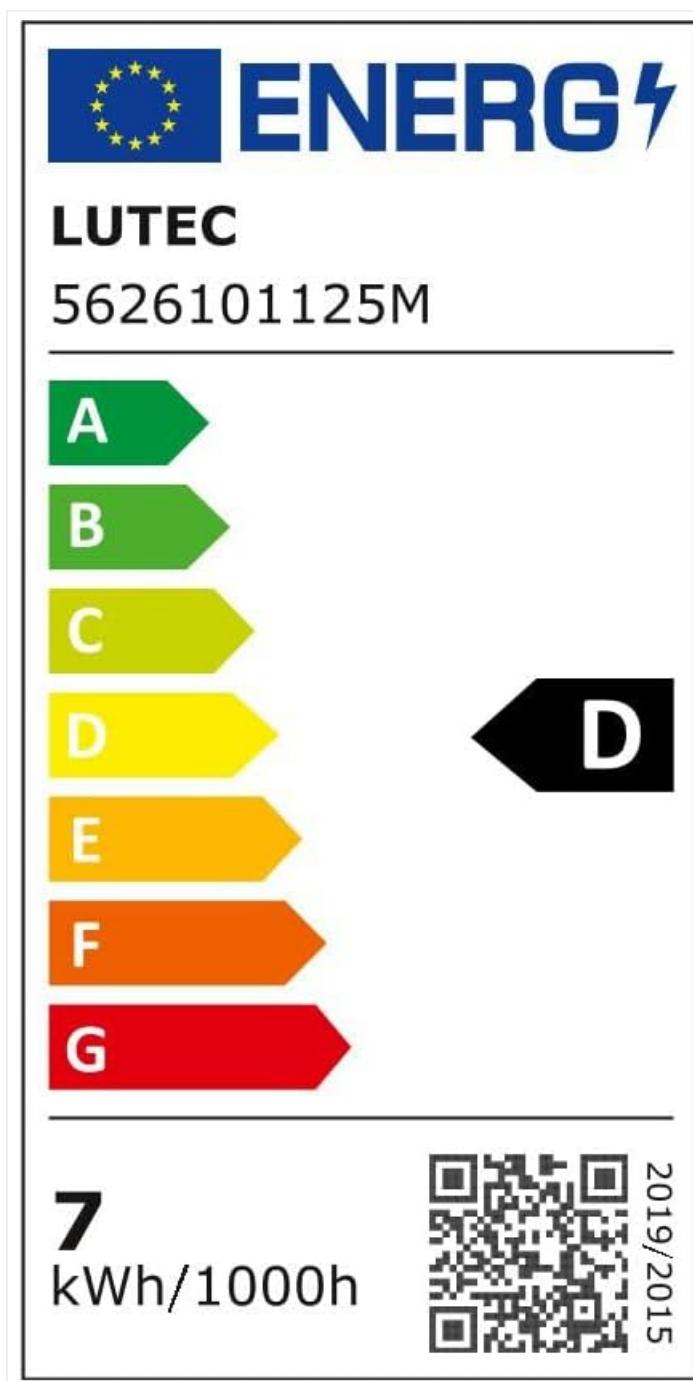


Figure 8.1: Energy label for Lutec Trumpet 5626101125, showing energy efficiency class D.

## 9. WARRANTY AND SUPPORT

---

Information regarding spare parts availability for this product is not available. For warranty claims or technical support, please contact Lutec customer service.

- **Manufacturer:** Lutec
- **Address:** Lutec Europe NV, Herentalsebaan 425, 2160 Wommelgem, Belgium
- **Website:** [www.lutec.com](http://www.lutec.com)
- **Email:** [info@lutec-europe.com](mailto:info@lutec-europe.com)
- **Telephone:** +3232845162