



Manuals.plus /

› VINABTY /

› VINABTY MKJ42519618 Replacement Remote Control for LG TVs User Manual

VINABTY MKJ42519618

VINABTY MKJ42519618 Replacement Remote Control User Manual

Model: MKJ42519618

INTRODUCTION

This manual provides instructions for the VINABTY MKJ42519618 replacement remote control. This remote is designed to function as a direct replacement for various LG LED, LCD, and Plasma TV models without requiring any programming.

Please read this manual thoroughly before using the remote control to ensure proper operation and to maximize its lifespan.

PACKAGE CONTENTS

- 1 x VINABTY MKJ42519618 Replacement Remote Control
- (Batteries are not included and must be purchased separately)

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

Note: This remote control does not require any programming. Once batteries are installed, it is ready for use with compatible LG TVs.

OPERATING INSTRUCTIONS

The VINABTY MKJ42519618 remote control is designed to replicate the functions of your original LG TV remote. Point the remote directly at your LG TV's infrared receiver for optimal performance.

Key Functions Overview





Image: Front view of the VINABTY MKJ42519618 remote control, showing all buttons and their labels. The remote is black with grey buttons and white text.

Common Button Functions

Button	Function
POWER	Turns the TV on or off.
INPUT	Selects the input source (e.g., HDMI, AV, Component).
MENU	Accesses the TV's main menu.
Q.MENU	Accesses the Quick Menu for common settings.
GUIDE / TV/RAD	Displays the electronic program guide or switches between TV and Radio modes.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections.
RETURN	Returns to the previous screen or menu.
EXIT	Exits the current menu or function.
INFO	Displays information about the current program or input.
AV MODE	Adjusts audio/video modes.
Volume Up/Down (+/-)	Adjusts the TV volume.
MUTE	Mutes or unmutes the TV audio.
Channel Up/Down (PAGE P +/-)	Changes TV channels.
Number Buttons (0-9)	Direct channel selection.
LIST	Displays the channel list.
Q.VIEW	Switches to the previously viewed channel.
Color Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or applications.
TEXT	Accesses Teletext.
T.OPT	Teletext options.
SUBTITLE	Toggles subtitles on/off.
SIMPLINK	Controls connected LG devices via HDMI-CEC.

COMPATIBILITY

This remote control is compatible with a wide range of LG LED, LCD, and Plasma TV models. A partial list of compatible models includes:

- 19LU4010, 19LU5000, 19LU5010, 19LU5020
- 19LH2000, 19LH2020, 19LH201c
- 22lg3100, 22LH2000, 22LU5000, 22LU5010, 22LU5020

- 26lg3100, 26LH2000, 26LH2010, 26LU5000, 26LU5010, 26LU5020
- 32LF2500, 32LF2510, 32lg2100, 32lg2200
- 32LH2000, 32LH2010, 32LH3010, 32LH3800, 32LH4000
- 32LH4010, 32LH4020, 32LH5000, 32LH5010, 32LH5020
- 32LH7000, 32LH7020, 32LH201c-za, 32LH301c
- 37LF2500, 37LF2510, 37lg2100, 37LH2000
- 37LH2010, 37LH3000, 37LH3010, 37LH4000
- 37LH4010, 37LH5010, 37LH7000, 37LH7020, 37LH201c
- 42LF2500, 42lg2100, 42LH2000, 42LH2010
- 42LH3000, 42LH3010, 42LH4000, 42LH4010
- 42LH4900, 42LH5010, 42LH5020, 42LH7000, 42LH201c
- 47LH3010, 47LH4000, 47LH4010, 47LH4020
- 47LH5000, 47LH5010, 47LH5020, 47LH7000, 47LH7030
- 42pq35 series, 50pq35 series, 42pq65 series, 50ps65 series
- 50ps70 series, 60ps70 series, 50ps80 series, 60ps80 series

If your LG TV model is not listed, but uses a remote similar to the MKJ42519618, it is likely compatible. This remote is a direct replacement and does not require complex setup.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

Troubleshooting Guide

Problem	Possible Cause / Solution
Remote not working.	<ul style="list-style-type: none">◦ Batteries: Check if batteries are inserted correctly (+/-). Replace with new AAA batteries.◦ Line of Sight: Ensure there are no obstructions between the remote and the TV's infrared sensor.◦ Distance: Make sure you are within the effective range of the TV's IR receiver.
Some buttons not responding.	<ul style="list-style-type: none">◦ Batteries: Low batteries can cause intermittent functionality. Replace them.◦ Compatibility: Verify your TV model is compatible. While this remote is a direct replacement, some specific advanced functions might vary slightly from an original remote for certain TV models.◦ Dirt: Clean the remote surface, especially around unresponsive buttons, with a dry cloth.
TV responds slowly to commands.	<ul style="list-style-type: none">◦ Batteries: Batteries may be weak. Replace them.◦ Interference: Other electronic devices or strong light sources (e.g., direct sunlight) can interfere with the IR signal.

SPECIFICATIONS

- **Model:** MKJ42519618
- **Brand:** VINABTY
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** LG Televisions (LED, LCD, Plasma)
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** Approximately 9 x 2 x 0.55 inches (22.86 x 5.08 x 1.4 cm)
- **Weight:** Approximately 3 ounces (85 grams) (without batteries)
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

Specific warranty information for this VINABTY product may vary. Please refer to the product packaging or contact your retailer for details regarding warranty coverage.

For technical support or further inquiries, please contact the seller or refer to the VINABTY official website if available. When contacting support, please have your product model number (MKJ42519618) and purchase details ready.