

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TOUCHBeauty](#) /

› [TOUCHBeauty TB-1718 3-in-1 Electric Scalp Massager and Facial Cleansing Brush User Manual](#)

TOUCHBeauty TB-1718

TOUCHBeauty TB-1718 3-in-1 Electric Scalp Massager and Facial Cleansing Brush

User Manual

PRODUCT OVERVIEW

The TOUCHBeauty TB-1718 is a versatile 3-in-1 device designed for both scalp massage and facial cleansing. It features sonic vibration technology to enhance blood circulation, relieve tension, and provide effective facial cleansing. The device comes with interchangeable heads to suit various needs.



- Promote blood circulation
- Relieve headache
- Relieve stress
- Cleans pores
- Remove oil
- Remove makeup

Image: The TOUCHBeauty TB-1718 device showcasing its dual functionality for scalp massage and facial cleansing, highlighting benefits such as promoting blood circulation, relieving headache and stress, cleansing pores, and removing oil and makeup.

Key Features:

- Interchangeable Heads:** Includes a silicone scalp massage head, a plated scalp massage head, and a facial cleansing brush head.
- Sonic Vibration:** Promotes scalp blood circulation and provides effective facial cleansing.
- Adjustable Intensity:** Vibration intensity can be adjusted to personal preference.
- Cordless Operation:** Powered by 2 AA batteries (not included) for portability.
- Ergonomic Design:** Comfortable to hold and use on various body parts.



Image: Detailed view of the two scalp massage heads: an eco-friendly silicone head with 19 individual nodes for a large touching area, and a plated massage head with different node lengths designed to fit the scalp.

SETUP

1. Battery Installation

1. Locate the battery cover at the bottom of the device.
2. Gently twist or slide the battery cover to open it.
3. Insert 2 AA batteries, ensuring correct polarity (+/-).
4. Replace the battery cover securely.

2. Attaching/Detaching Massage Heads

The massage heads are designed for easy installation and removal.

- To attach a head: Align the desired head with the device's connector and gently push until it clicks into place.
- To detach a head: Firmly pull the head away from the device.

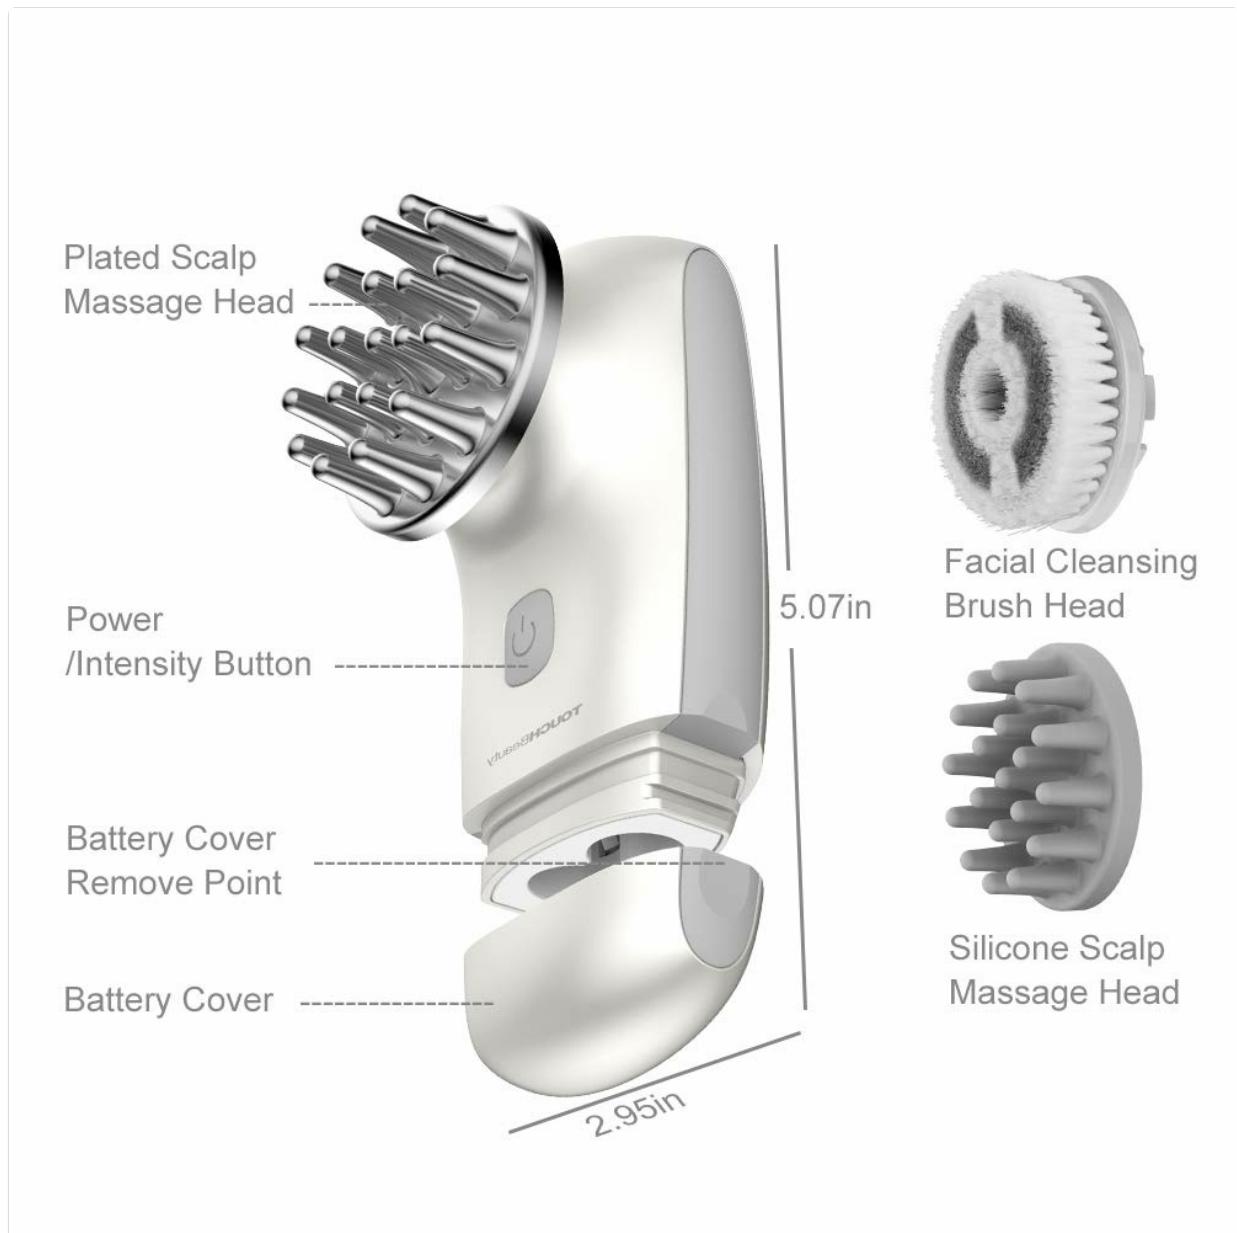


Image: Labeled diagram of the TOUCHBeauty TB-1718, identifying the plated scalp massage head, facial cleansing brush head, silicone scalp massage head, power/intensity button, battery cover, and battery cover remove point.

OPERATING INSTRUCTIONS

1. Power On/Off

- To turn on: Short press the power button located on the device.
- To turn off: Short press the power button again.

2. Adjusting Vibration Intensity

The device offers infinitely variable speed for customized use.

- While the device is on, long press the power button.
- The vibration intensity will cycle between strong and weak. Release the button when the desired intensity is reached.

Infinitely variable speed

Press the power button to turn on the device. Long press the power button to adjust the intensity level according to your needs.



Image: A hand demonstrating how to long-press the power button to adjust the infinitely variable speed and vibration intensity of the device, indicated by a visual scale from 68 to 100Hz.

3. Using the Scalp Massager Heads

Attach either the silicone or plated massage head. Gently apply the vibrating head to your scalp. Move it in small circles or back and forth motions. The silicone head provides a softer massage, while the plated head offers a more intense experience.

4. Using the Facial Cleansing Brush Head


Attach the facial cleansing brush head. Dampen your face and apply your preferred facial cleanser. Gently move the brush in circular motions across your face. The sonic vibration helps to remove impurities, excess oil, and makeup residues.

Osilation Cleansing Mode

Compared to rotating cleansing, it has less friction to facial skin



Traditional hand washing

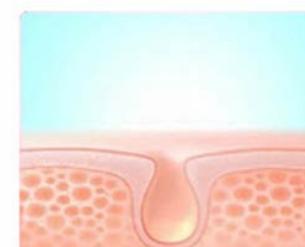

6X More Efficient Cleansing

Image: A visual comparison illustrating the effectiveness of the oscillation cleansing mode compared to traditional hand washing, showing how the device provides 6X more efficient cleansing with less friction to facial skin.

5. Recommended Usage Areas

The device can be used on various parts of the body for relaxation and cleansing.



Head



Neck



Shoulder



Arm



Waist



Back

Image: A collage demonstrating the versatility of the device, showing it being used for massage on the head, neck, shoulder, arm, waist, and back.

MAINTENANCE

Cleaning the Device and Heads

- After each use, detach the massage or cleansing head.
- Rinse the heads under running water. For the facial cleansing brush, you may use a mild soap.
- Wipe the main body of the device with a soft, damp cloth. Do not submerge the main body in water.
- Ensure all parts are completely dry before reattaching or storing.

Storage

- Store the device and its accessories in a cool, dry place, away from direct sunlight.
- If the device will not be used for an extended period, remove the AA batteries to prevent leakage.

TROUBLESHOOTING

Device Not Turning On:

- **Check Batteries:** Ensure 2 AA batteries are correctly installed with the proper polarity. Replace with new batteries if necessary.
- **Battery Cover:** Make sure the battery cover is securely closed.

Weak Vibration:

- **Battery Level:** The batteries may be low. Replace them with fresh AA batteries.
- **Intensity Setting:** Adjust the vibration intensity by long-pressing the power button until the desired strength is achieved.

Heads Not Attaching Securely:

- **Alignment:** Ensure the head is correctly aligned with the device's connector before pushing.
- **Obstruction:** Check for any debris or obstruction in the connection area.

SPECIFICATIONS

Feature	Detail
Model Number	TB-1718
Power Source	2 x AA Batteries (not included)
Product Dimensions	13.5 x 6.5 x 4.5 cm
Item Weight	454 g
Material	Metal (Plated head), Silicone (Silicone head)
Special Features	Body massage, Fatigue relief, Scalp massage, Facial cleansing
Cordless	Yes
Manufacturer	TOUCHBeauty Beauty & Health (Shenzhen) Co. LTD
Country of Origin	China

WARRANTY AND SUPPORT

Warranty Information

This product may be eligible for an extended warranty. Please refer to your purchase documentation or contact your retailer for specific warranty terms and conditions. A 1-Year Extended Warranty by Onsitego may be available for purchase separately.

Customer Support

For any questions, concerns, or technical assistance regarding your TOUCHBeauty TB-1718 device, please contact the retailer or the manufacturer's customer support. Refer to the packaging or official TOUCHBeauty website for contact details.