

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Razor](#) /

› [Razor E Prime Air Adult Electric Scooter Instruction Manual](#)

Razor E Prime Air

Razor E Prime Air Adult Electric Scooter Instruction Manual

Model: E Prime Air

INTRODUCTION

The Razor E Prime Air electric scooter combines modern design with efficient electric power, offering a smooth and comfortable ride. It features an 8-inch pneumatic front tire and an 8-inch flat-free, airless rear tire designed to handle various terrains. The scooter is equipped with a 250W brushless hub motor for increased traction and control, and includes a patent-pending anti-rattle folding technology for convenient portability and a quiet ride.

Key Features:

- Sleek design with high-torque electric hub motor.
- Large 8-inch pneumatic (air-filled) front tire and 8-inch flat-free, airless rear tire for a smooth ride.
- Rear-wheel drive for enhanced traction and control.
- Patent-pending anti-rattle folding technology for portability.

WHAT'S IN THE BOX

Your Razor E Prime Air Adult Electric Scooter package includes the following items:

- E Prime Air Scooter
- Charger
- Allen tool for assembly



Image: Front view of the Razor E Prime Air Electric Scooter, showing the handlebars and front wheel.

SETUP

Initial Assembly:

1. Carefully remove the scooter and all components from the packaging.
2. Attach the handlebars to the main stem. Use the provided Allen tool to securely tighten the handlebar bolts.
3. Before first use, ensure the pneumatic front tire is inflated to the correct PSI (as indicated on the tire sidewall, typically 60 PSI). A standard car tire inflator may require an adapter due to the valve stem's angle.

Charging the Battery:

IMPORTANT NOTICE: Before first use, charge the battery for at least 5 hours. This initial charge is crucial for battery longevity and performance.



Image: Close-up of the scooter's stem showing the battery indicator lights (blue, yellow, red) and the power button.

Connect the charger to the scooter's charging port and then to a standard wall outlet. The indicator light on the charger will change to indicate charging status (e.g., red for charging, green for fully charged).

OPERATING INSTRUCTIONS

Powering On/Off:

- To power on, press and hold the power button located on the stem until the battery indicator lights illuminate.
- To power off, press and hold the power button again until the lights turn off.

Riding the Scooter:

1. Place one foot firmly on the deck of the scooter.
2. Push off with your other foot to gain initial momentum (kick-start).
3. Once moving, gently press the thumb throttle on the handlebar to engage the motor. The scooter will accelerate up to its maximum speed of 15 mph.
4. To slow down or stop, release the throttle and apply the electronic brake lever on the handlebar. For emergency stops or more aggressive braking, also press down on the rear fender brake with your foot.

Folding Mechanism:

The E Prime Air features a compact, anti-rattle folding technology. To fold the scooter, locate the folding mechanism near the base of the stem. Follow the instructions in the included manual for specific folding and unfolding procedures to ensure safe operation.



Image: A person holding the Razor E Prime Air Electric Scooter in its folded position, highlighting its compact design for easy transport.

Official Product Video:

Your browser does not support the video tag.

Video: Razor E Prime Air Ride Video. This video demonstrates the scooter's features, folding mechanism, and riding experience in various urban settings.

MAINTENANCE

- **Tires:** Regularly check the air pressure of the pneumatic front tire and inflate to the recommended PSI. Inspect both tires for wear and tear.
- **Battery:** Charge the battery fully after each use. Avoid completely draining the battery to prolong its lifespan. Store the scooter in a cool, dry place when not in use.
- **Brakes:** Ensure the electronic brake and rear fender brake are functioning correctly. Adjust if necessary according to the full instruction manual.
- **General Cleaning:** Wipe down the scooter with a damp cloth after use. Avoid using harsh chemicals or excessive water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Scooter not turning on	Low battery; loose connections	Charge the battery for at least 5 hours. Check all visible connections.
Reduced speed or power	Low battery; tire pressure; rider weight exceeds limit; riding uphill	Ensure battery is fully charged. Inflate tires to correct PSI. Verify rider weight is within limits. Scooter performance may decrease on inclines.
Brakes not responding	Brake lever adjustment needed; worn brake components	Inspect brake lever and cable. Refer to the full manual for brake adjustment or contact customer support.

For more detailed troubleshooting, please refer to the complete user manual or contact Razor customer support.

SPECIFICATIONS

Feature	Detail
Brand	Razor
Model Name	E Prime Air
Color	Black
Age Range (Description)	Adult
Special Feature	Foldable
Weight Limit	176 Pounds
Number of Wheels	2
Wheel Material	Rubber
Frame Material	Aluminum
Item Weight	9.9 Kilograms
Handlebar Type	Adjustable
Wheel Size	8 Inches
Wheel Type	Pneumatic (Front)
Suspension Type	Front Suspension
Grip Type	Rubber
Brake Style	Rear Braking
Charging Time	6 Hours
Recommended Uses	Urban commuting, short-distance transportation

WARRANTY AND SUPPORT

Warranty Information:

The Razor E Prime Air Electric Scooter comes with a **90-day Limited Manufacturer Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support:

For technical assistance, troubleshooting, or warranty inquiries, please contact Razor USA, LLC directly. Contact information can typically be found on the manufacturer's website or in the full product manual.

Manufacturer: Razor USA, LLC

© 2024 Razor USA, LLC. All rights reserved.