



Manuals.plus /

› Fiskars /

› Fiskars 7-in-1 Garden Shears Multi-Tool Instruction Manual (Model 356922)

Fiskars 356922

Fiskars 7-in-1 Garden Shears Multi-Tool Instruction Manual

Model: 356922

1. INTRODUCTION

The Fiskars 7-in-1 Garden Shears Multi-Tool is designed for a wide range of gardening tasks, offering versatility and durability. This tool combines multiple functions to streamline your gardening efforts, from precise plant trimming to cutting various materials.

Key Features:

- Pruning Shears for clean, healthy cuts.
- Titanium-Enhanced Knife (when separated).
- Integrated Wire Cutter.
- Twine Cutter.
- Bottle Opener.
- Power Notch for cutting light rope.
- Pointed Awl Tip for piercing.
- Sheath with built-in Tape Cutter and Sharpener.



Image 1: Overview of the Fiskars 7-in-1 Garden Shears with key features highlighted.

Your browser does not support the video tag.

Video 1: A brief demonstration of the 7-in-1 Garden Shears, showcasing its various functions and design.

2. SETUP

Unpacking and Initial Inspection

Upon receiving your Fiskars 7-in-1 Garden Shears, carefully remove them from the packaging. Inspect the shears and the accompanying sheath for any signs of damage. Ensure all components are present.

Familiarizing with Components

The shears feature ergonomically sculpted handles for comfortable use and precision-ground steel blades for effective cutting. The design allows for easy separation of the blades for enhanced functionality and cleaning.



Image 2: The Fiskars 7-in-1 Garden Shears in their standard configuration.

3. OPERATING INSTRUCTIONS

General Cutting (Pruning Shears)


Use the shears for trimming plants, cutting nursery pots, bags, and other general gardening tasks. The precision-ground steel blades ensure clean cuts all the way to the tip, even in tight spaces.



Image 3: Demonstrating the shears cutting through burlap, highlighting their strength for various materials.

Titanium-Enhanced Knife

The shears feature a take-apart design. To separate, open the shears fully and disengage the pivot point. This allows one blade to be used as a titanium-enhanced knife for cutting larger objects or for specialized tasks.

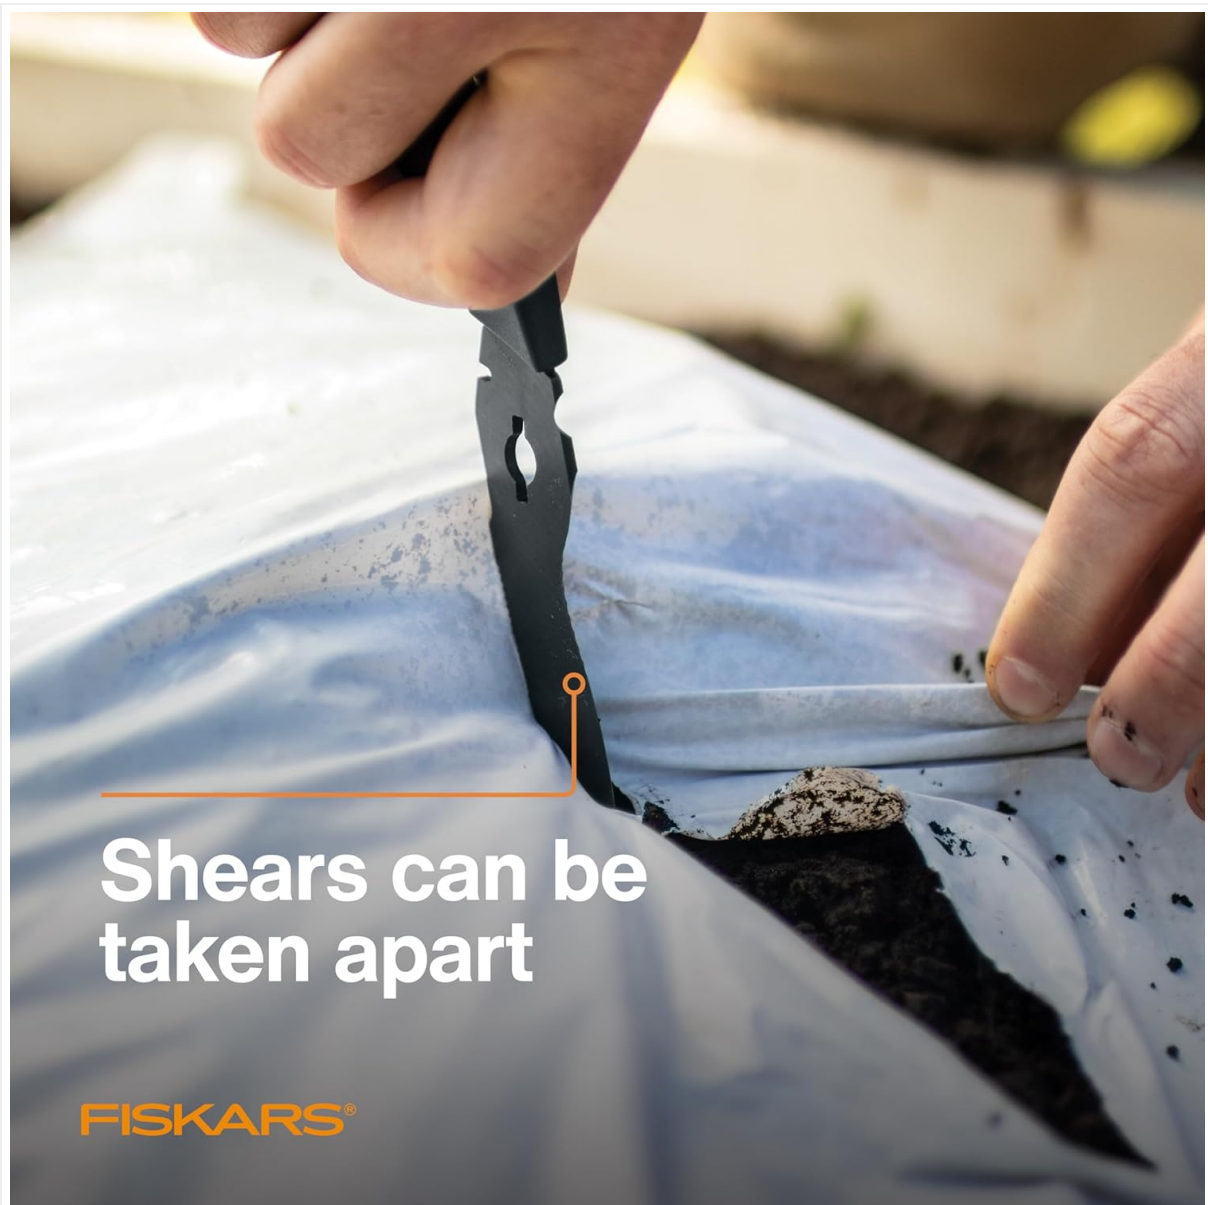

Shears can be taken apart

FISKARS®

Image 4: The shears disassembled, illustrating their dual functionality as a knife.

Wire Cutter

The shears include an integrated wire cutter located near the pivot point. Position the wire in the designated notch and squeeze the handles to cut. This feature is designed to cut wire without damaging the main scissor blades.



Versatile multi-tool

Easily cut wire without damaging the scissor blades

FISKARS®

Image 5: Using the dedicated wire cutter feature of the shears.

Twine Cutter

A specific notch is provided for cutting twine. Place the twine in the notch and close the shears. This ensures a clean cut for various gardening ties.



Image 6: The shears being used to cut twine, a common gardening task.

Bottle Opener

A bottle opener is conveniently integrated into one of the blades. Use it to open bottled beverages as needed.



Image 7: Utilizing the built-in bottle opener feature.

Power Notch

The power notch is designed for cutting light rope. Position the rope in the notch and apply pressure to cut through it efficiently.



Image 8: Cutting a rope using the power notch for increased leverage.

Pointed Awl Tip

The pointed awl tip can be used for piercing small holes in materials like cardboard or leather, useful for various crafting or gardening applications.

Your browser does not support the video tag.

Video 2: A demonstration of piercing holes, illustrating the utility of the awl tip.

4. MAINTENANCE

Cleaning

To maintain optimal performance and hygiene, clean the shears after each use. The take-apart design facilitates thorough cleaning of both blades. Wash with mild soap and water, then dry completely to prevent rust.

Sharpening

The included sheath features a built-in sharpener to keep the stainless steel blades sharp between uses. Carefully slide each blade through the sharpener a few times, maintaining the original blade angle.



Image 9: The sheath with its integrated sharpener, designed for convenient blade maintenance.

Your browser does not support the video tag.

Video 3: A user discussing the durability and sharpness of the shears, emphasizing their long-lasting performance.

5. TROUBLESHOOTING

Common Issues and Solutions

- **Dull Blades:** If blades become dull, use the built-in sharpener in the sheath or a suitable sharpening tool. Regular sharpening is recommended.
- **Stiff Action:** Clean any debris from the pivot area and apply a small amount of lubricating oil to ensure smooth operation.
- **Rust Spots:** Although made of stainless steel, prolonged exposure to moisture can cause rust. Clean and dry thoroughly after each use. If rust appears, gently scrub with a fine abrasive pad and apply oil.

6. SPECIFICATIONS

Feature	Detail
Brand	Fiskars
Model Number	356922
Style	Garden Shears (Original)
Product Dimensions	11"L x 4.44"W
Item Weight	0.01 Ounces
Blade Material	Alloy Steel
Handle Material	Alloy Steel
Blade Edge	Straight
Hand Orientation	Ambidextrous



Image 10: Product dimensions for the Fiskars 7-in-1 Garden Shears.

7. WARRANTY AND SUPPORT

Lifetime Warranty

Fiskars tools are designed for longevity and guaranteed to maintain exceptional performance season after season. This product includes a Lifetime Warranty. For detailed information and to register your product, please visit the official Fiskars website.

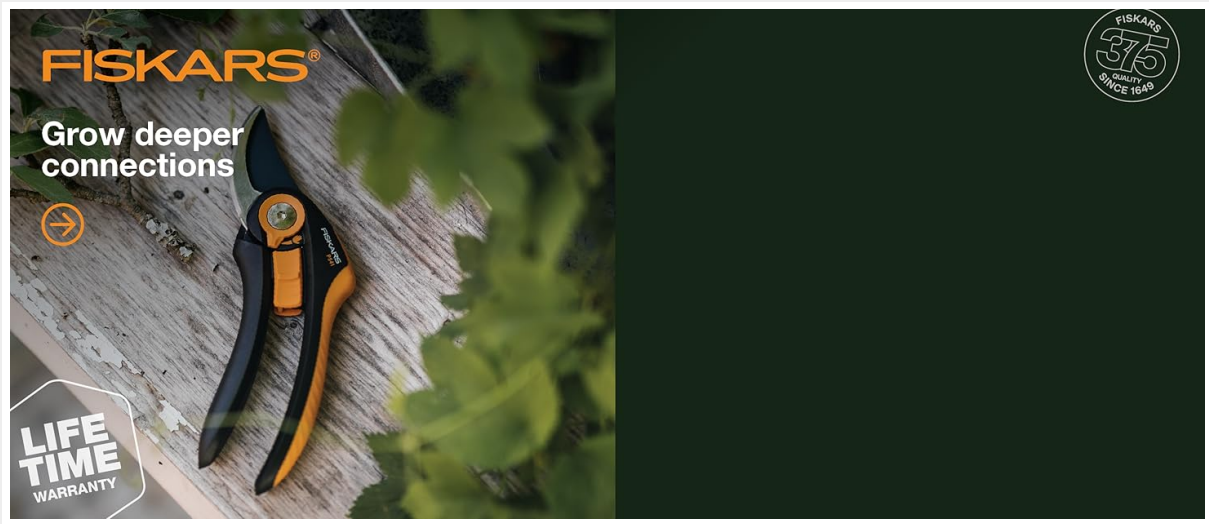


Image 11: Fiskars commitment to quality and lifetime warranty.

Customer Support

For further assistance, product inquiries, or warranty claims, please refer to the contact information provided on the official Fiskars website or product packaging.