

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [SOS ACCESSOIRE](#) /

› SOS ACCESSOIRE MAGIMIX Food Processor Bowl Kit 4100/4200 (Models 17104, 17601) Instruction Manual

SOS ACCESSOIRE 4100/4200, 17104, 17601

SOS ACCESSOIRE MAGIMIX Food Processor Bowl Kit 4100/4200 Instruction Manual

Models: 4100/4200, 17104, 17601

INTRODUCTION

This manual provides comprehensive instructions for the SOS ACCESSOIRE MAGIMIX Food Processor Bowl Kit, designed for System 4100/4200 models (17104, 17601). Please read this manual carefully before assembly, operation, or maintenance to ensure safe and efficient use of your product. Keep this manual for future reference.

PRODUCT OVERVIEW AND COMPONENTS

The MAGIMIX Food Processor Bowl Kit is a complete set of replacement and accessory parts for your compatible food processor. It includes the main bowl and various tools to expand your culinary capabilities.



Image showing the complete MAGIMIX Food Processor Bowl Kit, including the main bowl and various accessories.

Included Components:

- Complete Bowl
- Lid
- Large Hopper
- Mini Blade
- Chopping Blade
- S-shaped Blade
- Kneading Blade
- Shredding Disc
- 2mm Grater
- 2mm Slicer
- Disc Support
- Whisk (Batteur à blancs)

- Slicing Disc (Éminceur)

SETUP

1. **Unpack Components:** Carefully remove all parts from the packaging and ensure all listed components are present.
2. **Initial Cleaning:** Before first use, wash all components that will come into contact with food in warm, soapy water. Rinse thoroughly and dry. Refer to the "Maintenance and Cleaning" section for detailed instructions.
3. **Assemble Bowl:** Place the complete bowl onto the motor base of your compatible MAGIMIX food processor (models 4100/4200, 17104, 17601). Ensure it is securely locked into place according to your food processor's main instruction manual.
4. **Insert Accessories:** Depending on your task, select the appropriate blade or disc. Place the disc support onto the central shaft in the bowl, then place the desired disc (grater, slicer, shredder) on top. For blades (mini, chopping, S-shaped, kneading), place them directly onto the central shaft.
5. **Secure Lid:** Place the lid onto the bowl and rotate it until it locks securely. The food processor will not operate unless the lid is correctly positioned and locked.

Safety Note: Always ensure the food processor is unplugged before assembling or disassembling any parts. Handle blades and discs with extreme care as they are very sharp.

OPERATING INSTRUCTIONS

This bowl kit enhances the functionality of your MAGIMIX food processor. Refer to your food processor's main instruction manual for general operation and safety guidelines.

Using Specific Components:

- **Mini Blade:** Ideal for small quantities, herbs, garlic, or making sauces. Place in the mini bowl (if applicable) or directly in the main bowl for small tasks.
- **Chopping Blade / S-shaped Blade:** Used for chopping, mixing, and pureeing. Suitable for vegetables, meat, and making dough.
- **Kneading Blade:** Specifically designed for kneading dough for bread, pizza, or pastries.
- **Grater (2mm):** For finely grating cheese, vegetables, or chocolate. Place on the disc support.
- **Slicer (2mm) / Slicing Disc:** For thinly slicing vegetables like cucumbers, carrots, or potatoes. Place on the disc support.
- **Shredding Disc:** For shredding ingredients like cabbage for coleslaw or cheese. Place on the disc support.
- **Whisk (Batteur à blancs):** Used for whipping egg whites, cream, or making light batters. Ensure the bowl is clean and dry for best results.

Recommended Use: This kit is suitable for various food preparation tasks, including grinding, chopping, slicing, grating, and whisking.

Operation: Once the desired component is assembled and the lid is secured, plug in your food processor and select the appropriate speed setting as per your food processor's instructions. Add ingredients through the large hopper if necessary.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your bowl kit components.

1. **Unplug:** Always unplug the food processor from the power outlet before cleaning.
2. **Disassemble:** Carefully remove all components from the motor base.
3. **Hand Wash:** All components of this bowl kit are recommended for hand washing. Use warm water and a mild dish soap.
4. **Blade Care:** Exercise extreme caution when cleaning blades and discs as they are very sharp. Use a brush to remove food residue safely.

5. **Rinse and Dry:** Rinse all parts thoroughly to remove soap residue. Dry immediately or allow to air dry completely before storing to prevent water spots or odors.
6. **Storage:** Store all components in a safe place, away from children, especially sharp blades.

Note: Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the plastic components.

TROUBLESHOOTING

If you encounter issues with your MAGIMIX Food Processor Bowl Kit, consider the following common solutions:

- **Appliance Not Starting:** Ensure the bowl and lid are correctly assembled and securely locked into place on the food processor base. The safety interlock system prevents operation if not properly assembled.
- **Poor Performance:** Check that the correct blade or disc is installed for the task. Ensure ingredients are cut to an appropriate size for processing.
- **Leakage:** Verify that the bowl is correctly seated and the lid is tightly sealed. Inspect the bowl and lid for any cracks or damage.
- **Unusual Noise:** Disassemble and reassemble all components to ensure they are properly aligned. Check for any foreign objects or blockages.

If problems persist, refer to your main food processor manual or contact customer support.

SPECIFICATIONS

Brand	SOS ACCESSOIRE
Model Name	4100/4200
Model Numbers	17104, 17601
Color	Multicolour
Material	Plastic
Item Weight	2.45 Kilograms
Special Feature	Adjustable slicing discs
Recommended Product Use	Grinding
Care Instructions	Hand wash
Power	2000 Watts <i>(Refers to compatible food processor power)</i>

WARRANTY INFORMATION

Specific warranty details for this SOS ACCESSOIRE MAGIMIX Food Processor Bowl Kit are not provided in the product information. Please refer to the original purchase documentation or contact the seller directly for warranty terms and conditions.

SUPPORT

For further assistance, technical support, or inquiries regarding replacement parts, please contact the seller or manufacturer directly. Ensure you have your product model numbers (4100/4200, 17104, 17601) available when contacting support.

Manufacturer: SOS ACCESSOIRE

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07QDMTS8G>

More documents and user manuals: <https://manuals.plus/>