

[Manuals.plus](#) /

› [COSORI](#) /

› COSORI 5.8QT Air Fryer Replacement Basket User Manual

COSORI C158-FB

COSORI 5.8QT Air Fryer Replacement Basket User Manual

Model: C158-FB | Brand: COSORI



Image: The COSORI 5.8QT Air Fryer Replacement Basket, designed for optimal cooking performance.

INTRODUCTION

This user manual provides essential information for the safe and effective use of your COSORI 5.8QT Air Fryer Replacement Basket. Please read this manual thoroughly before first use and retain it for future reference. This replacement basket is designed to seamlessly integrate with compatible COSORI air fryer models, ensuring continued healthy and efficient cooking.

PRODUCT FEATURES

- **Certified-Safe Materials:** Constructed with high-caliber, CA Prop 65 compliant materials, ensuring healthy cooking without hazardous chemicals.
- **Easy Cleanup:** Features a durable non-stick coating for effortless food release and minimal residue. The inner and outer baskets easily separate for convenient serving and are dishwasher safe.
- **Safe & Convenient Handling:** Equipped with a cool-touch handle and a safety guard over the basket release button, enhancing user safety during operation.

COMPATIBILITY

This COSORI 5.8QT Replacement Basket (Model C158-FB) is specifically designed for use with the following COSORI Air Fryer models:

COSORI Black CP158-AF

COSORI Black CS158-AF

COSORI Black CO158-AF

Please ensure your air fryer model matches one of the listed compatible models for proper fit and function.

Fit for Specified Cosori Air Fryer

Please note that: This 5.8qt basket is only suitable for Cosori black CP158-AF, CS158 & CO158!

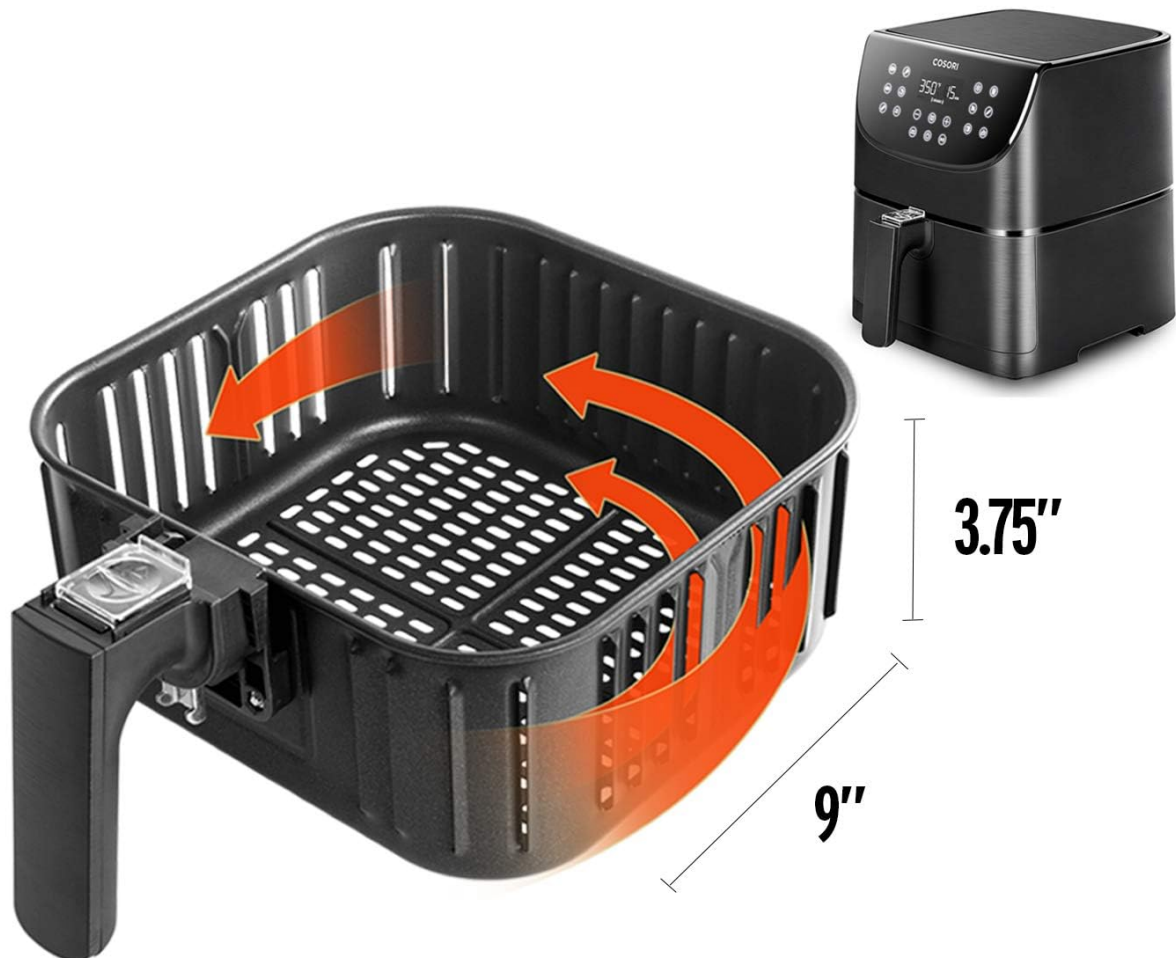


Image: The 5.8QT replacement basket with its dimensions (9"x9"x3.75") and a visual reminder of compatible COSORI air fryer models (CP158-AF, CS158-AF, CO158-AF).

SETUP AND FIRST USE

1. **Unpack:** Carefully remove the replacement basket from its packaging.
2. **Clean:** Before first use, wash the basket thoroughly with warm, soapy water and a non-abrasive sponge. Rinse well and dry completely. The basket is also dishwasher safe.
3. **Assemble:** Ensure the inner basket is securely placed within the outer basket.
4. **Insert:** Slide the assembled basket into your compatible COSORI air fryer until it clicks into place.

Remove it in Three Steps

Basket separation and installation is simple and convenient, you can easily operate it when you are cooking!



Image: Visual guide demonstrating the three simple steps to separate and remove the inner basket from the outer basket for cleaning or serving.

OPERATING THE BASKET

The COSORI replacement basket is designed for optimal air circulation and cooking performance within your air fryer. Its non-stick surface ensures food does not adhere, making cooking and serving easier.

- **Food Placement:** Place food directly into the inner basket. Do not overfill to allow for proper air circulation.
- **Shaking/Flipping:** For even cooking, especially with items like fries or vegetables, periodically remove the basket and shake or flip the contents.
- **Accessory Use:** The basket is compatible with various air fryer accessories of the same size, allowing for diverse cooking methods such as baking, roasting, and grilling.

Better Basket

Instead of having a crisper plate or hard-to-clean parts, Cosori removable inner basket is easy to serving and cleanup.



Cosori Removable Inner Basket



Other Brand Basket

Image: A comparison showing the COSORI removable inner basket design versus another brand's basket, highlighting the ease of serving and cleanup with the COSORI design.

Cooking Healthier and Faster

The sloping design facilitates hot air circulation
and make cooking more efficient!



Image: Illustration of the sloping design of the basket, which facilitates efficient hot air circulation for healthier and faster cooking results.

Use with Accessories to Increase Inner Space

Fits Cosori and other brand's accessories in the same size



Image: The air fryer basket shown with different accessories, such as a metal rack and silicone molds, demonstrating how to increase inner space and versatility for various cooking needs.

Enjoy the Meal

Cosori air fryer basket brings you a rich cuisines experience!



Image: A visual representation of various dishes that can be prepared using the COSORI air fryer basket, including seafood, chicken, steak, french fries, vegetables, and desserts, showcasing its versatility for different cuisines.

Your browser does not support the video tag.

Video: An official COSORI video demonstrating the general use of the air fryer, including placing food in the basket, shaking for even cooking, and serving. This video highlights the ease of use and versatility of the air fryer and its basket.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your COSORI Air Fryer Replacement Basket and ensure optimal performance.

- **Cool Down:** Always allow the basket to cool completely before cleaning to prevent damage to the non-stick coating and for safe handling.
- **Hand Washing:** For best results and to preserve the non-stick coating, wash the basket with warm, soapy water using a non-abrasive sponge or cloth. Avoid using stainless steel sponges or harsh abrasive cleaners, as these can scratch and damage the surface.
- **Dishwasher Safe:** The basket is dishwasher safe for convenient cleaning. Place it on the top rack if possible

to prevent potential damage from high heat or harsh detergents.

- **Drying:** Ensure the basket is thoroughly dry before storing to prevent water spots or residue buildup.

Easy to Wash

You can clean it using a non-abrasive sponge in hot water, please do not clean it with stainless steel sponges.



Image: The air fryer basket submerged in water, illustrating the ease of cleaning with a non-abrasive sponge.

TROUBLESHOOTING

If you encounter any issues with your COSORI Air Fryer Replacement Basket, please consider the following:

- **Improper Fit:** Ensure the basket is fully inserted into the air fryer and clicks into place. Verify your air fryer model is listed under the "Compatibility" section.
- **Coating Damage:** Avoid using metal utensils or abrasive cleaning tools that can scratch the non-stick coating. Follow cleaning instructions carefully.
- **Food Sticking:** While the basket is non-stick, some foods may benefit from a light spray of oil. Ensure the basket is clean and free of old residue.

For further assistance, please contact COSORI Customer Support.

SPECIFICATIONS

Model Name	C158-FB
Brand	COSORI
Capacity	5.8 Quarts
Product Dimensions	9"D x 9"W x 3.75"H
Color	Black
Material	Aluminum (Inner and Outer)
Non-stick Coating	Yes
Dishwasher Safe	Yes
Special Features	Cool-touch handle, Safety guard over the button
Item Weight	1.74 pounds

WARRANTY AND SUPPORT

COSORI is committed to providing excellent customer support. Your COSORI Air Fryer Replacement Basket comes with lifetime customer support.

For any questions, concerns, or assistance with your product, please contact COSORI Customer Support directly. Contact information can typically be found on the official COSORI website or through your purchase platform.

