

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Timex](#) /
- › [Timex Men's Easy Reader Watch Instruction Manual](#)

Timex T2N0919J

Timex Men's Easy Reader Watch

Model: T2N0919J

Brand: Timex

INTRODUCTION

Welcome to the instruction manual for your new Timex Men's Easy Reader Watch. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your timepiece to ensure long-lasting performance and enjoyment. The Timex Easy Reader is renowned for its clear, legible dial and classic design, making it a reliable companion for everyday wear.





Figure 1: Front view of the Timex Men's Easy Reader Watch.

KEY FEATURES

- **Silver-tone 18mm stainless steel expansion band:** Designed to fit wrist circumferences from 6.7 to 8 inches, offering comfortable wear.
- **White dial with day & date window:** Features a clear white dial with full Arabic numerals and a convenient day and date display at the 3 o'clock position for easy readability.
- **Silver-tone 35mm brass case with mineral glass crystal:** A durable and classic case design protecting the watch's internal components.
- **Indiglo light-up watch dial:** Provides uniform illumination of the entire dial for easy time-telling in low-light conditions.
- **Water resistant to 30m (100ft):** Suitable for splashes or brief immersion in water. Not recommended for swimming or bathing.

WATCH COMPONENTS

Familiarize yourself with the main components of your Timex Easy Reader Watch:

- **Dial:** The face of the watch, featuring large Arabic numerals for hours, and smaller red numerals for 24-hour time.

- **Hands:** Includes hour, minute, and a silver-colored second hand for precise time indication.
- **Day/Date Window:** Located at the 3 o'clock position, displaying the current day of the week and date.
- **Crown:** The small knob on the side of the watch case used for setting time and date, and activating the Indiglo light.
- **Case:** The silver-tone 35mm brass housing that protects the watch movement.
- **Crystal:** The clear mineral glass covering the dial, providing protection against scratches.
- **Band:** The 18mm stainless steel expansion band, designed for comfort and ease of wear.



Figure 2: Angled view highlighting the dial and crown.





Figure 3: View of the stainless steel expansion band.

SETUP

Initial Activation (for new watches)

Your watch may come with a small plastic stopper under the crown to preserve battery life during shipping. Gently remove this stopper before setting the time and date.

Setting the Time and Date

1. **Pull the Crown:** Gently pull the crown out to the first click position to set the date, or to the second click position to set the time.
2. **Set the Date:** If the crown is at the first click, turn it clockwise or counter-clockwise to advance or reverse the date.
3. **Set the Time:** If the crown is at the second click, turn it to move the hour and minute hands. Continue turning until the correct time is displayed. Ensure you set the correct AM/PM by observing if the day/date changes as you pass midnight.
4. **Push the Crown Back:** Once the time and date are set, push the crown back into its original position to start the watch movement.

OPERATION

Using Indiglo Night-Light

Your Timex Easy Reader Watch features the Indiglo night-light for easy readability in the dark.

- **Activate:** Simply press and hold the crown (push it inwards) to illuminate the entire watch dial.
- **Deactivate:** Release the crown to turn off the Indiglo light.

MAINTENANCE

Water Resistance

Your watch is water resistant to 30 meters (100 feet). This means it is designed to withstand splashes, rain, or brief immersion in water. It is **not suitable** for swimming, showering, or diving. Avoid operating the crown while the watch is wet to prevent water intrusion.

Battery Replacement

The watch uses 1 Lithium Metal battery (CR2016, 3.0 V). When the watch stops or the Indiglo light dims significantly, it's time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance is maintained.

Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For the stainless steel band, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

SPECIFICATIONS

Feature	Detail
Model Number	T2N0919J
Case Diameter	35mm

Case Material	Brass (Silver-Tone)
Band Material	Stainless Steel (Expansion Band)
Band Width	18mm
Crystal Material	Mineral Glass
Water Resistance	30m (100ft)
Battery Type	Lithium Metal CR2016 (included)
Movement	Quartz
Department	Men's
Item Weight	3.53 ounces
Country of Origin	Philippines

TROUBLESHOOTING

- **Watch is not running:** Check if the plastic stopper has been removed from under the crown. If it has, the battery may need replacement.
- **Time or Date is incorrect:** Follow the "Setting the Time and Date" instructions in the Setup section. Note that setting the date may require turning the crown multiple times to advance through days.
- **Indiglo light is dim or not working:** This typically indicates a low battery. Replace the battery as described in the Maintenance section.
- **Condensation under the crystal:** If condensation appears, it may indicate a breach in the water resistance. Have the watch inspected by a qualified technician immediately.

WARRANTY AND SUPPORT

For warranty information, service, or additional support, please refer to the official Timex website or contact Timex customer service. You can also visit the [Timex Store on Amazon](#) for more product details and support resources.