

V-WHITE B07QF3Z7VJ

V-WHITE Ultrasonic U-Shaped Electric Toothbrush Adult Model Instruction Manual

Model: B07QF3Z7VJ

1. PRODUCT OVERVIEW

The V-WHITE Ultrasonic U-Shaped Electric Toothbrush is designed for comprehensive oral hygiene, offering a hands-free brushing experience. It utilizes advanced ultrasonic vibrations for deep cleaning and plaque removal. Key features include:

- **360° Ultrasonic Cleaning Technology:** Provides full-mouth cleaning with high-frequency sound waves.
- **Teeth Whitening & LED Light Therapy:** Integrated blue LED light assists in reducing stains for a brighter smile.
- **Hands-Free Convenience & Smart Timer:** Allows for multitasking while brushing, with an optimal brushing duration timer.
- **Wireless Charging & Long Battery Life:** Offers convenient cord-free charging and extended use per charge.
- **Waterproof & IPX7 Certified Design:** Ensures durability and safe use in wet environments.
- **Gum Protection & Gentle Oral Care:** Features soft silicone bristles and gentle vibrations suitable for sensitive gums.



Figure 1: V-WHITE Ultrasonic U-Shaped Electric Toothbrush and accessories.

2. WHAT'S IN THE BOX

Please verify that all items are present in your product package:

- 1 x V-WHITE Electric Toothbrush Handle
- 1 x Silicone U-Shaped Brush Head
- 1 x Wireless Charging Dock
- 1 x Regular Brush Head
- 1 x USB Charging Cable
- 1 x Instruction Manual (this document)

V-WHITE



This product

1. Multifunctional Brush Heads besides a U-Shaped Brush Head
2. 360 Degree Cleaning
3. Multi-Sided Cleaned Teeth
4. Layered- Technology Tooth Brush Design

VS



Other

1. Omni Functional Brush Head
2. Cannot Perform 360 Degree Cleaning
3. Cleans just the Surface of your Teeth
4. Single Layered Brush Head Design

Figure 2: Package Contents.

3. SAFETY INFORMATION

Please read and understand all safety instructions before using the V-WHITE Electric Toothbrush.

- Keep out of reach of children. This product is intended for adult use only.
- Do not disassemble or attempt to repair the device yourself. Contact customer support if service is required.
- Ensure the charging dock is placed on a dry, stable surface away from water when charging.
- If you experience any discomfort or pain during use, discontinue use and consult a dental professional.

4. SETUP

1. **Charge the Device:** Before first use, fully charge the toothbrush. Place the toothbrush handle onto the wireless charging dock. Connect the USB charging cable to the dock and a suitable power source. The indicator light will show charging status. A full charge typically takes 90 minutes.
2. **Attach Brush Head:** Select either the U-shaped silicone brush head or the regular brush head. Align the brush

head with the connector on the toothbrush handle and press firmly until it clicks into place.

3. **Apply Toothpaste:** For the U-shaped brush head, shake liquid toothpaste (preferably foaming toothpaste) and apply a pea-sized amount evenly along the inner grooves of the U-shaped brush head. For the regular brush head, apply toothpaste as you would with a conventional toothbrush.

5. OPERATING INSTRUCTIONS

1. **Insert Brush Head:** Place the brush head into your mouth, ensuring it covers all teeth. For the U-shaped head, gently bite down to ensure contact with all teeth.
2. **Power On and Select Mode:** Press the power button on the handle to turn on the device. Press the button again to cycle through the available cleaning modes (Strong, Medium, Gum Massage, Teeth Whitening). The device features AI Automatic Memory, which will recall your last used mode.
3. **Brush Your Teeth:** While the device is operating, gently move the toothbrush back and forth, and left to right, to ensure a thorough clean. The built-in smart timer will guide you through the optimal brushing duration for each mode.
4. **Power Off:** After the brushing cycle is complete, or when you wish to stop, press and hold the power button to turn off the device.

4 POWERFUL MODES

Its more than just cleaning

STRONG MODE

Firmer Vibrations on your teeth that helps cleaning long lasting stains

MEDIUM MODE

Medium-level firmness on your teeth that is more suitable for bedtime brushing

GUM MASSAGE

Massage gums, make your mouth more comfortable

TEETH WHITENING

With the help of the blue light, this mode helps in whitening your teeth

ONE BUTTON
FOUR MODES



Figure 3: Operating Modes.

6. MODES AND FUNCTIONS

The V-WHITE Electric Toothbrush offers multiple modes to suit various oral care needs:

- **Strong Mode:** Provides firmer vibrations for deep cleaning and targeting long-lasting stains.
- **Medium Mode:** Offers a medium-level firmness, suitable for daily brushing and gentle cleaning.
- **Gum Massage Mode:** Delivers gentle vibrations to massage gums, promoting circulation and comfort.
- **Teeth Whitening Mode:** Combines ultrasonic cleaning with blue LED light technology to assist in teeth whitening.

The device operates with a high vibration frequency of 48,000 vibrations per minute for effective cleaning.

High Frequency Vibrations



48000 vibrations a minute



Figure 4: High Frequency Vibrations.

7. CHARGING

The V-WHITE Electric Toothbrush features convenient wireless charging.

- Place the toothbrush handle onto the wireless charging dock.
- Connect the USB charging cable to the dock and a compatible USB power adapter (not included) or port.
- A full charge takes approximately 90 minutes and provides up to 60 hours of usage.
- The toothbrush will not operate if the charging base is not connected to a power source, even if the toothbrush itself is placed on the base. Ensure the base is plugged in for operation.



Figure 5: Wireless Charging and Features.

8. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and hygiene of your V-WHITE Electric Toothbrush.

- **After Each Use:** Remove the brush head from the handle. Rinse both the brush head and the handle under running water to remove any toothpaste residue.
- **Cleaning the Handle:** Use a wet cloth to wipe down the toothbrush handle, ensuring no water or toothpaste stagnation. The device is IPX7 waterproof, making it safe to rinse under running water.
- **Brush Head Replacement:** Brush heads should be replaced every 3 months, or sooner if bristles appear worn or damaged, to maintain optimal cleaning performance. To replace, simply pull the old brush head off and snap a new one into place.
- **Charging Dock:** Keep the charging dock clean and dry. Wipe it with a dry cloth as needed.

9. TROUBLESHOOTING

If you encounter issues with your V-WHITE Electric Toothbrush, please refer to the following common solutions:

- **Device Not Turning On:** Ensure the toothbrush is fully charged. If using the device while on the charging dock, confirm that the charging dock is properly plugged into a power source.
- **Weak Vibrations:** The battery may be low. Place the toothbrush on the charging dock and allow it to fully charge.
- **Ineffective Cleaning:** Ensure you are applying toothpaste correctly, especially for the U-shaped head (evenly distributed foam toothpaste is recommended). Move the brush gently back and forth and side to side during operation to ensure all tooth surfaces are reached. Consider replacing the brush head if it is old or worn.
- **Charging Issues:** Verify that the USB cable is securely connected to both the charging dock and the power source. Try a different USB port or power adapter.

If problems persist, please refer to the warranty and support section for further assistance.

10. SPECIFICATIONS

Product Dimensions	1.18 x 2.56 x 4.49 inches
Weight	9.91 ounces
Battery Type	1 Lithium Ion battery (included)
Power Source	Battery Powered (Wireless Charging)
Waterproof Rating	IPX7 Certified
Vibration Frequency	Up to 48,000 vibrations per minute
Brush Head Firmness	Soft
Age Range	Adult
Manufacturer	Magentak

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or the official V-WHITE website. Keep your purchase receipt for warranty claims.

If you require assistance with your V-WHITE Electric Toothbrush, please contact the manufacturer's customer service department. Contact details are typically provided in the product packaging or on the brand's official online presence.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question