

[manuals.plus](#) /

› [Karlsson](#) /

› [Karlsson Lofty KA5751BK Wall Clock Instruction Manual](#)

Karlsson KA5751BK

Karlsson Lofty KA5751BK Wall Clock Instruction Manual

Model: KA5751BK

1. INTRODUCTION

Thank you for choosing the Karlsson Lofty KA5751BK Wall Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Please read these instructions carefully before use and retain them for future reference.



Image 1: Front view of the Karlsson Lofty KA5751BK Wall Clock, featuring a matte black iron frame and a minimalist dial with white hour markers and hands.

Product Overview:

- **Brand:** Karlsson
- **Model:** Lofty KA5751BK
- **Type:** Wall Clock
- **Material:** Iron
- **Color:** Matte Black
- **Dimensions:** Approximately Ø 40 cm (diameter) x 4.5 cm (depth)

2. SETUP

2.1 Unpacking

1. Carefully remove the clock from its packaging.
2. Inspect the clock for any signs of damage. If damaged, do not proceed with setup and contact your retailer.
3. Remove any protective films or packaging materials from the clock face and hands.

2.2 Battery Installation

The Karlsson Lofty KA5751BK Wall Clock typically requires one (1) AA battery (not included).

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

2.3 Setting the Time

1. After installing the battery, locate the time-setting knob or wheel on the back of the clock, usually near the battery compartment.
2. Gently turn the knob in either direction to move the clock hands to the correct time.
3. Avoid moving the hands directly, as this can damage the clock mechanism.

2.4 Wall Mounting

1. Choose a suitable location on a wall that can support the weight of the clock (approximately 200g).
2. Ensure the wall material is appropriate for hanging a clock (e.g., drywall, wood, concrete).
3. Install a suitable wall anchor or hook (not included) that can securely hold the clock.
4. Carefully hang the clock using the integrated hanging slot on the back. Ensure it is level and stable.

3. OPERATING

The Karlsson Lofty KA5751BK Wall Clock is designed for simple, reliable timekeeping. Once the battery is installed and the time is set, the clock will operate continuously.

- The clock features an **analog display** with hour and minute hands.
- The movement is designed for quiet operation.
- No further user interaction is required for daily operation beyond initial setup.

4. MAINTENANCE

4.1 Cleaning

- To clean the clock, gently wipe the surface with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.
- Avoid getting moisture into the clock mechanism.

4.2 Battery Replacement

Replace the AA battery approximately once a year, or when the clock hands begin to slow down or stop moving. Follow the battery installation steps in Section 2.2.

- Always use a fresh, high-quality AA battery.
- Dispose of used batteries responsibly according to local regulations.

4.3 Storage

If you plan to store the clock for an extended period, remove the battery to prevent leakage and potential damage to the mechanism.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running or running slowly.	Dead or weak battery. Incorrect battery installation.	Replace the AA battery with a fresh one. Ensure the battery is inserted with correct polarity (+/-).
Time is incorrect.	Time not set correctly. Battery running low.	Reset the time using the setting knob on the back. Replace the battery if it's old.
Hands are stuck or not moving smoothly.	Hands are bent or touching each other/the clock face.	Gently adjust the hands to ensure they are not touching. If the issue persists, contact customer support.

If you encounter any issues not listed here, or if the problem persists after attempting the solutions, please contact Karlsson customer support or your retailer.

6. SPECIFICATIONS

- Brand:** Karlsson
- Model Number:** KA5751BK
- Color:** Black
- Material:** Iron
- Product Dimensions:** Approximately 40 cm (Diameter) x 4.5 cm (Depth)
- Item Weight:** 200 g
- Display Type:** Analog
- Style:** Scandinavian
- Power Source:** 1x AA Battery (not included)
- Usage:** Indoor

7. WARRANTY AND SUPPORT

Specific warranty information for the Karlsson Lofty KA5751BK Wall Clock may vary by region and retailer. Please refer to the warranty card included with your purchase or contact your point of sale for details.

For technical support, spare parts, or further assistance, please contact Karlsson customer service through their official website or the contact information provided by your retailer.

Keep your purchase receipt as proof of purchase for any warranty claims.