

## Karlsson KA5809DW

# Karlsson KA5809DW Pure Medium Dark Wood Round Wall Clock Instruction Manual

Model: KA5809DW

## 1. INTRODUCTION

---

This manual provides instructions for the proper setup, operation, and maintenance of your Karlsson KA5809DW Pure Medium Dark Wood Round Wall Clock. This clock features a silent quartz movement and is designed for indoor use.



Figure 1: Front view of the Karlsson KA5809DW Pure Medium Dark Wood Round Wall Clock.

## 2. SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove exhausted batteries promptly to prevent leakage and damage.
- Dispose of batteries according to local regulations.
- Avoid placing the clock in direct sunlight or near extreme heat sources.
- This product is intended for indoor use only.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Karlsson KA5809DW Pure Medium Dark Wood Round Wall Clock
- (Batteries are not included)

## **4. SETUP**

---

### **4.1. Battery Installation**

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

### **4.2. Setting the Time**

1. On the back of the clock, locate the time-setting knob or wheel.
2. Gently turn the knob in either direction to move the clock hands to the correct time.
3. Avoid forcing the hands directly.

### **4.3. Mounting the Clock**

The Karlsson KA5809DW is designed for wall mounting.

1. Choose a suitable location on a wall, ensuring it is sturdy enough to support the clock's weight (approximately 1.38 kg).
2. Install a wall hook or screw (not included) appropriate for the clock's hanging mechanism and wall material.
3. Carefully hang the clock onto the installed hook or screw, ensuring it is stable and level.

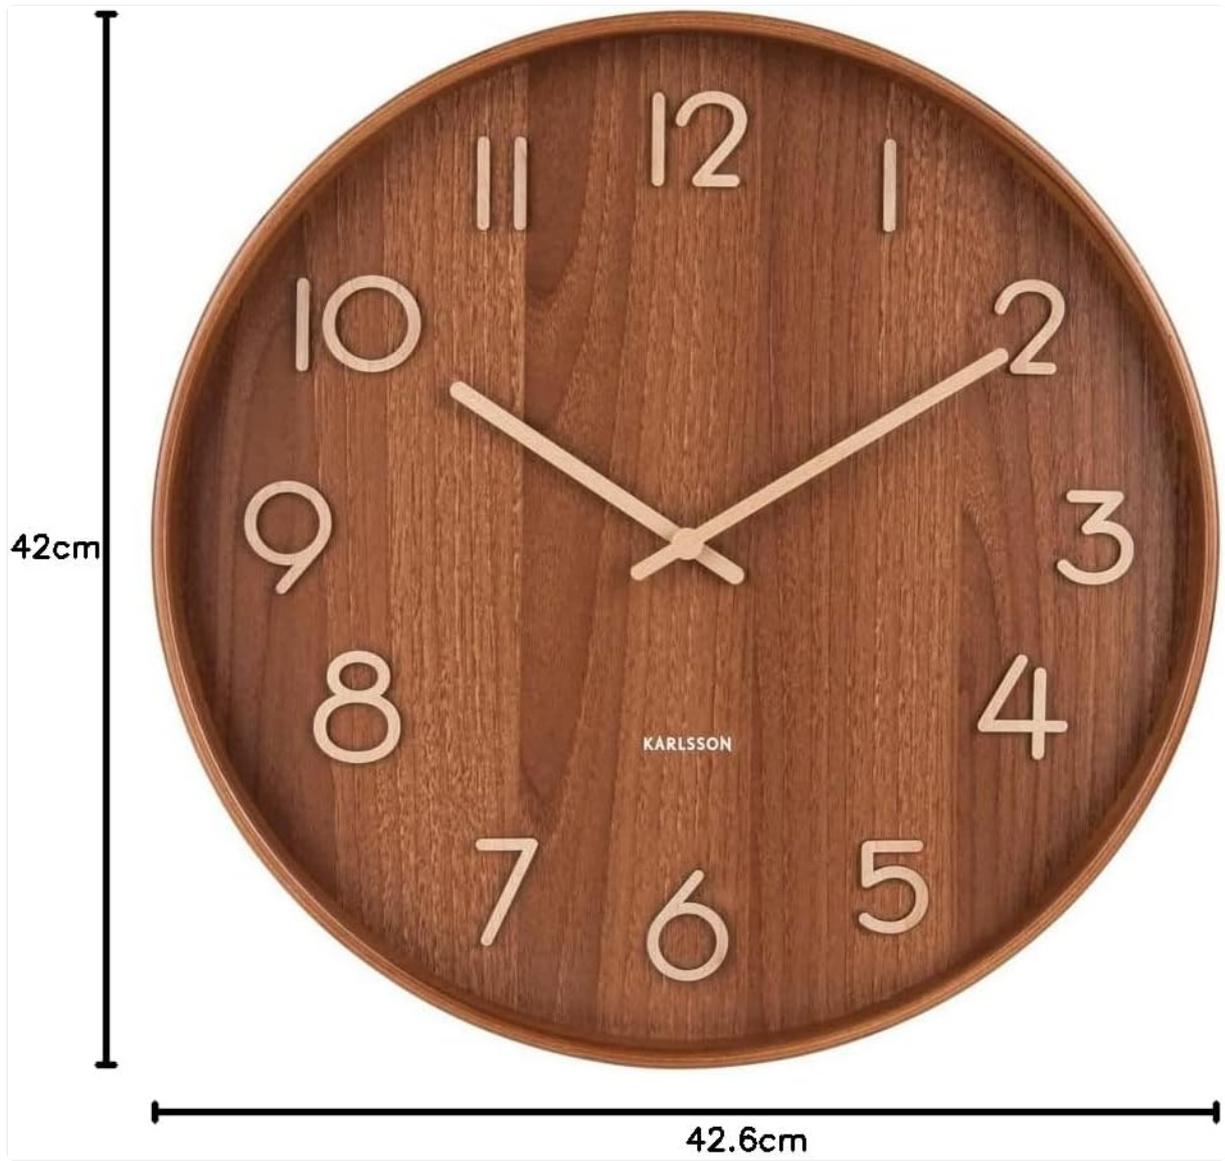


Figure 2: Dimensions of the Karlsson KA5809DW Wall Clock.

## 5. OPERATING INSTRUCTIONS

Once the battery is installed and the time is set, the clock will begin to operate. The quartz movement ensures accurate timekeeping, and its silent operation means there is no ticking sound.



Figure 3: Detail of the clock face, highlighting the wooden numbers and silent hands.

## 6. MAINTENANCE

### 6.1. Cleaning

- Wipe the clock surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the wood finish.

### 6.2. Battery Replacement

When the clock hands stop moving or the time becomes inaccurate, it is time to replace the battery. Follow the battery installation steps in Section 4.1.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running	Battery is dead or incorrectly installed.	Replace the AA battery, ensuring correct polarity.

Problem	Possible Cause	Solution
Time is inaccurate	Battery is low or needs replacement.	Replace the AA battery. Reset the time.
Hands are stuck	Obstruction or damage to the movement.	Gently check for any obstructions. If the problem persists, contact support.

## 8. SPECIFICATIONS

---

**Brand:** Karlsson

**Model Number:** PTG-KA5809DW

**Product Dimensions (L x W x H):** 42.6 x 3.81 x 42 cm

**Item Weight:** 1.38 Kilograms

**Material:** Wood

**Color:** Dark Brown

**Display Type:** Analog

**Movement Type:** Quartz

**Power Source:** Battery Powered

**Battery Requirement:** 1 AA battery (not included)

**Special Feature:** Silent clock

**Mounting Type:** Wall Mount

**Shape:** Round

**Indoor/Outdoor Use:** Indoor

## 9. WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or inquiries, please contact Karlsson customer service through their official website or the contact information provided by your retailer.