

**JUKSTG 1816A / HD1906C**

# **JUKSTG 64-Piece LED Eye-Care Desk Lamp User Manual**

Model: 1816A / HD1906C

## **1. INTRODUCTION**

Thank you for purchasing the JUKSTG 64-Piece LED Eye-Care Desk Lamp. This manual provides important information regarding the safe operation, assembly, and maintenance of your new desk lamp. Please read this manual thoroughly before use and retain it for future reference.

This desk lamp is designed to provide versatile and comfortable lighting for various tasks, featuring multiple brightness levels and color temperature modes, along with eye-caring flicker-free LED technology.

## **2. IMPORTANT SAFETY INSTRUCTIONS**

- Read all instructions carefully before using the lamp.
- Do not operate the lamp with a damaged cord or plug. If the cord or plug is damaged, contact customer support.
- Do not place the lamp near heat sources or in direct sunlight.
- Do not expose the lamp to water or excessive moisture.
- Do not attempt to disassemble, repair, or modify the lamp yourself. This will void the warranty and may cause electric shock or injury.
- Use only the provided power adapter. Using an incompatible adapter may damage the lamp or cause fire.
- Unplug the lamp from the power outlet before cleaning or when not in use for extended periods.
- This lamp is for indoor use only.

## **3. PACKAGE CONTENTS**

Please check the package contents upon opening to ensure all items are present and undamaged:

- JUKSTG LED Desk Lamp (Model 1816A / HD1906C)
- Power Adapter
- User Manual

## **4. PRODUCT OVERVIEW**

Familiarize yourself with the components and control panel of your JUKSTG desk lamp.



Figure 1: JUKSTG LED Desk Lamp (Overall View)

## Control Panel



Figure 2: Touch Control Panel

- **Power Button ( )**: Tap to turn the lamp On or Off.
- **Brightness Adjustment (.....)**: Tap or slide your finger along the dotted line to adjust between 10 brightness levels.
- **Mode Button (M)**: Tap to cycle through 5 color temperature modes.

## 5. ASSEMBLY & SETUP

---

1. Carefully remove all components from the packaging.
2. Place the lamp base on a stable, flat surface.
3. Connect the power adapter cable to the power input port located at the back of the lamp base.
4. Plug the power adapter into a standard electrical outlet.
5. The lamp is now ready for operation.

## 6. OPERATING INSTRUCTIONS

---

### Power On/Off

Tap the **Power Button ( )** on the touch control panel to turn the lamp on or off.

### Brightness Adjustment

The lamp offers 10 brightness levels. To adjust the brightness:

- **Tap** the individual dots on the brightness indicator to select a specific level.
- **Slide** your finger along the brightness indicator to smoothly increase or decrease the light intensity.



Figure 3: 10 Brightness Levels

### Color Mode Adjustment

The lamp features 5 distinct color temperature modes to suit different activities and preferences. To change the color mode:

- Tap the **Mode Button (M)** to cycle through the available color temperatures: 6000K (Cool White), 4700K (Daylight), 4200K (Natural White), 3800K (Warm White), and 3000K (Soft Warm).



Figure 4: 5 Color Temperature Modes

## Memory Function

The lamp is equipped with a memory function that automatically recalls the last used brightness level and color mode when turned back on.

## 7. ADJUSTING THE LAMP

The JUKSTG desk lamp features multiple articulation points for optimal lighting positioning:

- The lamp arm can be rotated up to **180 degrees**.
- The base of the lamp allows for a**350-degree** rotation.
- The lamp head can be tilted up to **40 degrees**.

Gently adjust the lamp to your desired angle and height. Avoid forcing the joints beyond their intended range of motion.

## Multi-Angel Adjustments for Optimized Lighting



Figure 5: Multi-Angle Adjustments

## 8. CARE & MAINTENANCE

- Always unplug the lamp before cleaning.
- Use a soft, dry cloth to wipe the lamp's surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Keep the lamp away from dust and dirt to ensure optimal performance.

## 9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on	No power connection	Ensure the power adapter is securely plugged into the lamp and a working electrical outlet.
Lamp flickers	Unstable power supply or loose connection	Check power connections. Try plugging into a different outlet.

Problem	Possible Cause	Solution
Touch controls are unresponsive	Temporary software glitch or power issue	Unplug the lamp from the power outlet for 30 seconds, then plug it back in.
Light output is dim	Brightness level set too low	Adjust the brightness using the touch control panel.

If you encounter any issues not listed here or if the problem persists, please contact JUKSTG customer support for assistance.

## 10. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	JUKSTG
Model Number	1816A / HD1906C
Product Dimensions (L x W x H)	14.99 x 14.99 x 42.98 cm
Item Weight	885 g (1.95 lbs)
Power Consumption	12 Watts
Input Voltage	15 Volts
LED Quantity	64 pieces
Brightness Levels	10
Color Modes	5 (ranging from 3000K to 6000K)
Color Rendering Index (CRI)	≥ 85
Switch Type	Touch Control
Materials	ABS, Aluminum Alloy (base material), Plastic (shade material)
Finish	Polished

## 11. DISPOSAL

This product should not be disposed of with household waste. Please recycle it at an appropriate collection point for electrical and electronic equipment. Contact your local authority for information regarding recycling and disposal.

## 12. WARRANTY INFORMATION & SUPPORT

JUKSTG products are manufactured to high-quality standards. This product is covered by a manufacturer's warranty, which typically covers defects in materials and workmanship under normal use. Please refer to the warranty card included with your purchase or contact JUKSTG customer support for specific warranty

terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact JUKSTG customer service through the retailer where the product was purchased or via the official JUKSTG website.