



Manuals.plus /

› Kemei /

› Kemei 600 Multi-Use Trimmer for Men Instruction Manual

## Kemei 600

# Kemei 600 Multi-Use Trimmer for Men

Instruction Manual

## INTRODUCTION

---

Thank you for choosing the Kemei 600 Multi-Use Trimmer. This device is designed for versatile grooming needs, offering precision and convenience for men. Please read this manual thoroughly before first use to ensure safe and optimal operation. Keep this manual for future reference.

## IMPORTANT SAFETY INFORMATION

---

### WARNING:

- Avoid using this appliance near water sources, such as bathtubs, showers, basins, or other vessels containing water.
- Do not use this product on infants or young children.
- Always follow electrical safety precautions. Ensure the power cord and adapter are not damaged.
- Keep the device dry. Do not immerse the trimmer in water.
- This product is not dangerous and does not contain hazardous materials, toxic substances, or waste subject to special transport, storage, or disposal regulations.

## PACKAGE CONTENTS

---

Upon unpacking, please verify that all items listed below are present and in good condition:

- Kemei 600 Main Trimmer Unit
- Various Trimmer Heads (e.g., precision trimmer, nose/ear trimmer, shaver)
- Guide Combs (multiple sizes)
- Charging Cable/Adapter
- Cleaning Brush

- Lubricating Oil
- Instruction Manual

## PRODUCT OVERVIEW

---

The Kemei 600 is a versatile grooming tool. Familiarize yourself with its components:



This image displays the Kemei 600 main trimmer unit, measuring approximately 16cm in length and 4cm in width at the blade. It also shows four guide combs, each 3.8cm wide, and various interchangeable heads: two standard trimmer heads (3.8cm and 3cm wide), a foil shaver head (3.8cm wide), and a nose/ear trimmer head (0.8cm diameter).

The main unit features an ergonomic design for comfortable handling. It includes a power button and an indicator light. The interchangeable heads allow for different grooming functions, while the guide combs provide various cutting lengths.

## SETUP

---

1. **Initial Charge:** Before first use, fully charge the trimmer for approximately 8 hours. Connect the charging cable to the trimmer and plug the adapter into a suitable power outlet. The indicator light will show charging status.
2. **Attaching Trimmer Heads:** To attach a trimmer head, align the head with the main unit and gently push until it clicks into place. To remove, push the release button (if present) or gently pull the head away from the unit.
3. **Attaching Guide Combs:** For trimming with a specific length, slide the desired guide comb onto the trimmer head until it securely locks. Ensure it is firmly attached before use.

## OPERATING INSTRUCTIONS

---

The Kemei 600 operates on a single speed setting. Ensure the device is charged before use.

1. **Power On/Off:** Press the power button to turn the trimmer on or off.
2. **Dry Operation:** This trimmer is designed for dry use only. Do not use it in wet conditions or with shaving foam/gel.
3. **Trimming Hair:**
  - Select the appropriate trimmer head and guide comb for your desired hair length.
  - Hold the trimmer against the direction of hair growth.
  - Move the trimmer slowly and steadily for an even trim.
4. **Using the Nose/Ear Trimmer:** Gently insert the nose/ear trimmer head into the nostril or ear canal. Move it in a circular motion to trim unwanted hair. Do not insert too deeply.
5. **Using the Shaver Head:** For a close shave, use the foil shaver head on clean, dry skin. Stretch the skin with one hand and move the shaver in short, circular motions with the other.

## MAINTENANCE

---

Regular cleaning and maintenance will prolong the life of your trimmer and ensure optimal performance.

1. **Cleaning the Blades:** After each use, turn off the trimmer and remove the trimmer head. Use the provided cleaning brush to remove any hair clippings from the blades and inside the trimmer head.
2. **Oiling the Blades:** Periodically, apply a small drop of lubricating oil (provided) to the blades. Turn on the trimmer for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.
3. **Cleaning the Main Unit:** Wipe the main unit with a dry or slightly damp cloth. Do not use abrasive cleaners or immerse the unit in water.
4. **Storage:** Store the trimmer and its accessories in a dry, cool place, away from direct sunlight and moisture.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer runs slowly or pulls hair.	Blades are dirty or not oiled.	Clean the blades and apply lubricating oil.
Trimmer head is loose.	Head not properly attached.	Ensure the trimmer head is securely clicked into place.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

---

**Model:** Kemei 600

**Power Source:** Electric and Battery Powered (Cordless)

**Speed Settings:** 1

**Number of Heads:** 6 (various interchangeable heads)

**Blade Material:** Stainless Steel

**Targeted Group:** Men

**Operation Function:** Dry

**Batteries Required:** No (internal rechargeable battery)

**Shipping Dimensions:** 25.9 x 18.9 x 7.8 cm

**Weight:** 580 grams

**UPC:** 791294869380

**GTIN:** 791294869380

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the warranty card included in your package or contact the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.