

[manuals.plus](#) /

› [Hyperkin](#) /

› **Hyperkin Scout Premium Wireless Bluetooth Controller Instruction Manual**

Hyperkin M07326

Hyperkin Scout Premium Wireless Bluetooth Controller Instruction Manual

Model: M07326



1. PRODUCT OVERVIEW

The Hyperkin Scout Premium Wireless Bluetooth Controller offers a modern, ergonomic design while retaining the classic feel of a Super NES controller. It provides wireless freedom up to 30 feet and is compatible with various platforms including Super NES, PC, Mac, and Android devices.



Image: Hyperkin Scout Premium Wireless Bluetooth Controller in its retail packaging.

Key Features:

- Premium build quality with comfortable, ergonomic retro design.
- Compatible with all Super NES models, as well as PC, Mac, and Android via Bluetooth.
- Wireless connectivity up to 30 ft. via included Bluetooth dongle.
- Built-in rechargeable lithium-ion battery provides approximately 6 hours of gameplay.
- Recharges via Micro USB cable.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- Hyperkin Scout Premium Wireless Bluetooth Controller
- Wireless Adapter for Super NES

- Micro USB Charging Cable
- Instruction Manual



Image: Hyperkin Scout Controller and Wireless Adapter.

3. SETUP

3.1. Charging the Controller

1. Connect the provided Micro USB charging cable to the controller's Micro port.
2. Connect the other end of the cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. A solid red light on the controller's LED indicator signifies that the Scout is charging.
4. The red light will turn off when the Scout is fully charged.
5. A slowly flashing red light on the controller's LED indicator means the Scout's battery is low.

3.2. Connecting to Super NES (via Wireless Adapter)

1. Insert the wireless adapter into a controller port on your Super NES console.
2. Power on your Super NES console. The adapter's LED indicator will blink slowly.
3. Turn on the Hyperkin Scout controller by holding the SYNC button on the top edge of the controller until its LED indicator blinks slowly.
4. To pair, press and hold the SYNC button on the controller and the small circular button on the wireless adapter simultaneously.
5. Both LED indicators will flash blue and red rapidly during pairing.
6. Once successfully paired, both LED indicators will turn solid blue. Pairing typically takes about 5-10 seconds.



Image: Hyperkin Scout Controller wirelessly connected to its adapter.

3.3. Connecting to PC/Mac/Android/Nintendo Switch (via Bluetooth)

The wireless adapter is not required for Bluetooth connections to these devices.

1. Ensure the Hyperkin Scout controller is charged.
2. On your device (PC, Mac, Android, Nintendo Switch), navigate to the Bluetooth settings and enable Bluetooth.

3. Put the Hyperkin Scout controller into pairing mode by holding the SYNC button until its LED indicator flashes blue and red.
4. On your device, search for new Bluetooth devices. Select "Hyperkin Scout" from the list of available devices.
5. Once connected, the controller's LED indicator will turn solid blue.
6. For Nintendo Switch, after turning on your console, go to Controllers, then "Change Grip/Order". Press and hold down the CONTROLLER SYNC Button. As you are holding it down, press and hold the A BUTTON. The CONTROLLER LED INDICATOR will flash BLUE and RED. This will pair your controller to your console.

4. OPERATION

4.1. Button Layout and Functions

The Hyperkin Scout controller features a classic Super NES button layout:

- **D-Pad:** Directional input.
- **SELECT Button:** Typically used for menu navigation or specific in-game functions.
- **START Button:** Typically used to pause games or confirm selections.
- **A, B, X, Y Buttons:** Action buttons, with functions varying by game.
- **L, R Shoulder Buttons:** Located on the top edge of the controller, used for additional in-game actions.
- **SYNC Button:** Used for pairing and powering on/off the controller.

4.2. Power On/Off and Sleep Mode

- To power on: Hold the SYNC button until the LED indicator lights up.
- To power off: Hold the SYNC button for approximately 3 seconds until the LED indicator turns off.
- Sleep Mode: The Scout controller will automatically enter sleep mode after 5 minutes of inactivity to conserve battery life. Press any button to wake it up.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller and adapter. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller and adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in constant use.

6. TROUBLESHOOTING

- **Controller not pairing:**
 - Ensure both the controller and adapter (if applicable) are sufficiently charged.
 - Verify that both devices are in pairing mode (LEDs flashing blue/red).
 - Try restarting both the controller and the console/device.
 - Ensure no other Bluetooth devices are interfering with the connection.
- **Input lag:**
 - Ensure you are within the 30 ft wireless range of the adapter/device.
 - Minimize obstacles between the controller and the receiver.
 - Check for potential interference from other wireless devices.

- **Low battery indication:**

- A slowly flashing red LED on the controller indicates a low battery. Connect the Micro USB cable to charge.

7. SPECIFICATIONS

Feature	Detail
Model Number	M07326
Connectivity	Bluetooth (Wireless Adapter for Super NES included)
Wireless Range	Up to 30 ft.
Battery Type	Lithium-Ion (rechargeable)
Battery Life	Approximately 6 hours
Charging Port	Micro USB
Compatibility	Super NES, PC, Mac, Android, Nintendo Switch
Item Weight	7.4 ounces
Package Dimensions	7.05 x 5.39 x 1.93 inches

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Hyperkin website or contact Hyperkin customer service directly. Keep your proof of purchase for any warranty claims.

You can visit the Hyperkin Store for more products and support:[Hyperkin Store](#)