

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for NAD RC-5240

Redi-Remote RTRC5240

Redi-Remote Replacement Remote Control User Manual

MODEL: RC-5240 (COMPATIBLE WITH NAD RC-5240)

1. Introduction and Overview

This manual provides instructions for the Redi-Remote replacement remote control, specifically designed to be compatible with NAD RC-5240 units. This remote is a custom-built replacement and is not an original NAD remote control. It is engineered to perform all essential functions for your NAD RC-5240 unit.



Image: The Redi-Remote replacement remote control for NAD RC-5240. The remote features a top section with power, volume, channel, and numeric buttons, and a lower section with additional playback and function buttons, accessible by sliding down a cover.

2. Setup: Battery Installation

The remote control requires **4 AAA batteries** for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely.

Note: The lower half of the remote has a cover that slides down to reveal additional buttons. This is separate from the battery compartment.

3. Operating Instructions

This remote control is pre-programmed to work with your NAD RC-5240 unit. No additional programming is required. Below is a guide to the primary functions of the buttons:

Remote Control Button Functions

Button	Function
PWR (Power)	Turns the NAD RC-5240 unit on or off.
TV/VIDEO	Switches between TV and Video input sources.
SLEEP	Activates or deactivates the sleep timer function.
DISP (Display)	Changes the display mode or shows information on screen.
VOL + / VOL - (Volume)	Increases or decreases the volume level.
MUTE	Mutes or unmutes the audio output.
CH+ / CH- (Channel)	Changes the channel up or down.
MENU	Accesses the main menu of the unit.
RECALL	Recalls the previously viewed channel or function.
Numeric Keypad (0-9, 100)	Directly enters channel numbers or other numerical inputs.
ENT (Enter)	Confirms selections or entered numbers.
PLAY/PAUSE	Initiates or pauses playback of media.
SKIP (Left/Right Arrows)	Skips to the previous or next track/chapter.
SCAN (Left/Right Arrows)	Scans backward or forward through media.
REPEAT	Repeats the current track or playlist.
MEMORY	Accesses or stores memory functions.
RESET	Resets certain settings or functions.

To access the lower half of the remote with additional playback and function buttons, gently slide the bottom cover downwards as indicated by "SLIDE DOWN" on the remote.

4. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace all four AAA batteries at the same time with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

5. Troubleshooting

Common Issues and Solutions

Problem	Possible Cause	Solution
Remote is not responding.	Dead or weak batteries.	Replace all four AAA batteries with new ones.
Remote works intermittently.	Low battery power or obstruction.	Replace batteries. Ensure there is a clear line of sight between the remote and the NAD unit.
Remote does not control auxiliary devices.	Remote is designed only for the NAD RC-5240.	This remote cannot be programmed to control other devices. It is specifically for the NAD RC-5240.

6. Specifications

- Model:** RC-5240 (Replacement for NAD RC-5240)
- Brand:** Redi-Remote
- Dimensions:** 7.5 inches (L) x 2.25 inches (W) x 0.75 inches (H)
- Weight:** Approximately 5 ounces (without batteries)
- Batteries Required:** 4 x AAA (not included)
- Connectivity:** Infrared (IR)

7. Support and Contact

If you encounter any issues or have questions regarding your Redi-Remote replacement remote control after purchase, please contact the seller or Redi-Remote directly for assistance. Providing your product model number (RC-5240) and a description of the issue will help expedite support.

For general inquiries or to learn more about Redi-Remote products, please visit the official Redi-Remote website or contact their customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07QGLFB8Q>

More documents and user manuals: <https://manuals.plus/>