



[Manuals.plus](#) /

› [Brother](#) /

› Brother HL-T4000DW A3 Ink Tank Printer User Manual

Brother HL-T4000DW

Brother HL-T4000DW A3 Ink Tank Printer User Manual

Model: HL-T4000DW | Brand: Brother

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Brother HL-T4000DW A3 Ink Tank Printer. The HL-T4000DW is an A3 Inkjet Printer designed for high-volume printing with refillable ink tanks, offering auto-duplex printing and versatile connectivity options including WiFi, WiFi Direct, LAN, and USB.

brother
at your side

HL-T4000DW

A3 Ink Tank Printer

Key Specifications

35/27 PPM (BK/CL)
Print Speed



250 Pages Paper Tray



128 MB Memory



*T&C Apply

Image: The Brother HL-T4000DW A3 Ink Tank Printer, showcasing its compact design and front-facing ink tanks.

2. SETUP GUIDE

2.1 Unpacking and Placement

Carefully remove the printer from its packaging. Place the printer on a stable, flat surface with adequate space around it for ventilation and access to connections. Ensure the area is free from dust and direct sunlight.

2.2 Filling the Ink Tanks

The Brother HL-T4000DW uses refillable ink tanks. Open the ink tank cover located on the front right side of the printer. Carefully open the cap for each color (Black, Cyan, Magenta, Yellow) and slowly pour the corresponding ink from the bottles into the tanks. Close the caps securely after filling.



Image: A hand carefully pouring ink into one of the Brother HL-T4000DW's visible ink tanks.

2.3 Loading Paper

Open the paper tray and adjust the paper guides to fit the paper size. Load up to 250 sheets of plain paper or specialty media. The printer supports various paper sizes, including A3.



Image: The paper tray of the Brother HL-T4000DW printer, showing its capacity and adjustable guides.

2.4 Power Connection and Initial Power On

Connect the power cord to the printer and then to a power outlet. Press the power button to turn on the printer. Follow the on-screen instructions on the printer's touch display for initial setup, including language selection and ink system initialization.

2.5 Driver Installation and Connectivity

Install the printer drivers on your computer from the provided CD-ROM or by downloading them from the official Brother support website. Connect the printer to your computer via USB, or configure network connectivity using Ethernet or Wi-Fi. For Wi-Fi setup, use the printer's control panel to connect to your wireless network.

Your browser does not support the video tag.

Video: This video demonstrates the ink refilling process, wireless printing functionality, and USB connectivity for PC usage with the Brother HL-T4000DW printer.

3. OPERATING INSTRUCTIONS

3.1 Basic Printing

To print a document, select the Brother HL-T4000DW from your application's print dialog. Adjust settings such as paper size (including A3), print quality, and number of copies. The printer supports both color and monochrome printing.

3.2 Automatic Duplex Printing

The HL-T4000DW features automatic duplex printing, allowing you to print on both sides of the paper without manual intervention. Enable this option in your printer settings before sending the print job.



Image: The Brother HL-T4000DW printer actively performing automatic duplex printing, showing paper being re-fed for the second side.

3.3 Wireless and Mobile Printing

Connect your mobile devices to the printer via Wi-Fi Direct or through your existing Wi-Fi network. Use Brother's mobile printing applications (e.g., Brother iPrint&Scan) to print documents and photos directly from your smartphone or tablet.



Image: A smartphone screen displaying a print job being sent to the Brother HL-T4000DW printer, illustrating mobile connectivity.

4. MAINTENANCE

4.1 Ink Level Monitoring and Refilling

Regularly check the ink levels through the printer's display or the printer status monitor on your computer. Refill ink tanks promptly when levels are low to prevent air from entering the ink system, which can affect print quality.

4.2 Print Head Cleaning

If print quality deteriorates (e.g., streaks, missing colors), perform a print head cleaning cycle from the printer's maintenance menu. This helps clear clogged nozzles. If necessary, perform a deeper cleaning or alignment.

4.3 General Cleaning

Wipe the exterior of the printer with a soft, lint-free cloth. Avoid using abrasive cleaners or solvents. Keep the paper path clear of any debris.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

- **Printer Not Responding:** Check power connection, USB/network cables, and ensure the printer is selected as the default printer on your computer.
- **Poor Print Quality:** Perform print head cleaning and alignment. Ensure genuine Brother inks are used and ink tanks are adequately filled.
- **Paper Jams:** Carefully remove any jammed paper following the instructions on the printer's display or in the full user guide. Ensure paper is loaded correctly and not creased.
- **Connectivity Problems:** For Wi-Fi, verify network settings and signal strength. For USB, try a different port or cable. For LAN, check the Ethernet cable connection.

For more detailed troubleshooting, refer to the comprehensive online manual available on the Brother support website.

6. SPECIFICATIONS

Feature	Specification
Model Name	HL-T4000DW
Printing Technology	Ink Tank Inkjet
Printer Output	Colour

Maximum Print Speed (Colour)	22 ppm
Maximum Print Speed (Monochrome)	22 ppm
Print Resolution	Up to 4800 x 1200 dpi
Special Feature	Auto-Duplex
Connectivity Technology	Ethernet, USB, Wi-Fi
Memory	128 MB
Maximum Sheet Capacity	250 sheets
Paper Size Support	Up to A3
Item Weight	16.1 Kilograms
Item Dimensions (D x W x H)	47.7D x 57.5W x 31H Centimeters



Image: The Brother HL-T4000DW printer with its physical dimensions (477mm D, 575mm W, 310mm H) and weight (14.94kg) clearly indicated.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Your Brother HL-T4000DW printer comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase.

7.2 Customer Support

For technical assistance, service requests, or any product-related queries, please contact Brother customer support using the details below:

Toll-Free Numbers:

1-800-222-422 (For MTNL and BSNL users)

1-800-209-8904 (For Others and all Mobiles)

Email: customercare@brother.in

Website: www.brother.in



The graphic features the text "Get in TOUCH with us" on the left and the "brother at your side" logo on the right. Below this, contact information is presented in two columns. The left column includes a phone icon next to "1-800-222-422 (For MTNL and BSNL users)" and "1-800-209-8904 (For Others and all Mobiles)". The right column includes an email icon next to "customercare@brother.in", a WhatsApp icon next to "7045 450 450", and a globe icon next to "www.brother.in". The graphic has a blue and white color scheme with a wavy bottom edge.

Get in
TOUCH
with us

brother
at your side

 **1-800-222-422**
(For MTNL and BSNL users)

1-800-209-8904
(For Others and all Mobiles)

 **customercare@brother.in**

 **7045 450 450**

 **www.brother.in**

Image: Brother customer care contact details including phone numbers, email, and website for support.