

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT N2QAYB000485 Replacement Remote Control for Panasonic Viera Televisions User Manual

USARMT N2QAYB000485

USARMT N2QAYB000485 Replacement Remote Control for Panasonic Viera Televisions User Manual

Model: N2QAYB000485 | Brand: USARMT

[Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

INTRODUCTION

This manual provides instructions for the USARMT N2QAYB000485 Replacement Remote Control, designed for use with various Panasonic Viera Television models. Please read this manual carefully before using the remote control to ensure proper operation and to maximize its lifespan.



Image 1: Front view of the USARMT N2QAYB000485 replacement remote control. This image displays the full layout of buttons, including power, input, menu, navigation, volume, channel, and number keys.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



Image 2: Back view of the remote control, illustrating the location of the battery compartment. The cover is designed to slide open for battery insertion.

2. Initial Use

This replacement remote control is pre-programmed and typically requires no additional setup or pairing for compatible Panasonic Viera Televisions. Once batteries are installed, point the remote control towards your television and begin operation.

OPERATING INSTRUCTIONS

Familiarize yourself with the functions of each button for optimal control of your Panasonic Viera Television.



Image 3: Angled view of the remote control, providing a clearer perspective of the button layout and their labels.

Button Functions:

- **POWER** (Red button): Turns the television on or off.
- **INPUT**: Cycles through available input sources (HDMI, AV, Component, etc.).
- **MENU**: Accesses the television's main menu.
- **VIERA TOOLS**: Opens the VIERA Tools menu for quick access to common functions.
- **OK** (Center button): Confirms selections within menus.
- **Navigation Arrows** (Up, Down, Left, Right): Navigates through menus and options.
- **RETURN**: Goes back to the previous menu or screen.
- **EXIT**: Closes the current menu or application.
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes the television channel.
- **MUTE**: Silences or restores the television audio.
- **NUMBER BUTTONS (0-9)**: Directly enters channel numbers.
- **LAST**: Returns to the previously viewed channel.
- **CC** (Closed Caption): Toggles closed captions on or off.

- **SAP** (Secondary Audio Program): Selects alternative audio tracks if available.
- **Link**: Activates VIERA Link functions for connected Panasonic devices.
- **SD CARD**: Accesses content from an inserted SD card (if supported by TV).
- **SUB MENU**: Accesses sub-menus or additional options.
- **FORMAT**: Changes the screen format/aspect ratio.
- **INFO**: Displays information about the current program or input.
- **FAVORITE**: Accesses favorite channels or settings.
- **Colored Buttons (R, G, B, Y)** Perform specific functions depending on the current menu or application.
- **Media Control Buttons** (Play, Pause, Stop, Fast Forward, Rewind, Skip): Controls playback of media content.

MAINTENANCE

Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.
- Ensure no liquid enters the remote control, especially around buttons or the battery compartment.

Battery Replacement

Replace batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the television's infrared sensor.
 - Confirm the remote is pointed directly at the television.
- **Specific buttons not working:**
 - This could indicate a faulty button or a specific function not supported by your TV model.
 - Try cleaning around the button in case of debris.
- **Short operating range:**
 - Replace batteries with new ones.
 - Ensure the remote's infrared emitter and the TV's sensor are clean and unobstructed.
- **Remote control is not compatible with my TV:**
 - Verify your television model is listed in the compatible models section.
 - This remote is designed for specific Panasonic Viera TV models and may not work with all Panasonic TVs or other

brands.

SPECIFICATIONS



Image 4: Close-up view of the bottom section of the remote control, clearly displaying the model number N2QAYB000485.

Feature	Detail
Model Number	N2QAYB000485
Brand	USARMT
Compatible Devices	Panasonic Viera Televisions (various models including TC-32LX24, TC-42LD24, TC-L22X2, TC-P42C2, and others listed in product description)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control

Feature	Detail
Power Source	2 x AAA Batteries (not included)
Product Dimensions	1.5 x 0.5 x 7 inches
Item Weight	3 ounces

WARRANTY AND SUPPORT

For any issues, questions, or support regarding your USARMT N2QAYB000485 replacement remote control, please contact the manufacturer or your point of purchase. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 USARMT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question