

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BRUNO](#) /

› [BRUNO Compact Hot Plate Moomin Edition User Manual BOE059-BGR](#)

## BRUNO BOE059-BGR

# BRUNO Compact Hot Plate Moomin Edition User Manual

Model: BOE059-BGR



## 1. INTRODUCTION

Thank you for purchasing the BRUNO Compact Hot Plate Moomin Edition. This appliance is designed for versatile cooking, featuring a compact size suitable for small gatherings and a charming Moomin design. It comes with three interchangeable plates: a flat plate, a takoyaki plate, and a multi-plate for mini pancakes or other creative dishes. Please read this manual thoroughly before use to ensure safe and optimal operation.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To prevent injury or damage, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## 3. PRODUCT COMPONENTS

The BRUNO Compact Hot Plate Moomin Edition includes the following parts:

**Main Unit:** The base of the hot plate with heating element and temperature control.

**Lid:** A lid with a decorative Moomin knob for cooking and keeping food warm.

**Flat Plate:** A versatile plate for grilling, stir-frying, and general cooking.

**Takoyaki Plate:** A plate with multiple hemispherical molds for making takoyaki or other spherical treats.

**Multi-Plate (Moomin Design):** A special plate with Moomin character molds for mini pancakes or other shaped foods.

**Power Cord:** Detachable power cord.

## DETAIL 商品詳細



ムーミンの  
デコレーションノブ  
ノブ(取っ手)はかわいい  
ムーミン型!!



前面のデザイン  
前面にはムーミンとミイの  
シルエットが描かれた  
イラストがデザインされています。



3枚のプレートが付属  
基本セットの平面プレート・  
たこ焼きプレートに加え、  
ミニパンケーキが焼ける  
マルチプレートが付属。

*Image: Overview of the BRUNO Compact Hot Plate Moomin Edition, showing the main unit, lid with Moomin knob, flat plate, takoyaki plate, and Moomin multi-plate.*



## © Moomin Characters ™

*Image: The three included plates: flat plate, takoyaki plate, and the Moomin-themed multi-plate.*

## 4. SETUP AND FIRST USE

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- 2. Initial Cleaning:** Before first use, wash the plates and lid with warm soapy water, rinse thoroughly, and dry completely. Wipe the main unit with a damp cloth.
- 3. Plate Installation:** Place the desired cooking plate onto the main unit. Ensure it sits securely on the heating element.
- 4. Lid Placement:** Place the lid on top of the cooking plate.
- 5. Power Connection:** Insert the power cord into the appliance's power inlet, then plug the other end into a standard 100V AC wall outlet.
- 6. Preheating:** Turn the temperature control knob to the desired setting (e.g., "MED" or "HI") and allow the hot plate to preheat for approximately 5-10 minutes. A small amount of smoke or odor may occur during initial use; this is normal.

# 1. 出しっぱなしでもカワイイ！オシャレなデザイン



© Moomin Characters™

*Image: The BRUNO Compact Hot Plate Moomin Edition main unit with the lid attached, showing the temperature control knob.*

## 5. OPERATING INSTRUCTIONS

### Temperature Control

The hot plate features a temperature control knob with the following settings:

- **OFF:** Turns the appliance off.
- **WARM:** Keeps food warm at a low temperature.
- **LOW:** Suitable for gentle cooking or simmering.
- **MED:** Ideal for general cooking, frying, and grilling.
- **HI:** For high-heat cooking, searing, or rapid heating.

Adjust the knob to the desired temperature setting based on your recipe. The indicator light will illuminate when the heating element is active and turn off when the set temperature is reached.

## Using the Plates

Ensure the hot plate is preheated before adding food for best results.

- **Flat Plate:** Use for grilling meats, vegetables, pancakes, or stir-frying. Lightly oil the surface if needed.
- **Takoyaki Plate:** Fill the molds with takoyaki batter and ingredients. Use a pick or skewer to turn the takoyaki as they cook.
- **Multi-Plate (Moomin Design):** Pour pancake batter or other mixtures into the Moomin-shaped molds. Cook until golden brown.



© Moomin Characters™

*Image: The Moomin multi-plate, featuring distinct Moomin character designs in each mold, suitable for mini pancakes or other shaped foods.*

## 5. 前菜からデザートまでこれ1台でどんなメニューもOK



※料理の写真は通常のコンパクトホットプレートのレッドです。



本体  
(※付属品含む)

+



平面プレート  
たこ焼きプレート  
マルチプレート

Image: Examples of dishes that can be prepared with the BRUNO Compact Hot Plate, demonstrating its versatility for appetizers to desserts.

## 6. CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your hot plate.

- Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
- Cleaning Plates and Lid:** The cooking plates and lid are removable and can be washed with warm soapy water. Use a soft sponge to avoid scratching the non-stick coating. Rinse thoroughly and dry completely before storing or re-using. Do not use abrasive cleaners or metal scouring pads.
- Cleaning Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid. Ensure no water enters the electrical components.
- Storage:** Store the hot plate and its accessories in a clean, dry place.

## 7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; temperature knob set to OFF.	Ensure power cord is securely plugged into both the appliance and a working outlet. Turn temperature knob to a heating setting (WARM, LOW, MED, HI).
Food cooks unevenly.	Plate not properly seated; insufficient preheating; uneven food distribution.	Ensure the cooking plate is correctly installed. Allow sufficient preheating time. Distribute food evenly on the plate.
Smoke or odor during first use.	Residual manufacturing oils burning off.	This is normal for initial use. Ensure good ventilation. It should dissipate after a few minutes.
Food sticks to the plate.	Insufficient oil; plate not clean; temperature too high.	Lightly oil the plate before cooking. Ensure plates are clean. Adjust temperature to a lower setting if food is burning.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	BOE059-BGR
Brand	BRUNO
Power Consumption	1200 W
Voltage	100 V
Dimensions (W x D x H)	37.5 cm x 23.5 cm x 17.5 cm
Product Weight	4.35 kg
Material	Stainless Steel (main body), Non-stick coated plates
Included Components	Main unit, Lid, Flat plate, Takoyaki plate, Multi-plate
Features	Temperature control

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official BRUNO website. Keep your purchase receipt as proof of purchase for warranty claims.  
For further assistance, please contact BRUNO customer service.

