

[Manuals.plus](#) /

› [SVAVO](#) /

› [SVAVO V-880D Automatic LCD Fragrance Dispenser Instruction Manual](#)

## SVAVO V-880D

# SVAVO V-880D Automatic LCD Fragrance Dispenser

## INSTRUCTION MANUAL

### Product Overview

The SVAVO V-880D Automatic LCD Fragrance Dispenser is designed to automatically release fragrance into your environment. It features a programmable LCD display for setting spray frequency, working modes, and times. This dispenser can be either wall-mounted or used as a free-standing unit.



Image: The SVAVO V-880D Automatic LCD Fragrance Dispenser in grey, showing its front panel and a digital display.

Key features include:

- Programmable spray frequency (1 to 60 minutes interval).
- Three working modes: Monday-Friday, Monday-Saturday, and Monday-Sunday.
- Adjustable working period (e.g., 8:00 am to 6:00 pm).
- LCD display for easy setting and monitoring.
- Battery-operated (2 x AA batteries, not included) with low battery indicator.
- Versatile installation: wall-mounted or free-standing.

## Setup

### 1. Battery Installation

1. Press the top button on the dispenser to open the front cover.
2. Insert two AA batteries (not included) into the battery compartment, ensuring correct polarity (+/-).

3. Press the RESET button to clear any previous settings and return to factory defaults.

Your browser does not support the video tag.

Video: Demonstrates battery installation and initial reset of the dispenser. (Starts at 0:03)

## 2. Refill Can Installation

1. Ensure the internal lever is pushed up.
2. Insert a standard air freshener refill can (not included) into the dispenser, aligning the nozzle with the spray mechanism.
3. Close the front cover securely.

Your browser does not support the video tag.


Video: Shows the correct installation of the refill can into the dispenser. (Starts at 1:13)


## 3. Mounting Options


The dispenser offers two installation methods:

- **Wall-Mounted:** Use the included screws to mount the dispenser at your desired height, typically 7-9 feet above the floor.
- **Free-Standing:** Place the dispenser on a flat surface such as a desk or table.

# SVAVO









✓

**PROGRAMMABLE  
(Cost Saving)**



✓


**≤1 Can of Fragrance  
/Month (at least 1  
Spray/Day)**




✓

**Energy Saving**


# OTHER BRANDS






✗

**STIFF SETTINGS  
(Money Eater)**



✗

**≥3 Can of Fragrance/  
Month (at least 36  
Sprays/Day)**

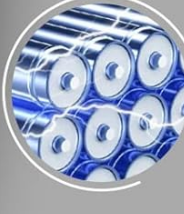

✗

**Battery Eater**

Image: Illustrates the two ways to use the dispenser: free-standing on a surface or mounted on a wall.

## Operating Instructions

The dispenser's LCD screen and buttons allow for precise control over its operation.

### 1. Power On/Off

Press the **POWER** button to turn the unit on or off. The LCD screen will activate when powered on.

Your browser does not support the video tag.

Video: Demonstrates pressing the POWER button to turn the dispenser on and off. (Starts at 0:13)

### 2. Entering Parameter Setting State

Press and hold the **MODE** button for 3 seconds to enter the parameter setting state. The display will show '0:00' for setting the start time.

Your browser does not support the video tag.">

Video: Shows how to enter the parameter setting state by holding the MODE button. (Starts at 0:15)

### 3. Setting Spray Start Time

While in the parameter setting state (displaying '0:00'), use the **HOUR** button for hours and **MIN** button for minutes to set the desired spray start time. Short presses adjust slowly, long presses adjust quickly.

Your browser does not support the video tag.

Video: Demonstrates setting the spray start time using the HOUR and MIN buttons. (Starts at 0:20)

### 4. Setting Spray Stop Time

After setting the start time, press the **MODE** button again. The display will show '0:00' for setting the spray stop time. Use the **HOUR** and **MIN** buttons to set the desired stop time.

Your browser does not support the video tag.

Video: Illustrates setting the spray stop time after the start time. (Starts at 0:30)

### 5. Setting Spray Interval Time

Press the **MODE** button. The display will show the current spray count, then press **MODE** again to set the interval time. Use the **MIN** button to set the interval between sprays, from 1 to 60 minutes.

Your browser does not support the video tag.">

Video: Shows how to set the spray interval time in minutes. (Starts at 0:41)

### 6. Setting Working Days

Press the **MODE** button. The display will show the working day selection. Press the **WEEK** button to cycle through three modes:

- 1.2.3.4.5 (Monday to Friday only)
- 1.2.3.4.5.6 (Monday to Saturday only)
- 1.2.3.4.5.6.7 (Monday to Sunday)

Your browser does not support the video tag.

Video: Demonstrates selecting the desired working days for the dispenser. (Starts at 0:49)

### 7. Setting Current Time and Week

Press the **MODE** button to set the current clock time. Use the **HOUR** and **MIN** buttons to set the current hour and minute. Then, press the **WEEK** button to set the current day of the week (1 for Monday, 7 for Sunday).

Your browser does not support the video tag.">

Video: Guides through setting the current time and day of the week. (Starts at 0:55)

### 8. Exiting Setup Mode

Press the **MODE** button to exit the setup mode quickly, or wait for 5 seconds without any button operation for the settings to be saved automatically.

Your browser does not support the video tag.">

Video: Shows how to exit the setup mode. (Starts at 1:09)

### 9. Spray Test

To perform a manual spray test, press the **SPRAY** button. **Warning: Do not place the spray nozzle in front of your face during the test.**

Your browser does not support the video tag.">

Video: Demonstrates performing a spray test. (Starts at 1:21)

## Maintenance

---

### 1. Battery Replacement

When the low battery icon appears on the LCD screen, it indicates that the batteries need to be replaced. The dispenser requires 2 AA batteries. Ensure to replace both batteries at the same time for optimal performance. Avoid using rechargeable batteries as their voltage may be insufficient for consistent operation.

### 2. Refill Can Replacement

Replace the fragrance refill can when it is empty. Follow the installation steps outlined in the Setup section.

### 3. Cleaning

Wipe the exterior of the dispenser with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.

## Troubleshooting

---

- **Dispenser not spraying:**
  - Check if batteries are installed correctly and have sufficient power. Replace if necessary.
  - Ensure the refill can is properly seated and the nozzle is aligned with the spray mechanism.
  - Verify that the start time, stop time, and working days are set correctly.
- **Weak spray or no fragrance:**
  - The refill can may be empty or nearly empty. Replace with a new can.
  - Ensure the spray nozzle is not obstructed.
- **Settings not saving:**
  - Ensure you exit the setup mode by pressing the MODE button or waiting for 5 seconds after making changes.
- **LCD screen blank:**
  - Check battery power. Replace batteries if the low battery icon was previously displayed or if the screen remains blank.

## Specifications

---

<b>Model Number</b>	V-880D
<b>Brand</b>	SVAVO
<b>Power Source</b>	2 x AA Batteries (not included)
<b>Item Weight</b>	1.01 pounds
<b>Package Dimensions</b>	9.84 x 3.7 x 3.62 inches
<b>Scent Duration</b>	30 Days (per can, varies with settings)
<b>Item Form</b>	Capsule (Aerosol Can)

## Warranty and Support

---

The SVAVO V-880D Automatic LCD Fragrance Dispenser is backed by a 30-day money-back guarantee and a 1-year replacement warranty. For any issues or support inquiries, please contact SVAVO customer service through the Amazon email system.

