

[manuals.plus](#) /› [Silvercrest](#) /› [SILVERCREST Compact Bluetooth Stereo System User Manual](#)

Silvercrest SILVERCREST BKS

SILVERCREST Compact Bluetooth Stereo System User Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your SILVERCREST Compact Bluetooth Stereo System. Please read this manual thoroughly before using the device to ensure proper functionality and safety.

1. SETUP

1.1 Unpacking

Carefully remove all components from the packaging. Ensure all items listed in the package contents are present.

- Compact Bluetooth Stereo System
- Remote control with batteries
- Antenna
- AUX cable



Image: Contents of the Silvercrest Compact Bluetooth Stereo System package, showing the remote control, AUX cable, and antenna.

1.2 Connecting Power

Connect the power cable to the stereo system and then to a suitable wall outlet. The system will enter standby mode.

1.3 Connecting the FM Antenna

Connect the supplied FM antenna to the FM antenna jack on the rear of the unit. Extend the antenna fully for optimal radio reception.

1.4 Initial Power On

Press the **Power** button on the unit or the remote control to turn on the system. The display will illuminate.

2. OPERATING INSTRUCTIONS

2.1 Basic Controls

The system can be operated using the controls on the front panel or the included remote control.



Image: Front view of the Silvercrest Compact Bluetooth Stereo System, showing the main unit with a CD partially inserted and the remote control positioned in front.

2.2 Mode Selection

Press the **MODE** button on the unit or remote control to switch between available modes **FM Radio**, **CD Player**, **Bluetooth**, **USB**, and **AUX IN**.

2.3 FM Radio Operation

1. Select **FM Radio** mode.
2. Use the **TUNE +/-** buttons to manually tune to a station or press and hold to auto-scan for the next available station.
3. Press **PRESET** to save or recall favorite stations.

2.4 CD Player Operation

1. Select **CD Player** mode.
2. Insert an audio CD or MP3 CD into the slot. The system will automatically begin playback.
3. Use the **PLAY/PAUSE**, **STOP**, **SKIP +/-** buttons for control.

4. The system supports random playback and repeat functions. Refer to the remote control for these specific buttons.

2.5 Bluetooth Music Streaming

1. Select **Bluetooth** mode. The display will show "PAIRING" or a similar indicator.
2. On your mobile device, enable Bluetooth and search for "SILVERCREST BKS" or similar.
3. Select the device to pair. Once connected, you can stream audio from your device to the stereo system.



Image: Silvercrest Compact Bluetooth Stereo System shown with headphones connected via the AUX cable, and the remote control placed nearby.

2.6 USB MP3 Playback

1. Insert a USB flash drive containing MP3 files into the USB 2.0 port.
2. Select **USB** mode. The system will automatically detect and begin playing MP3 files.
3. Use the **PLAY/PAUSE**, **STOP**, **SKIP +/-** buttons for control.

2.7 AUX IN Connection

1. Connect an external audio device (e.g., smartphone, tablet) to the **AUX IN** jack using the supplied AUX cable.
2. Select **AUX IN** mode.
3. Control playback from your external device.

2.8 Alarm Clock Function

The system features an alarm clock with options to wake up to radio, CD, USB/MP3, or a standard alarm sound. Consult the remote control for specific alarm setup buttons (e.g., **ALARM**, **TIMER**).

3. MAINTENANCE

3.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface.

3.2 CD Player Care

Handle CDs by their edges to avoid fingerprints and scratches. Clean CDs with a soft, lint-free cloth, wiping from the center outwards.

3.3 Storage

When not in use for extended periods, disconnect the power cable and store the unit in a cool, dry place.

4. TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
No power	Power cable not connected; power outlet not active.	Ensure power cable is securely connected. Check power outlet with another device.
No sound	Volume too low; incorrect mode selected; headphones connected.	Increase volume. Select the correct input mode (CD, Bluetooth, etc.). Disconnect headphones if not intended for use.
Bluetooth pairing fails	Device too far; Bluetooth not enabled on source; incorrect pairing procedure.	Ensure device is within range (approx. 10m). Enable Bluetooth on your device. Re-enter Bluetooth pairing mode on the stereo system and your device.
CD not playing	CD inserted incorrectly; CD is dirty or scratched; unsupported disc format.	Re-insert CD correctly. Clean CD. Ensure it is an audio CD or MP3 CD.
Poor FM reception	Antenna not extended; weak signal.	Fully extend the FM antenna. Try repositioning the antenna or the unit for better reception.

5. SPECIFICATIONS

Brand: Silvercrest

Model: SILVERCREST BKS

Power Output: 2 x 15 W

Tuner: FM

Playback Options: FM Radio, CD Player, Bluetooth Music Streaming, USB MP3 Player

Connectivity: Bluetooth, USB 2.0, AUX IN (3.5mm jack)

Compatible Devices: Bluetooth-enabled devices, devices with auxiliary output

Audio Output Mode: Stereo

Power Source: Electric cable

Approximate Dimensions (W x H x D): 37 x 12 x 17 cm