

[manuals.plus](#) /› [Armitron](#) /› [Armitron Sport Unisex Digital Chronograph Silicone Strap Watch, Model 40/8423 User Manual](#)**Armitron 40/8423**

Armitron Sport Unisex Digital Chronograph Silicone Strap Watch - Model 40/8423 User Manual

Your guide to setting up, operating, and maintaining your Armitron Sport watch.

1. INTRODUCTION

Thank you for choosing the Armitron Sport Digital Chronograph Watch, Model 40/8423. This watch is designed for active individuals, offering a range of essential features for daily use and sports activities. Please read this manual carefully to understand all functions and ensure proper use and longevity of your timepiece.

2. PRODUCT OVERVIEW

The Armitron Sport Model 40/8423 features a digital display with multiple functions, housed in a durable resin case with a comfortable silicone strap. It is designed for clear visibility and reliable performance.

Key Features:

- Digital Multifunctional Display
- Date, Chronograph, Lap Time, Alarm, Military Time, and Backlight with three-second delay
- Quartz Movement for accurate timekeeping
- Water resistant to 165 feet (50M)
- Durable Silicone Strap



Figure 2.1: Front view of the Armitron Sport Digital Chronograph Watch, Model 40/8423, in light blue with a pink bezel. The

digital display shows the time 11:37 and seconds 56, along with the day 'TH' (Thursday).



Figure 2.2: The Armitron Sport Digital Chronograph Watch worn on a wrist, showcasing its size and fit. The watch face displays 11:37 and 56 seconds.

3. SETUP INSTRUCTIONS

Before using your watch, you may need to set the time and date. Refer to the following steps:

3.1 Setting Time and Date

1. Press the **MODE** button repeatedly until the time setting mode is activated. The seconds display may flash.
2. Use the **ADJ** button to reset the seconds to zero.
3. Press the **MODE** button again to advance to the minutes setting. Use the **ADJ** button to adjust the minutes.
4. Continue pressing **MODE** to cycle through hours, month, date, and day of the week. Use the **ADJ** button to change each value.
5. Once all settings are correct, press the **START/STOP** button to exit the setting mode and return to normal time display.

Note: Some users have reported that if you do not make a change to the time, it may not proceed to the date setting. If this occurs, pretend to change the time (e.g., adjust it by one minute and then back) to enable date adjustment.

4. OPERATING INSTRUCTIONS

4.1 Using the Chronograph (Stopwatch)

1. Press the **MODE** button until the chronograph display appears (usually indicated by "00:00:00").
2. Press the **START/STOP** button to begin timing.
3. To pause the chronograph, press **START/STOP** again. Press it once more to resume.
4. To record a lap time, press the **ADJ** button while the chronograph is running. The lap time will display briefly.
5. To reset the chronograph to zero, ensure it is stopped, then press the **ADJ** button.

4.2 Setting and Using the Alarm

1. Press the **MODE** button until the alarm setting mode is displayed.
2. Use the **ADJ** button to adjust the hour.
3. Press the **MODE** button to advance to the minutes setting. Use the **ADJ** button to adjust the minutes.

4. Press the **START/STOP** button to activate or deactivate the alarm. An alarm icon will appear on the display when active.
5. Press the **MODE** button to exit the alarm setting mode.

4.3 Backlight Function

To illuminate the display in low-light conditions, press the **EL** (Electroluminescent) button. The backlight will remain on for approximately three seconds.

4.4 Military Time (24-Hour Format)

The watch supports both 12-hour and 24-hour (military) time formats. To switch between formats, navigate to the time setting mode and adjust the hour. The format will change automatically as you cycle past 12 PM or 24:00.

Your browser does not support the video tag.

Video 4.1: An overview of the Armitron Sport Digital Chronograph Watch, Model 40/8423, demonstrating its features and design. This video provides a visual guide to the watch's appearance and basic functions.

5. MAINTENANCE AND CARE

5.1 Water Resistance

Your Armitron Sport watch is water resistant to 165 feet (50M). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid pressing buttons while the watch is submerged in water to prevent water ingress.

WATER RESISTANT CHART	
	NOT WATER RESISTANT
	NOT WATER RESISTANT
	ACCIDENTAL SPLASHES WATER RESISTANT TO 30M (100FT): In general, withstands splashes or brief immersion in water, but not suitable for swimming or bathing
	WATER RESISTANT TO 50M (165FT): In general, suitable for short periods of recreational swimming, but not diving or snorkeling
	WATER RESISTANT TO 100 M (330 FT): In general, suitable for swimming and snorkeling, but not scuba diving

Figure 5.1: Water Resistance Chart. This chart illustrates different levels of water resistance for watches. For 50M (165FT) water resistance, the watch is suitable for swimming but not for diving or snorkeling.

5.2 Cleaning Your Watch

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as

these can damage the case or strap. For the silicone strap, mild soap and water can be used.

5.3 Battery Replacement

The watch requires 1 Lithium Metal battery (included). When the display dims or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance is maintained.

6. TROUBLESHOOTING

- **Difficulty Setting Time/Date:** Ensure you are in the correct setting mode. If the watch does not advance to the next setting (e.g., date after time), try making a minor adjustment to the current setting before pressing MODE again. Refer to Section 3.1.
- **Display is Dim or Blank:** This typically indicates a low battery. Replace the battery as described in Section 5.3.
- **Buttons Not Responding:** Check if the watch is in a specific mode (e.g., chronograph running) that might temporarily disable other button functions. If the issue persists, a battery replacement might be necessary, or contact support.
- **Water Inside Watch:** If water appears inside the watch, immediately stop using it and take it to a qualified technician. Water damage is not typically covered under warranty if proper water resistance guidelines were not followed.

7. SPECIFICATIONS

Feature	Detail
Model Number	40/8423
Case Diameter	43.5mm
Movement	Quartz
Water Resistance	165 feet (50M)
Strap Material	Silicone
Battery Type	1 Lithium Metal battery (included)
Department	Unisex-Adult

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Armitron watches typically come with a limited warranty covering manufacturing defects. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, technical support, or service inquiries, please visit the official Armitron website or contact their customer service department. You can find contact information on the Armitron website or in the packaging materials.

Visit the [Armitron Store on Amazon](#) for more information.

© 2026 Armitron. All rights reserved.