

## Elekpia RMT-TX102U

# Elekpia RMT-TX102U Universal Remote Control Instruction Manual

Model: RMT-TX102U

## INTRODUCTION

---

This manual provides instructions for the Elekpia RMT-TX102U universal remote control, designed for use with Sony Bravia Smart LCD LED HD TVs. This remote is a direct replacement and requires no programming or pairing for most compatible Sony TV models. Simply install batteries to begin operation.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Front view of the Elekpia RMT-TX102U remote control.

## 2. Initial Use

Once batteries are installed, the remote control is ready for immediate use with compatible Sony Bravia TVs. No programming or pairing is required.

- Point the remote control directly at your Sony TV.
- Press the **POWER** button to turn on your TV.
- Verify basic functions such as volume control and channel changing.

## OPERATING INSTRUCTIONS

The Elekpia RMT-TX102U remote control features a standard layout for easy navigation and control of your Sony TV. Below is a guide to its primary functions:





Image: Angled view of the Elekpla RMT-TX102U remote control.

Button	Function
<b>POWER</b>	Turns the TV on or off.
<b>INPUT</b>	Selects the input source (e.g., HDMI 1, AV).
<b>SYNC MENU / DIGITAL/ANALOG / ANT</b>	Accesses the Sync Menu, switches between digital/analog channels, or selects antenna input.
<b>SAIR / EXIT</b>	Exits current menu or function.
<b>Number Buttons (0-9)</b>	Direct channel selection or numerical input.
<b>PIC OFF</b>	Turns off the TV screen while audio continues.
<b>Colored Buttons (Yellow, Blue, Red, Green)</b>	Context-sensitive functions within menus or applications.
<b>NETFLIX</b>	Direct access to the Netflix application.
<b>DISPLAY</b>	Displays information about the current program or input.
<b>SLEEP</b>	Sets the sleep timer for automatic TV shutdown.
<b>WIDE</b>	Changes the screen aspect ratio.
<b>OPTIONS</b>	Accesses context-sensitive options menu.
<b>RETURN</b>	Returns to the previous screen or menu.
<b>Navigation Pad (Up, Down, Left, Right, Enter)</b>	Navigates through menus and confirms selections.
<b>HOME</b>	Accesses the TV's main home screen or smart TV interface.
<b>VOL +/-</b>	Adjusts the volume level.
<b>CH +/-</b>	Changes the TV channel.
<b>JUMP</b>	Switches between the current and previously viewed channel.
<b>MUTING</b>	Mutes or unmutes the TV audio.
<b>AUDIO</b>	Selects audio language or mode.
<b>SUBTITLE CC</b>	Activates or deactivates subtitles/closed captions.

Button	Function
<b>Media Control Buttons (PLAY, PAUSE, STOP, PREV, NEXT, REPLAY, ADVANCE)</b>	Controls media playback (e.g., on a connected USB device or streaming app).

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Confirm the remote is pointed directly at the TV.
- **Specific buttons not working:**
  - Some advanced functions may require specific TV settings or may not be supported by all Sony TV models. Refer to your TV's user manual for specific feature compatibility.
  - Clean the remote control to ensure no debris is obstructing button presses.
- **Remote works intermittently:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure there is no strong light source (like direct sunlight or bright fluorescent lights) interfering with the infrared signal.

## SPECIFICATIONS

---

Feature	Detail
<b>Brand</b>	Elekpia
<b>Model Name</b>	RMT-TX102U
<b>Connectivity Technology</b>	Infrared
<b>Compatible Devices</b>	Sony Bravia LCD LED HD TVs (e.g., KDL-32R500C, KDL-32W600D, KDL-40R510C, KDL-40R550C, KDL-40W650D, KDL-48R510C, KDL-48R550C, KDL-48W650D)

<b>Feature</b>	<b>Detail</b>
<b>Special Feature</b>	No Programming Required, Universal
<b>Max Number of Supported Devices</b>	1
<b>Color</b>	Black
<b>Button Quantity</b>	25
<b>Maximum Range</b>	10 Meters (33 feet)
<b>Battery Type</b>	2 x AAA (not included)

## **WARRANTY AND SUPPORT**

---

For warranty information or technical support, please refer to the seller's contact information or the product packaging. Keep your purchase receipt for warranty claims.