

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ckpsms](#) /

› [Instruction Manual: CKPSMS Plastic Slide Plate Bobbin Cover](#)

ckpsms 825018013

Instruction Manual: CKPSMS Plastic Slide Plate Bobbin Cover

Model: #825018013

1. PRODUCT OVERVIEW

This manual provides instructions for the CKPSMS #825018013 Plastic Slide Plate Bobbin Cover. This high-quality plastic component is designed to securely cover the bobbin area of your sewing machine, protecting the bobbin and thread from dust and debris while ensuring smooth operation. It is supplied as a set of two pieces.



Figure 1: Two CKPSMS #825018013 Plastic Slide Plate Bobbin Covers.

2. COMPATIBILITY

The #825018013 Plastic Slide Plate Bobbin Cover is compatible with a wide range of sewing machine models from various brands, including:

- **Elna Sewing Machine Models:** 3002, 3003, 3004, 3005, 3006, 3007

- **Janome (Newhome) Sewing Machine Models:** 18W My Excel, 3022, 3023, 3123, 3015, 3018, 2536, 660 Jem Gold, CE2200, CM2200, MC200E, MC300E, MC5000, MC5700, MC7000, MC7500, MC8000, ML3023, MS3015, MW3018 (MyExcel 18W), MX3123, Schoolmate S-3015, MS2522, MS22, 659, 5024, 5018, XC33, 1220, 660, 9500, 9700
- **Kenmore Sewing Machine Models:** 385.17124, 385.17126, 385.17526, 385.17822, 385.17826, 385.17828, 385.17922, 385.17928, 385.18230, 385.18830, 385.18836, 385.19000, 385.19150, 385.19153, 385.19157
- **Viking Sewing Machine Models:** 116 Emerald, 118 Emerald

3. INSTALLATION AND USAGE

The bobbin cover is a simple component designed for easy installation and removal. It is crucial to ensure your sewing machine is turned off and unplugged before attempting any installation or maintenance.

1. **Preparation:** Turn off and unplug your sewing machine from the power outlet.
2. **Remove Old Cover (if applicable):** Gently slide or lift the existing bobbin cover to remove it. Note its orientation.
3. **Install New Cover:** Align the new plastic slide plate bobbin cover with the opening over the bobbin case. Ensure it sits flush and slides smoothly into place. The cover should fit snugly to prevent movement during operation.
4. **Verify Fit:** Once installed, gently try to move the cover to ensure it is properly seated and secure.



Figure 2: Dimensions of the #825018013 Bobbin Cover (approximately 43mm x 36.5mm).

4. CARE AND MAINTENANCE

To ensure the longevity and proper function of your bobbin cover and sewing machine, regular cleaning is recommended. Use a soft, dry cloth to wipe away any lint or dust that accumulates on the cover and in the bobbin area. Avoid using harsh chemicals or abrasive materials, as these can damage the plastic.

5. SAFETY INFORMATION

When working with sewing machine parts and accessories, always prioritize safety. The following general safety guidelines are important:

Product safety photos and guideline

For CKPSMS brand sewing machine parts and accessories

 <p>Needle Plate: Always use the correct needle plate for your sewing machine model. Do not use a damaged or bent needle plate. When changing the needle plate, make sure the sewing machine is turned off and unplugged.</p>  <p>Presser Foot: Always use the correct presser foot for your sewing machine model. Do not use a damaged or bent presser foot. When changing the presser foot, make sure the sewing machine is turned off and unplugged.</p>  <p>Foot pedal, auto bobbin winder and any other products which are required to connect to the power:</p> <ol style="list-style-type: none"> Do not use the product when your hands are wet. If the power cord is damaged, stop using the product immediately and replace it with a new one. Always disconnect the power supply before repairing the product. Do not connect the product to a power source with a voltage that does not match. 	 <p>Bobbin Case: Always use the correct bobbin case for your sewing machine model. Do not use a damaged or bent bobbin case. When changing the bobbin case, make sure the sewing machine is turned off and unplugged.</p>  <p>Fabric cleaner:</p> <ol style="list-style-type: none"> Do not spray towards the body, face, or hands of a person. Keep out of reach of children. Do not use upside down. Do not connect to a power source with a voltage that does not match the product. Do not modify the power cord or auxiliary tools of this product by yourself.  <p>Looper, thread cutter, blades and any other products which are sharp or incisive:</p> <ol style="list-style-type: none"> Take sufficient safety precautions to prevent injury to your fingers. Before disassembling or assembling, understand the correct method and make sure to install it in the designated position. Keep it in a place where children cannot touch it. Store it in a sturdy packaging box and take measures to prevent rust and corrosion.
--	--

Figure 3: General safety guidelines for CKPSMS sewing machine parts and accessories.

- Always use the correct needle plate for your sewing machine model. Do not use a damaged or bent needle plate. When changing the needle plate, make sure the sewing machine is turned off and unplugged.
- Always use the correct bobbin case for your sewing machine model. Do not use a damaged or bent bobbin case. When changing the bobbin case, make sure the sewing machine is turned off and unplugged.
- Always use the correct presser foot for your sewing machine model. Do not use a damaged or bent presser foot. When changing the presser foot, make sure the sewing machine is turned off and unplugged.
- For fabric cleaner: Do not spray towards the body, face, or hands of a person. Keep out of reach of children. Do not use upside down. Do not connect to a power source with a voltage that does not match the product. Do not modify the power cord or auxiliary tools of this product by yourself.
- For foot pedal, auto bobbin winder, and any other products which are required to connect to the power: Do not use the product when your hands are wet. If the power cord is damaged, stop using the product immediately and replace it with a new one. Always disconnect the power supply before repairing the product. Do not connect the product to a power source with a voltage that does not match.
- For looper, thread cutter, blades, and any other products which are sharp or incisive: Take sufficient safety precautions to prevent injury to your fingers. Before disassembling or assembling, understand the correct method and make sure to install it in the designated position. Keep it in a place where children cannot touch it. Store it in a sturdy packaging box and take measures to prevent rust and corrosion.

6. SPECIFICATIONS

Feature	Detail
Part Number	#825018013
Material	High Quality Plastic
Product Dimensions	2.17 x 1.77 x 0.87 inches
Item Weight	0.64 ounces
Quantity	2 Pieces

7. PRODUCT RANGE OVERVIEW

CKPSMS offers a wide variety of sewing machine parts and accessories for both industrial and home use. Watch the video below for a brief overview of the CKPSMS product range.



Video: CKPSMS - Your Sewing Machine Online Clinic. This video provides a general overview of the various sewing machine parts and accessories offered by CKPSMS.

8. WARRANTY AND SUPPORT

For any questions regarding installation, compatibility, or product defects, please refer to the product listing on Amazon or contact CKPSMS customer support directly. Information regarding warranty and returns can typically be found on the product's purchase page or the seller's store page.

Visit the official CKPSMS store for more products and support:[CKPSMS Store](#)

© 2023 CKPSMS. All rights reserved.