

FABER 152 SRM LG A60

Faber 152 SRM LG A60 Integrated Cooker Hood User Manual

Model: 152 SRM LG A60

1. INTRODUCTION

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your Faber 152 SRM LG A60 integrated cooker hood. Please read these instructions carefully before using the appliance and retain them for future reference.

The Faber 152 SRM LG A60 is an integrated under-cabinet cooker hood designed to effectively remove cooking fumes and odors from your kitchen. It features a light gray painted metal structure, a removable grease filter, and LED lighting.

2. SAFETY INFORMATION

General Safety Warnings:

- Ensure the electrical installation complies with local regulations.
- Disconnect the appliance from the power supply before any cleaning or maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not flambé under the cooker hood.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- Regular cleaning of the grease filter is essential to prevent fire hazards.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Faber 152 SRM LG A60 Cooker Hood unit
- LED lights (pre-installed)
- Wall mounting plugs/anchors
- Adjustable corner extension (to increase depth up to 35 cm)
- Grease filter (pre-installed)

Note: The front panel of the cabinet is not included. A carbon filter for recirculating mode is not included and must be

purchased separately (Faber code 112.0157.238).

4. INSTALLATION INSTRUCTIONS

The Faber 152 SRM LG A60 cooker hood is designed for under-cabinet installation or can be wall-mounted using the provided anchors. The unit arrives configured for ducted (extraction) mode.



Image 1: Faber 152 SRM LG A60 integrated cooker hood installed.

4.1. Mounting

- The hood can be attached directly to an under-cabinet unit or fixed to a free wall using the anchors at the rear.
- Ensure adequate clearance above the cooking surface as per local safety regulations.
- The hood dimensions are approximately 60 cm wide (59.8 cm), 30 cm deep (extendable to 35 cm with the adjustable corner extension), and 15 cm high.

4.2. Ducted (Extraction) Mode

In ducted mode, cooking fumes are expelled outside through an exhaust duct. The hood is pre-configured for this mode.

- Connect the hood's air outlet (12 cm diameter) to an external ducting system.
- Ensure the ducting is properly sealed to prevent air leaks.

4.3. Recirculating (Filtering) Mode

If external ducting is not possible, the hood can operate in recirculating mode. In this mode, air is filtered and returned to the kitchen.

- An activated carbon filter (Faber code 112.0157.238) must be purchased and installed.
- Refer to the carbon filter's instructions for proper installation.
- The carbon filter removes odors and humidity from the air before it is recirculated.

5. OPERATING INSTRUCTIONS

The cooker hood is controlled via push-buttons located on the unit.

5.1. Fan Speed Control

The hood offers three fan speed settings:

- **Speed 1:** For light cooking with minimal fumes.
- **Speed 2:** For normal cooking conditions.
- **Speed 3:** For heavy cooking, frying, or when producing a large amount of steam/fumes.

Press the corresponding button to select the desired speed. Pressing the 'Off' button will turn off the fan.

5.2. Lighting Control

The hood is equipped with one LED light to illuminate the cooking area.

- Press the light button to turn the LED light on or off.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your cooker hood.

6.1. Grease Filter Cleaning

The metal grease filter captures airborne grease particles. It should be cleaned regularly to maintain efficiency and prevent fire hazards.

- **Frequency:** Depending on usage, typically every 2-4 weeks.
- **Procedure:**
 1. Disconnect the hood from the power supply.
 2. Open the front panel and remove the grease filter.
 3. Wash the filter by hand in hot soapy water or in a dishwasher (low temperature cycle).
 4. Ensure the filter is completely dry before re-installing.

6.2. Activated Carbon Filter Replacement (Recirculating Mode Only)

The activated carbon filter cannot be washed and must be replaced periodically.

- **Frequency:** Depending on usage, typically every 3-12 months.
- **Procedure:**
 1. Disconnect the hood from the power supply.
 2. Remove the old carbon filter according to its specific instructions.
 3. Install a new carbon filter (Faber code 112.0157.238).

6.3. LED Light Replacement

The hood uses a 4-watt LED light. If replacement is needed, contact qualified service personnel.

7. TROUBLESHOOTING

If you encounter issues with your cooker hood, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hood does not turn on	No power supply	Check power connection and circuit breaker.

Problem	Possible Cause	Solution
Poor suction performance	Clogged grease filter Incorrect installation (ducted/recirculating) Ducting obstruction (ducted mode)	Clean or replace grease filter. Ensure correct filter type (grease/carbon) is installed for the operating mode. Check ducting for blockages.
Excessive noise	Loose components Ducting issues Motor imbalance	Check for loose screws or parts. Ensure ducting is properly installed and not vibrating. If noise persists, contact service.
LED light not working	Faulty LED bulb Electrical connection issue	Contact qualified service personnel for replacement. Check power supply.

If the problem persists after attempting these solutions, please contact Faber customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	152 SRM LG A60
Brand	FABER
Mounting Type	Under-cabinet
Material	Painted Metal
Color	Light Gray
Dimensions (W x D x H)	59.8 cm x 30 cm (up to 35 cm with extension) x 15 cm
Weight	19 kg
Airflow Capacity	225 m³/h (max)
Fan Speeds	3
Noise Level	52-68 dB (depending on speed)
Motor Quantity	1
Control Type	Push-button
Lighting Type	LED
Lighting Wattage	4 watts
Filter Type	Metal Grease Filter (mesh type)
Ventilation Type	Ducted/Ventilated (convertible to Recirculating with carbon filter)
Air Outlet Diameter	12 cm
Voltage	220 Volts

Feature	Specification
Energy Efficiency Class	D
Country of Origin	Italy

9. WARRANTY AND SUPPORT

The Faber 152 SRM LG A60 cooker hood comes with a **2-year warranty**, which includes home assistance. For warranty claims, technical support, or service requests, please contact Faber customer service.

For information regarding returns within 30 days of receipt or for defective/damaged products, please refer to the retailer's return policy or contact their customer support directly.

© 2025 FABER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question