

ZdalaMit Replacement Remote Control for Philips Roku TV

ZdalaMit Replacement Remote Control User Manual

For Philips Roku TV Models: 50PFL4962, 50PFL4662, 43PFL4962, 55PFL5756, 40PFL4962, 40PFL4662, 40PFL4764 Series

1. INTRODUCTION

This manual provides comprehensive instructions for the ZdalaMit Replacement Remote Control, designed for seamless operation with various Philips Roku TV models. This remote control offers a direct replacement solution without the need for complex programming or pairing procedures. Simply insert batteries, and it is ready for use.

2. PRODUCT OVERVIEW



Figure 2.1: Front view of the ZdalaMit Replacement Remote Control. This image displays the primary buttons including

power, navigation, volume, channel, and dedicated streaming service buttons.

The ZdalaMit Replacement Remote Control is a compact and ergonomic device designed for intuitive control of your Philips Roku TV. It features all essential functions found on an original Roku TV remote, including power, volume, channel selection, navigation, and quick access buttons for popular streaming services.



Figure 2.2: Dimensions of the ZdalaMit Replacement Remote Control. The remote measures approximately 5.51 inches in length, 1.65 inches in width, and 0.78 inches in thickness.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote control is ready for immediate use with compatible Philips Roku TV models. No programming or pairing is required.

4. OPERATING INSTRUCTIONS

This remote control functions identically to the original remote provided with your Philips Roku TV. Point the remote directly at your television for optimal signal transmission.

4.1 Button Functions

- **Power Button ():** Turns the TV on or off.
- **Back Button (←):** Returns to the previous screen or menu.
- **Home Button (△):** Navigates to the Roku TV home screen.
- **Directional Pad (Up, Down, Left, Right):** Used for menu navigation and content selection.
- **OK Button:** Confirms selections.
- **Volume Up/Down Buttons:** Adjusts the television's volume.
- **Mute Button:** Mutes or unmutes the television's audio.
- **Instant Replay Button (⏮):** Jumps back a few seconds during video playback.
- **Sleep Timer Button ():** Accesses sleep timer settings (functionality may vary by TV model).
- **Asterisk/Options Button (*):** Opens options menu for selected content or app.
- **Rewind, Play/Pause, Fast Forward Buttons:** Controls media playback.
- **Dedicated Streaming Service Buttons (Netflix, Vudu, Hulu, Pluto):** Provides direct access to these streaming applications.



Figure 4.1: Example of the remote control being used to operate a Philips Roku TV.

5. COMPATIBILITY

This ZdalaMit Replacement Remote Control is compatible with the following Philips Roku TV models:

- 50PFL4962
- 50PFL4662
- 43PFL4962
- 43PFL4662
- 40PFL4962
- 40PFL4662
- 40PFL4764
- 50PFL4962/F7
- 50PFL4662/F7
- 43PFL4962/F7
- 43PFL4662/F7
- 40PFL4962/F7
- 40PFL4662/F7
- 40PFL4664/F7
- 43PFL5756/F7
- 55PFL5756/F7
- 43PFL5756
- 55PFL5756
- 50PFL5756

Please verify your TV model number to ensure compatibility.

6. IMPORTANT NOTES AND LIMITATIONS

- This remote control does **not** include an earphone jack.
- There is **no** dedicated pairing button on this remote, as it operates without pairing.
- This ZdalaMit replacement remote control is specifically designed for Philips Roku TVs and is **not** compatible with standalone Roku players, Roku boxes, or Roku sticks.

7. SPECIFICATIONS

Feature	Specification
Product Dimensions	6 x 1.5 x 0.6 inches (approximately 15.24 x 3.81 x 1.52 cm)
Item Weight	0.81 ounces (approximately 23 grams)
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Compatible Devices	Philips Roku Televisions
Special Feature	Pre-programmed, no setup required
Color	Black

8. TROUBLESHOOTING


- **Remote not responding:**
 - Ensure batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new 1.5V AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within a reasonable range and pointing the remote directly at the TV.
- **Specific buttons not working:**
 - Verify that the remote is compatible with your specific Philips Roku TV model (refer to Section 5).
 - Some advanced functions or specific app features might require the original TV remote or a Roku mobile app.

9. SUPPORT

If you encounter any issues or have questions regarding your ZdalaMit Replacement Remote Control that are not addressed in this manual, please contact the seller or manufacturer for assistance. We are committed to providing support for our products.

Related Documents - Replacement Remote Control for Philips Roku TV

	Philips Roku TV Quick Start Guide A quick start guide for setting up and using your Philips Roku TV, including connections, remote control functions, and initial setup instructions.
---	---

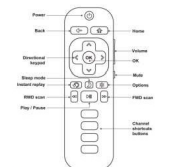

▲ Please note:

- | | | | |
|---|-------------------|---|---------------------|
| | NO voice button | | NO pairing button |
| | NO headphone jack | | NO internal battery |

This product does not have a
warning of explosive mixture.

[Roku TV Remote Control User Manual](#)

This manual provides instructions and compatibility information for a Roku TV remote control, detailing its functions, buttons, and supported TV models. It also lists incompatible Roku devices.



[GE Roku TV Replacement Remote User Manual - Model 66814](#)

User manual for the GE Roku TV Replacement Remote (Model 66814). Includes setup, button functions, programming instructions for Roku TVs and streaming players, troubleshooting, and factory reset. Features compatibility with Insignia and Sharp Roku TVs.



Roku Wireless Speakers Quick Start Guide - Setup and Tips

Get premium sound with Roku Wireless Speakers. This quick start guide provides setup instructions, tips for sound settings, voice commands, and Bluetooth pairing.



[Emerald SM-ROKU-104 Roku Replacement Remote User Guide](#)

User manual for the Emerald SM-ROKU-104 Roku Replacement Remote. Learn about button functions for TV power, mute, navigation, and quick access to streaming apps like Netflix, Hulu, YouTube, and more. Compatible with various TV brands.



Universal Replacement Remote Control for Roku Express and Premiere - User Guide

Detailed guide for the universal replacement remote control compatible with Roku Express and Premiere, explaining button functions, including channel shortcuts and limitations like no TV power or volume control.